REAR POWER WINDOW MOTOR REMOVAL/INSTALLATION


id091200001600

1. Fully lower the rear door glass.

   Caution
   - **If the rear power window motor is removed with the rear door glass fully closed, the rear door glass may fall off and be damaged.**

   Note
   - If the rear door glass cannot be fully opened by operating the power window subswitch, remove the rear power window motor while inserting your hand through the rear door speaker installation hole to support the rear door glass.


2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
3. Remove the following parts:
   (1) Power window subswitch (rear-side) (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
   (2) Rear door trim (See REAR DOOR TRIM REMOVAL/INSTALLATION.)
   (3) Rear door speaker (See REAR DOOR SPEAKER REMOVAL/INSTALLATION.)
4. Disconnect the connector.
5. Remove the bolts.
6. Remove the rear power window motor.
7. Install in the reverse order of removal. (See Rear Power Window Motor Installation Note.)

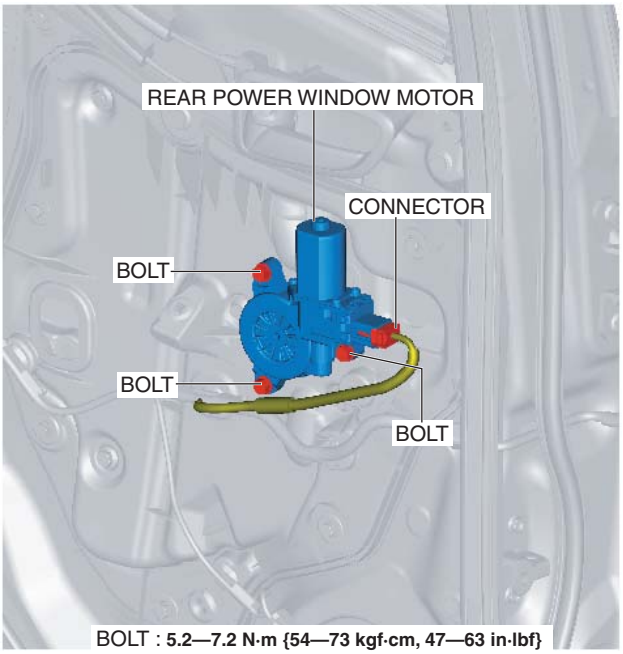

am2zzw00008042


Rear Power Window Motor Installation Note

- If the rear power window motor is installed without securing the rear power window regulator drum housing, the drum housing may detach from the rear door module panel and the rear power window motor may not install correctly. When installing the rear power window motor, insert your hand through the rear door speaker installation hole and secure the drum housing so that the clip shown in the figure does not detach.

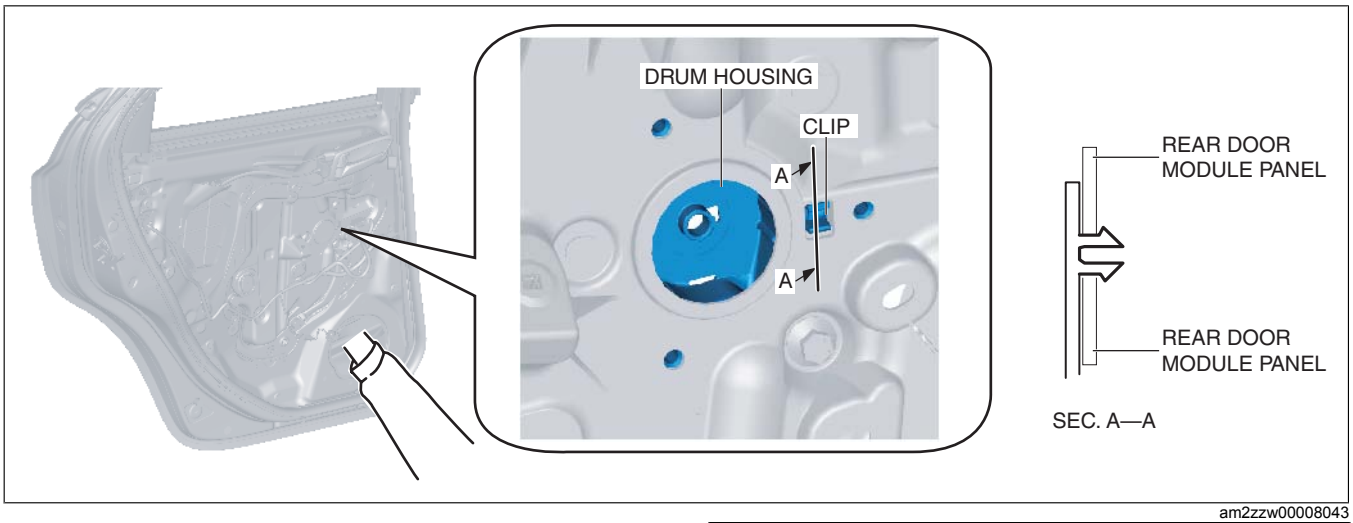

am2zzw00008043

- When installing the rear power window motor installation bolts, tighten the bolts in the order shown in the figure.

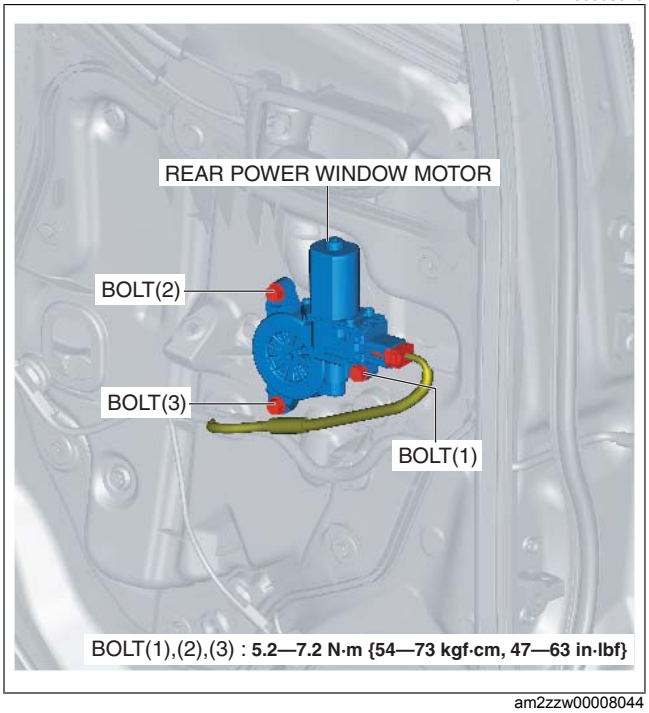

am2zzw00008044