FRONT POWER WINDOW MOTOR INSPECTION


id091200001800

Driver-side

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the power window main switch. (See POWER WINDOW MAIN SWITCH REMOVAL/ INSTALLATION.)
3. Remove the front door trim. (Driver- side) (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
4. Disconnect the front power window motor connector.
5. Apply battery positive voltage and connect the ground to front power window motor terminals E and F, and then inspect the front power window motor operation.


B+ Terminal	Ground Terminal	Operation
E	F	Close
F	E	Open

   - If the front power window motor does not operate as indicated in the table, replace it. (See FRONT POWER WINDOW MOTOR REMOVAL/INSTALLATION.)
6. Connect the front power window motor connector.
7. Connect the power window main switch connector. (See POWER WINDOW MAIN SWITCH REMOVAL/INSTALLATION.)
8. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)

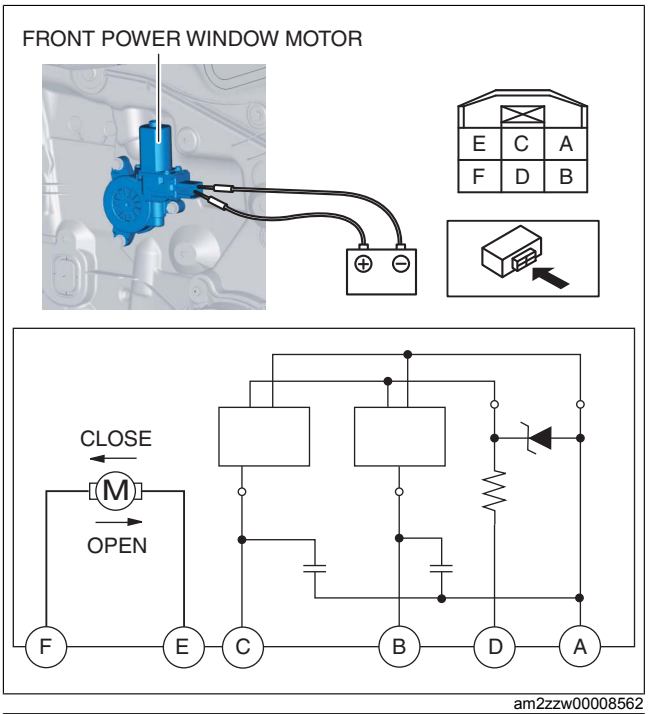

am2zzw00008562

9. Operate the front power window motor and verify the wave patterns for terminals A and B.
   - Terminal: A(+), B(+) ↔ ground (-)
   - Oscilloscope setting: 2 V/DIV (Y), 1 ms/DIV (X), DC range
   - If the malfunction, replace the front power window motor. (See FRONT POWER WINDOW MOTOR REMOVAL/INSTALLATION.)

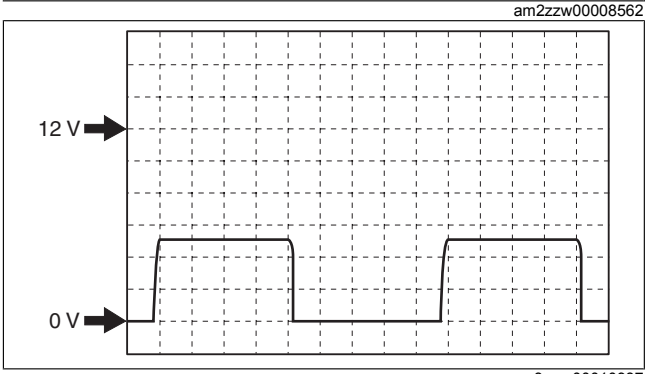


am3uuw00010937

Passenger-side

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the power window subswitch (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
3. Remove the front door trim. (Passenger- side) (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
4. Disconnect the front power window motor connector.
5. Apply battery positive voltage and connect the ground to front power window motor terminals E and F, and then inspect the front power window motor operation.

B+ Terminal	Ground Terminal	Operation
E	F	Close
F	E	Open

- If the front power window motor does not operate as indicated in the table, replace it. (See FRONT POWER WINDOW MOTOR REMOVAL/INSTALLATION.)

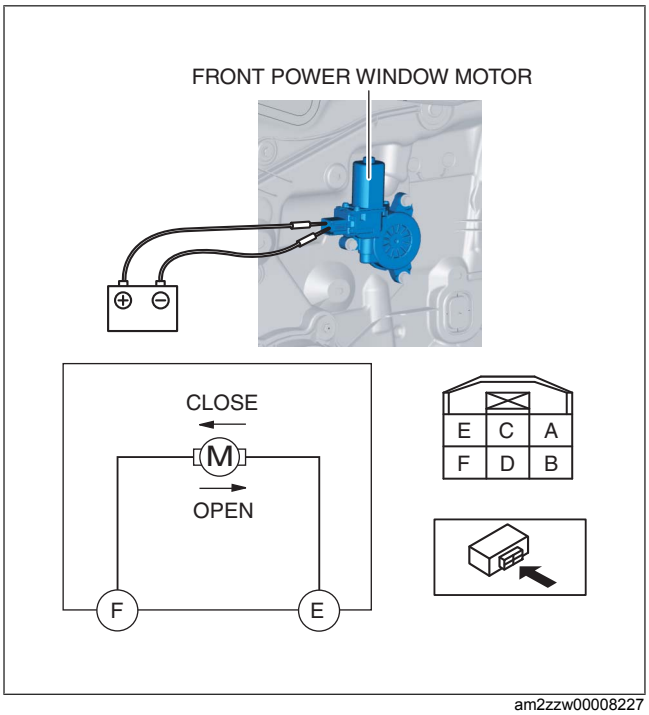

am2zzw00008227