
## REAR POWER WINDOW MOTOR INSPECTION

id091200001900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the power window subswitch. (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
3. Remove the rear door trim. (See REAR DOOR TRIM REMOVAL/INSTALLATION.)
4. Disconnect the front power window motor connector.
5. Apply battery positive voltage and connect the ground to front power window motor terminals E and F, and then inspect the front power window motor operation.

| B+ Terminal | Ground Terminal | Operation |
|---|---|---|
| E | F | Close |
| F | E | Open |

- If the rear power window motor does not operate as indicated in the table, replace it. (See REAR POWER WINDOW MOTOR REMOVAL/ INSTALLATION.)

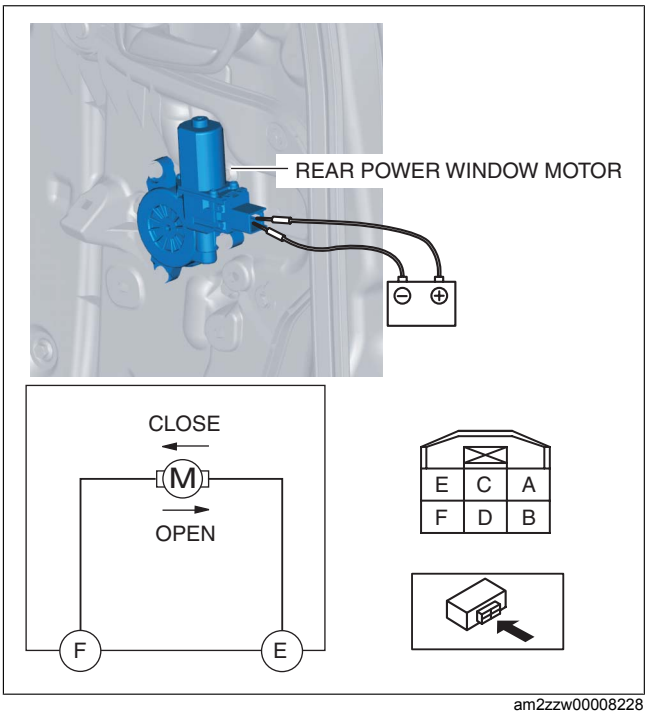


am2zzw00008228