POWER WINDOW SUBSWITCH INSPECTION


id091200002300

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the power window subswitch. (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
3. Verify that the continuity is as indicated in the table using a tester.

○—○ : CONTINUITY

SWITCH POSITION	TERMINAL				
	A	B	C	D	E
CLOSE	○—○		○—○		
OFF	○—○			○—○	
OPEN	○		○	○—○	

am2zzw00007804

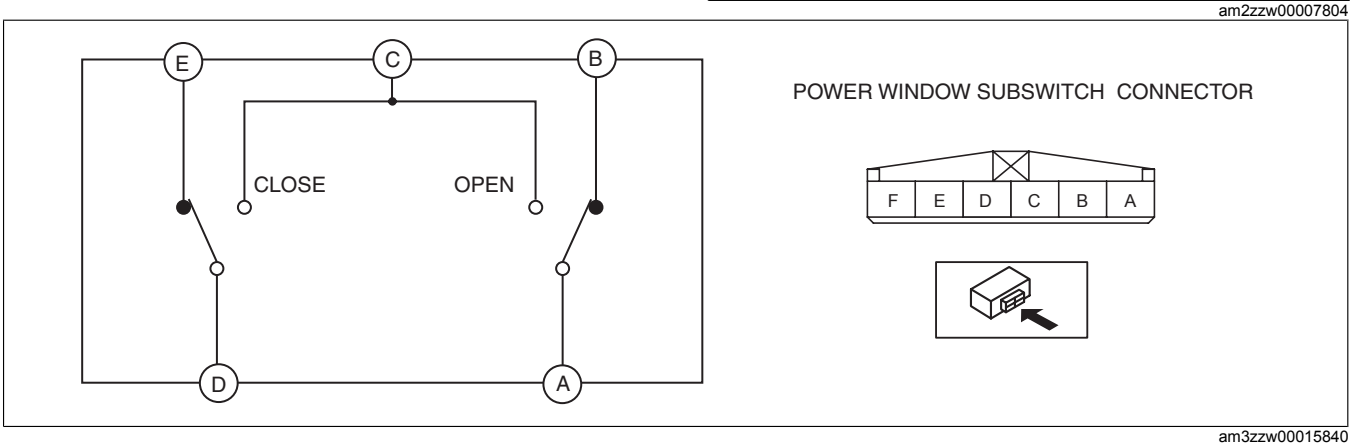

am3zzw00015840

- If not as indicated in the table, replace the power window subswitch. (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)