
POWER OUTER MIRROR INSPECTION

id091200002700

Mirror Glass Adjustment

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Power window main switch (Driver-side) (See POWER WINDOW MAIN SWITCH REMOVAL/INSTALLATION.)
   (2) Power window subswitch (Passenger-side) (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
   (3) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
   (4) Front door speaker (See FRONT DOOR SPEAKER REMOVAL/INSTALLATION.)
   (5) Power outer mirror (See POWER OUTER MIRROR REMOVAL/INSTALLATION.)
3. Apply battery positive voltage and connect the ground to the power outer mirror terminals and inspect the power outer mirror operation.

B+ terminal	Ground terminal	Operation
C	F	Up
F	C	Down
I	F	Left
F	I	Right

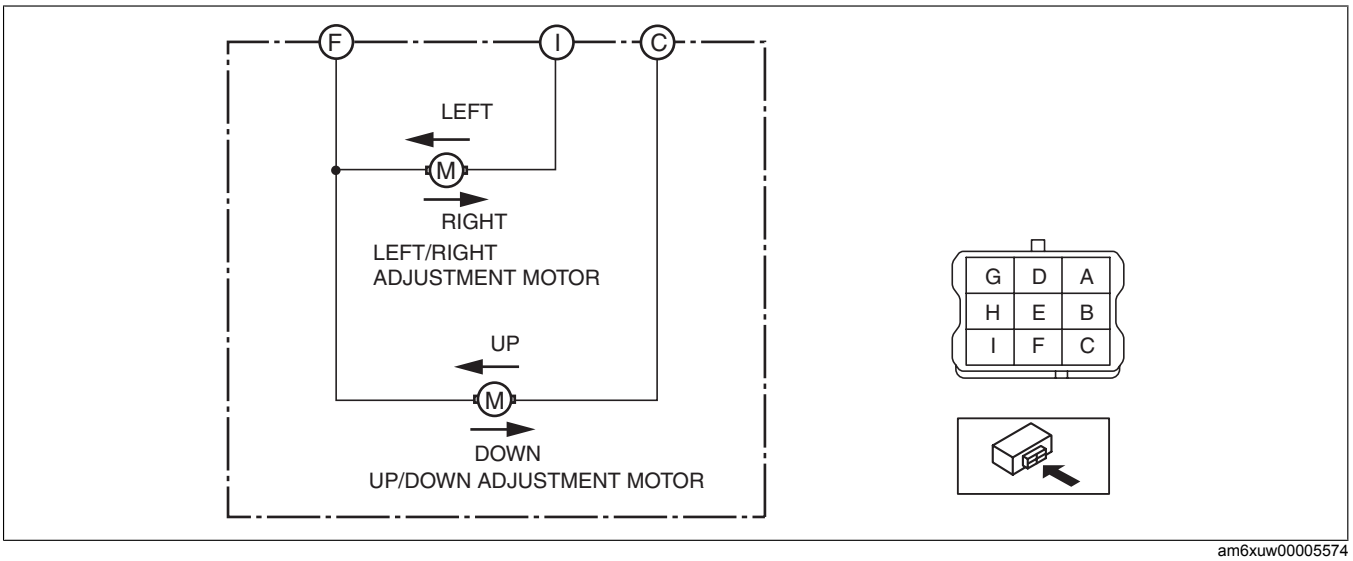

am6xuw00005574

- If the power outer mirror does not operate as indicated in the table, replace the power outer mirror. (See POWER OUTER MIRROR REMOVAL/INSTALLATION.)

Heated Outer Mirror Inspection


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Power window main switch (Driver-side) (See POWER WINDOW MAIN SWITCH REMOVAL/INSTALLATION.)
   (2) Power window subswitch (Passenger-side) (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
   (3) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
   (4) Outer mirror glass (See OUTER MIRROR GLASS REMOVAL.) (See OUTER MIRROR GLASS INSTALLATION.)

3. Verify that the continuity between heated outer mirror connector terminals is as indicated in the table.

: CONTINUITY

TEST CONDITION	TERMINAL			
	A	G	J	K
UNDER ANY CONDITION	○			○
		○	○	

am2zzw00007805

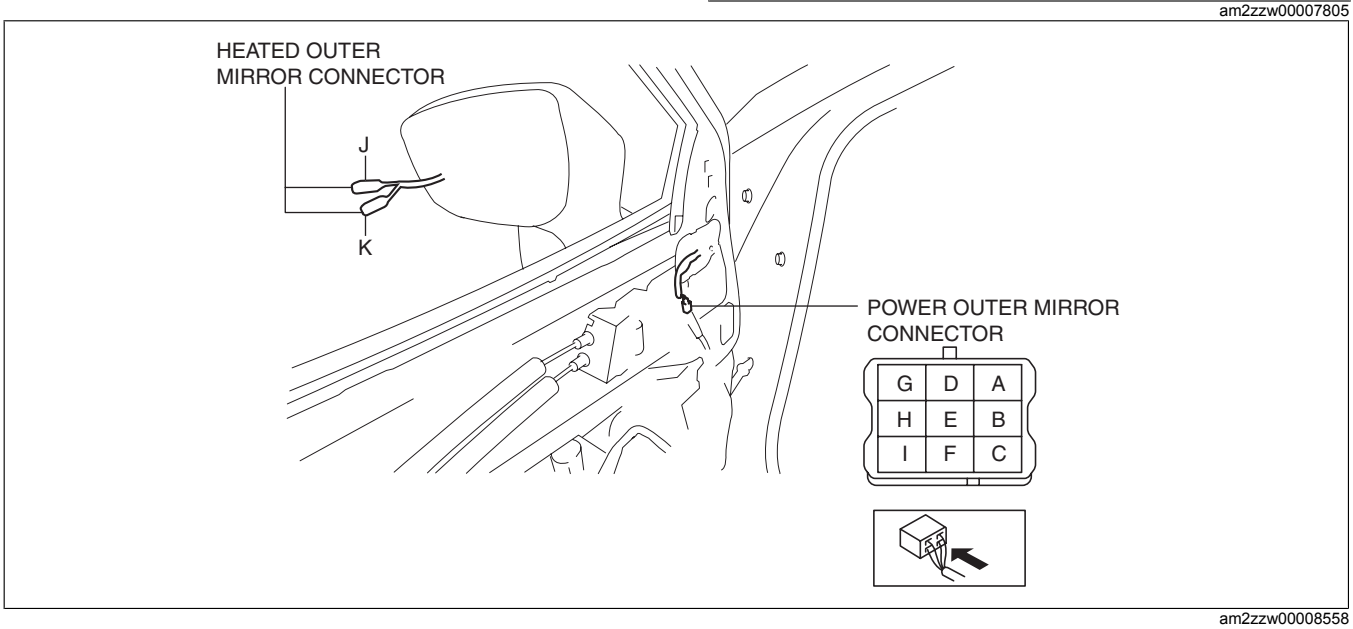

am2zzw00008558

- If not as indicated in the table, replace the power outer mirror. (See POWER OUTER MIRROR REMOVAL/ INSTALLATION.)


Blind Spot Monitoring (BSM) Warning Light Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Power window main switch (Driver-side) (See POWER WINDOW MAIN SWITCH REMOVAL/ INSTALLATION.)
   (2) Power window subswitch (Passenger-side) (See POWER WINDOW SUBSWITCH REMOVAL/ INSTALLATION.)
   (3) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
   (4) Outer mirror glass (See OUTER MIRROR GLASS REMOVAL.) (See OUTER MIRROR GLASS INSTALLATION.)
3. Verify that the continuity between blind spot monitoring (BSM) warning light connector terminals is as indicated in the table.

: CONTINUITY

TEST CONDITION	TERMINAL			
	D	G	A	B
UNDER ANY CONDITION	○		○	
		○		○

am2zzw00007806

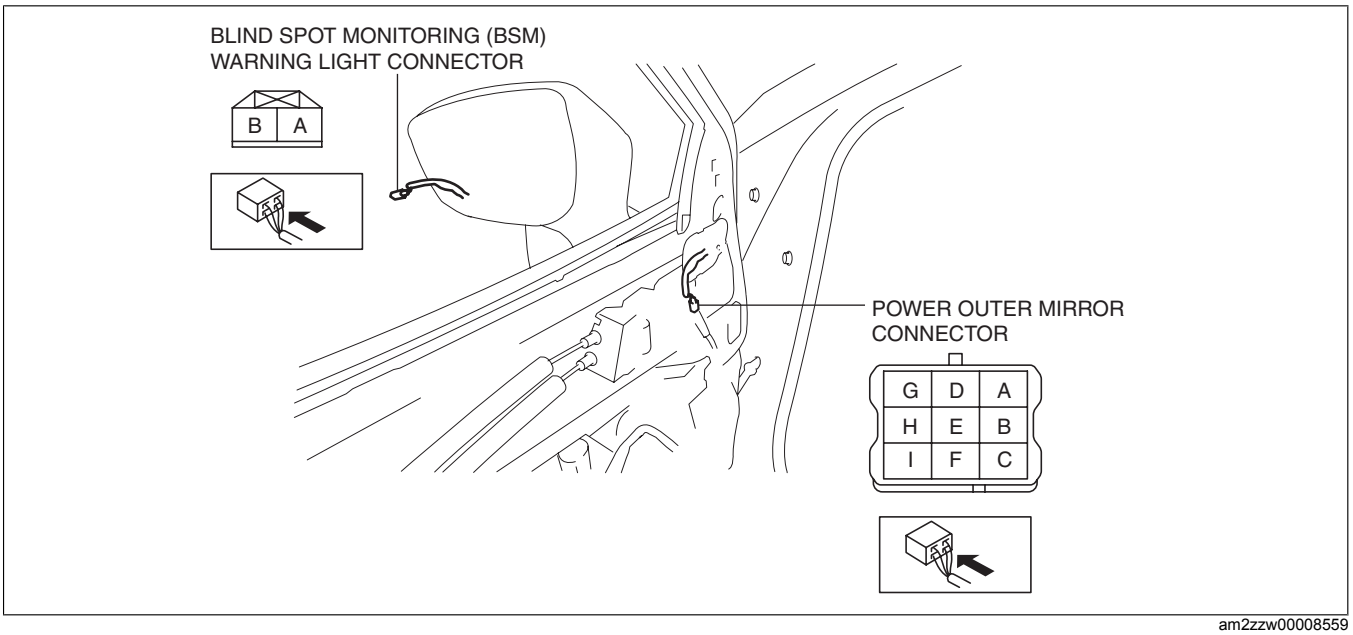

am2zzw00008559

- If not as indicated in the table, replace the power outer mirror. (See POWER OUTER MIRROR REMOVAL/INSTALLATION.)