OUTER MIRROR GLASS INSPECTION


id091200010400

Heated Outer Mirror Inspection (With Heated Outer Mirror)

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the outer mirror glass. (See OUTER MIRROR GLASS REMOVAL.) (See OUTER MIRROR GLASS INSTALLATION.)
3. Inspect the resistance between outer mirror glass terminals.

Outer mirror glass resistance (standard)
9.0—13.5 ohms


- If not within the specification, replace the outer mirror glass. (See OUTER MIRROR GLASS REMOVAL.) (See OUTER MIRROR GLASS INSTALLATION.)

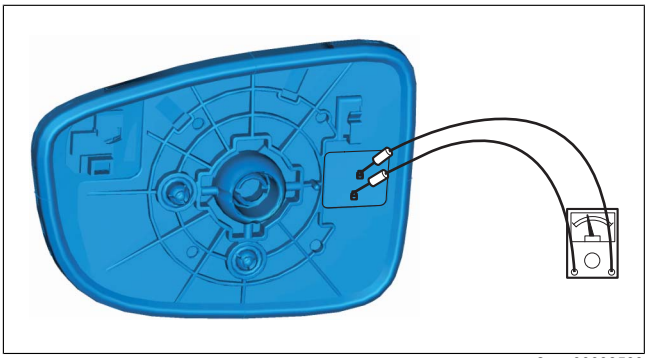

am2zzw00008560


Blind Spot Monitoring (BSM) Warning Light (With Blind Spot Monitoring (BSM) System)

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the outer mirror glass. (See OUTER MIRROR GLASS REMOVAL.) (See OUTER MIRROR GLASS INSTALLATION.)
3. Prepare four dry cell batteries (**1.5 V**).
4. Connect the four dry cell batteries.

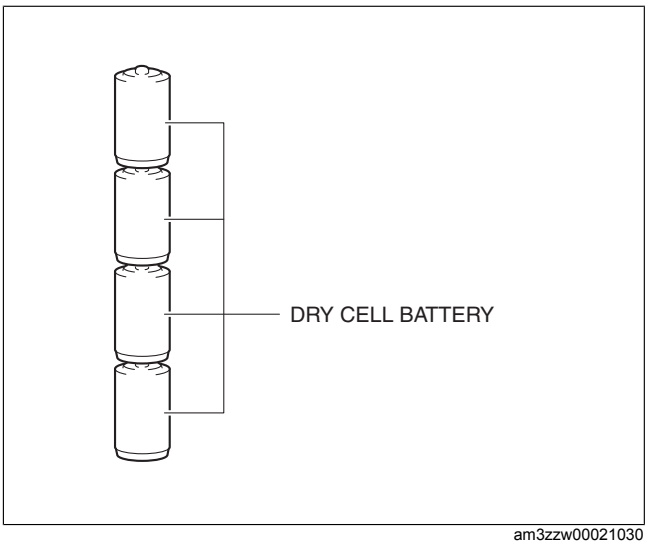

am3zzw00021030

5. Connect the positive pole of the dry cell battery to outer mirror glass terminal B, and the negative pole to terminal A.

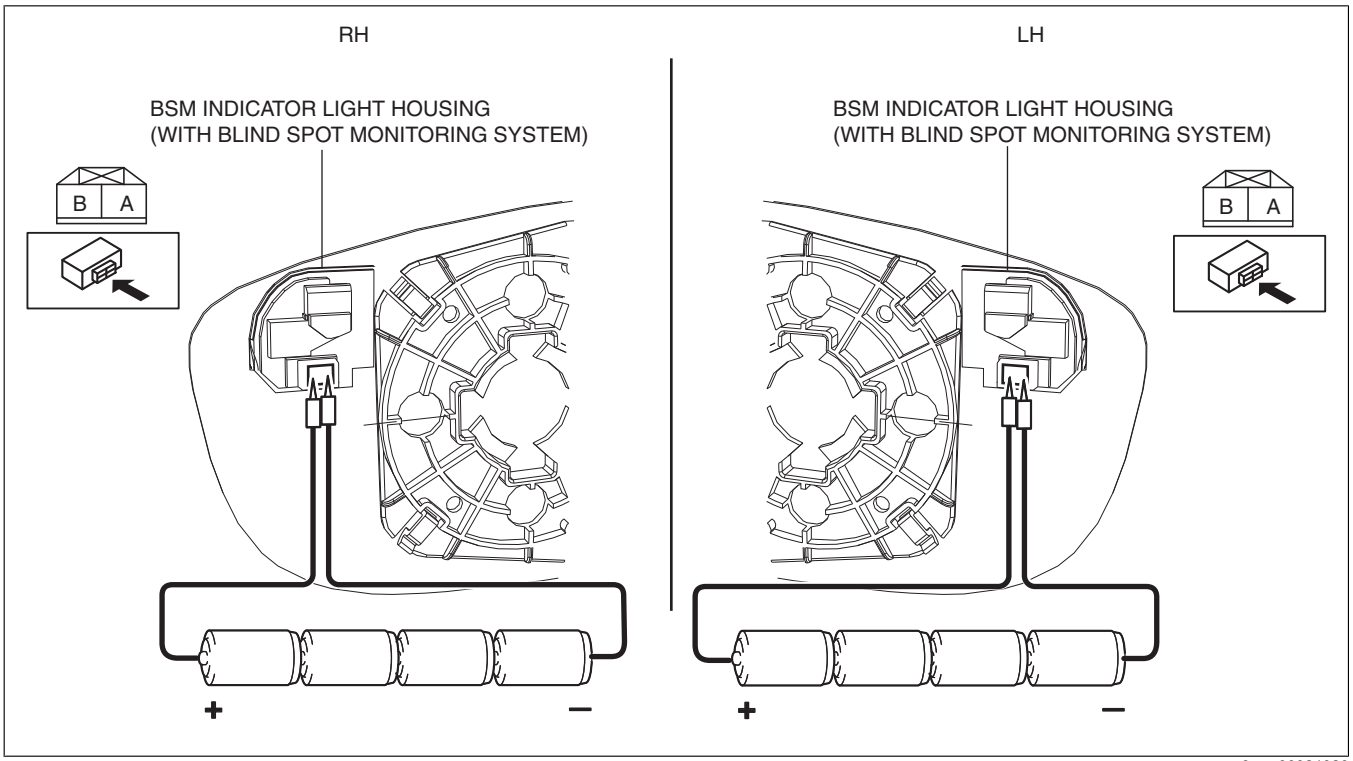

am3zzw00021029

- If the BSM indicator light does not illuminate, replace the outer mirror glass. (See OUTER MIRROR GLASS REMOVAL.) (See OUTER MIRROR GLASS INSTALLATION.)