POWER OUTER MIRROR SYSTEM

id091200013500

Outline

- Driver can operate the outer mirror remotely using the power outer mirror switch.

Function


Outer mirror glass adjustment function

- Outer mirror glass can be adjusted up/down and left/right electrically by operating the power outer mirror switch.

IG OFF timer function

- The power outer mirror switch can be operated for **approx. 40 s** after the ignition is switched from ON (engine off or on) to OFF.


Structural View

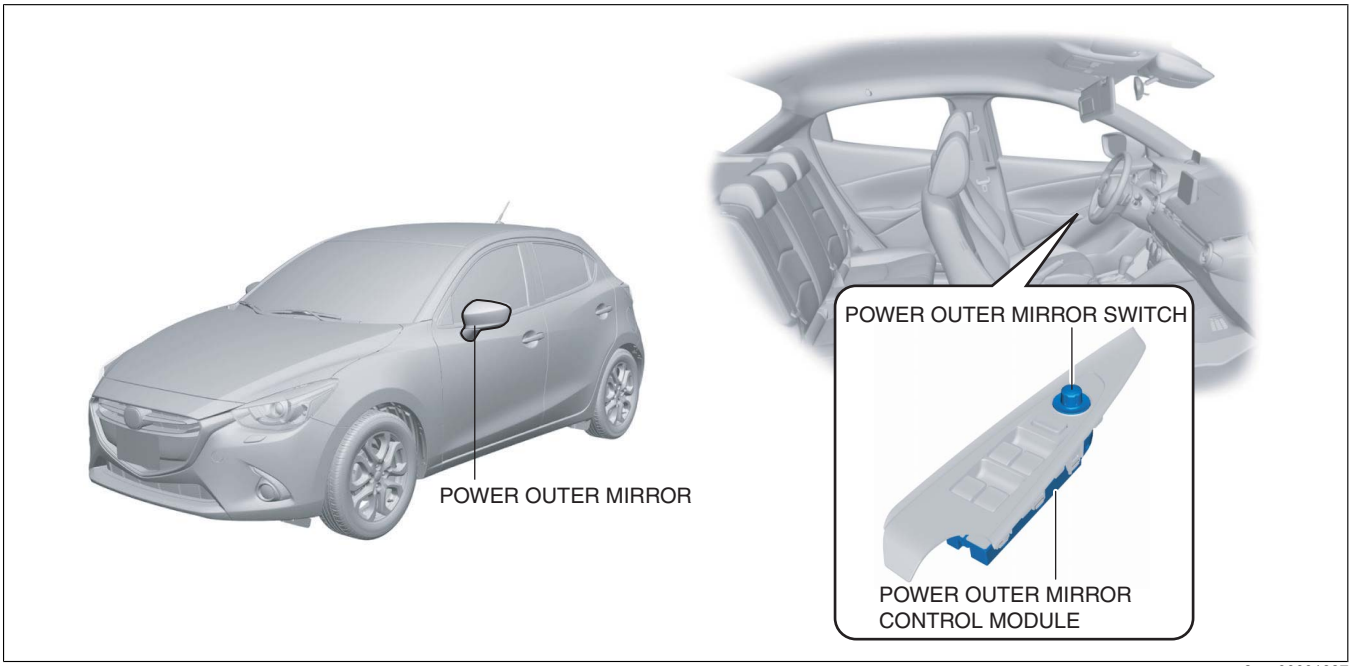

am2zzn00001987


System Wiring Diagram

With retractable outer mirror

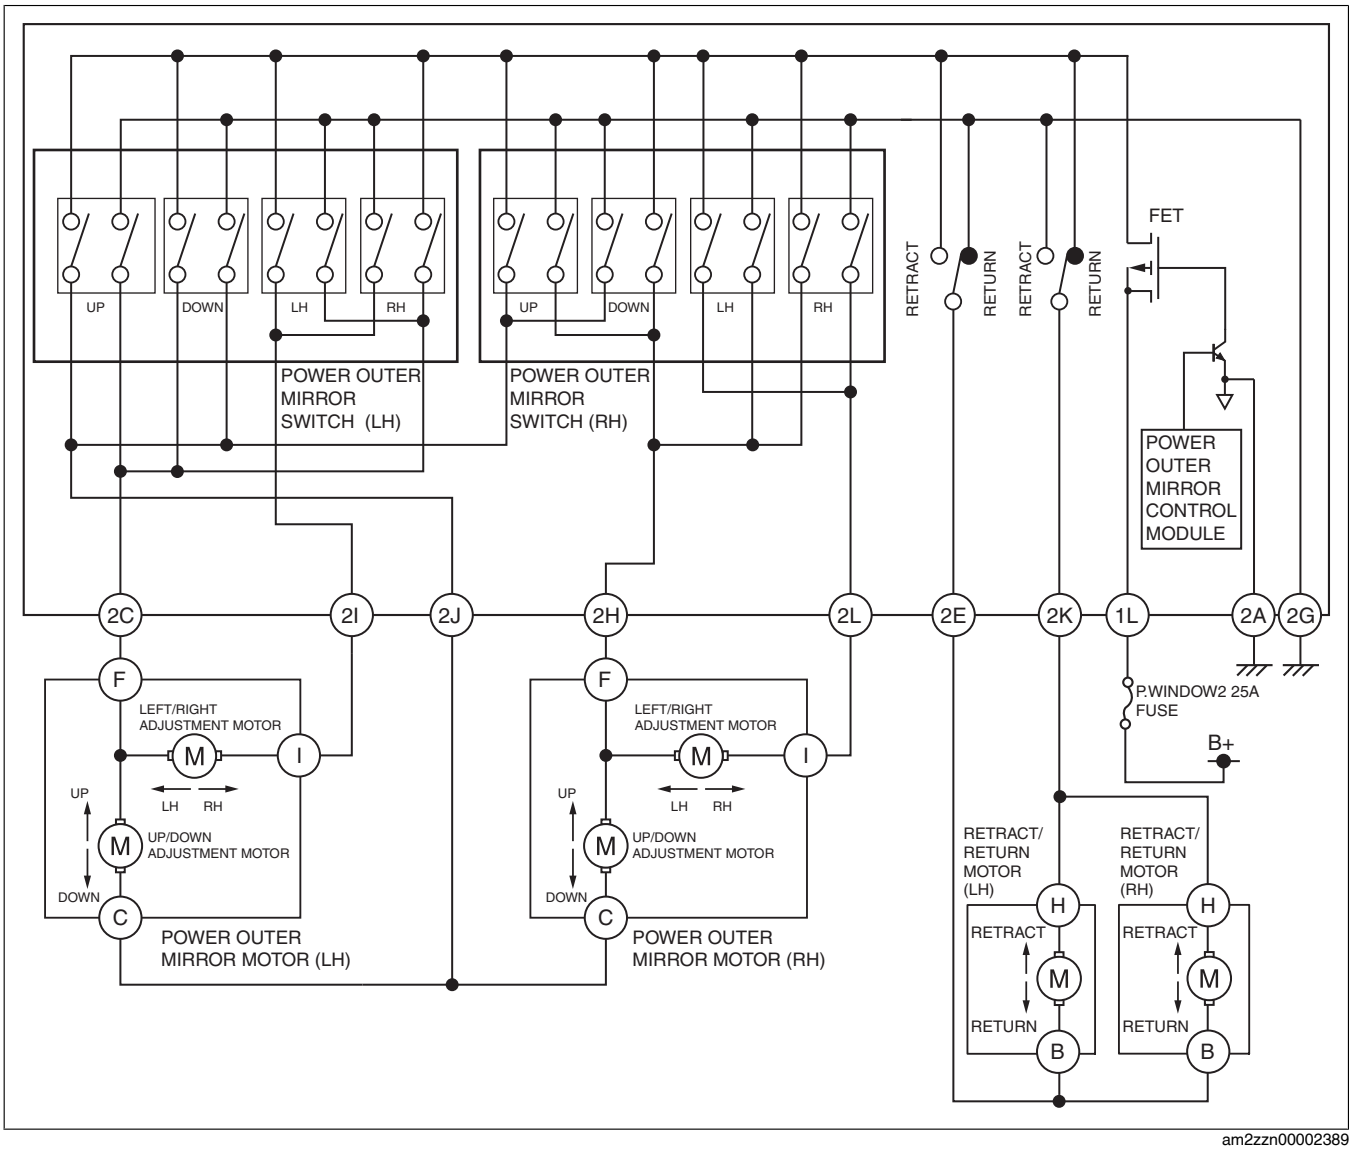

am2zzn00002389

Without retractable outer mirror

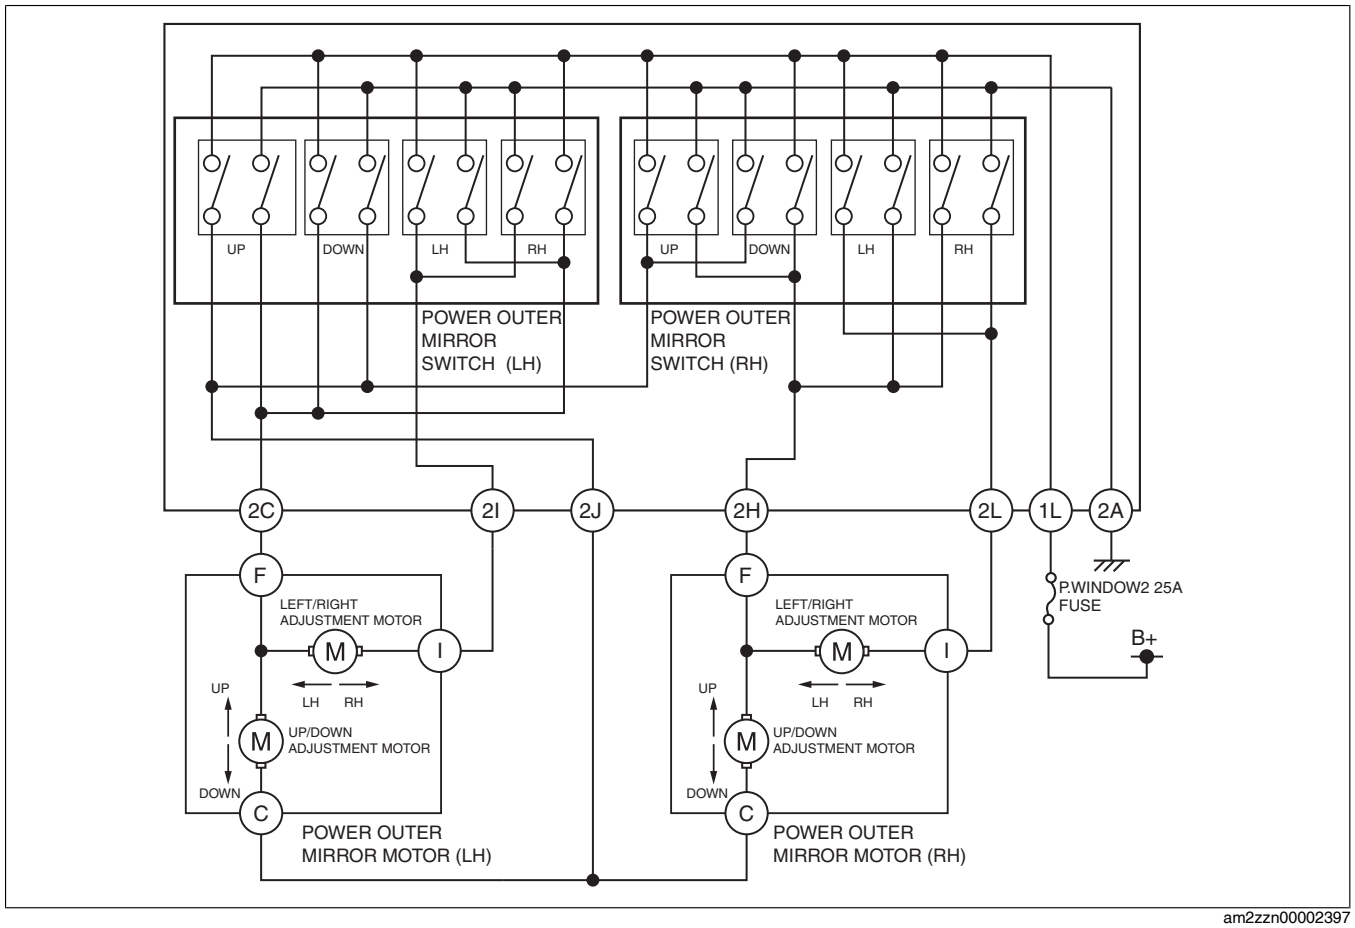


am2zzn00002397

Operation (With retractable outer mirror)

Outer mirror glass adjustment operation (Example: adjusting left outer mirror upward)


1. When the ignition is switched ON (engine off or on) or the IG OFF timer function is operating and the upward switch is turned on (1) , the power outer mirror control module turns the transistor on (2).
2. The FET turns on when the transistor turns on and current flows (3).
3. When the FET turns on, the up/down adjustment motor operates upward (4) and the outer mirror operates upward.

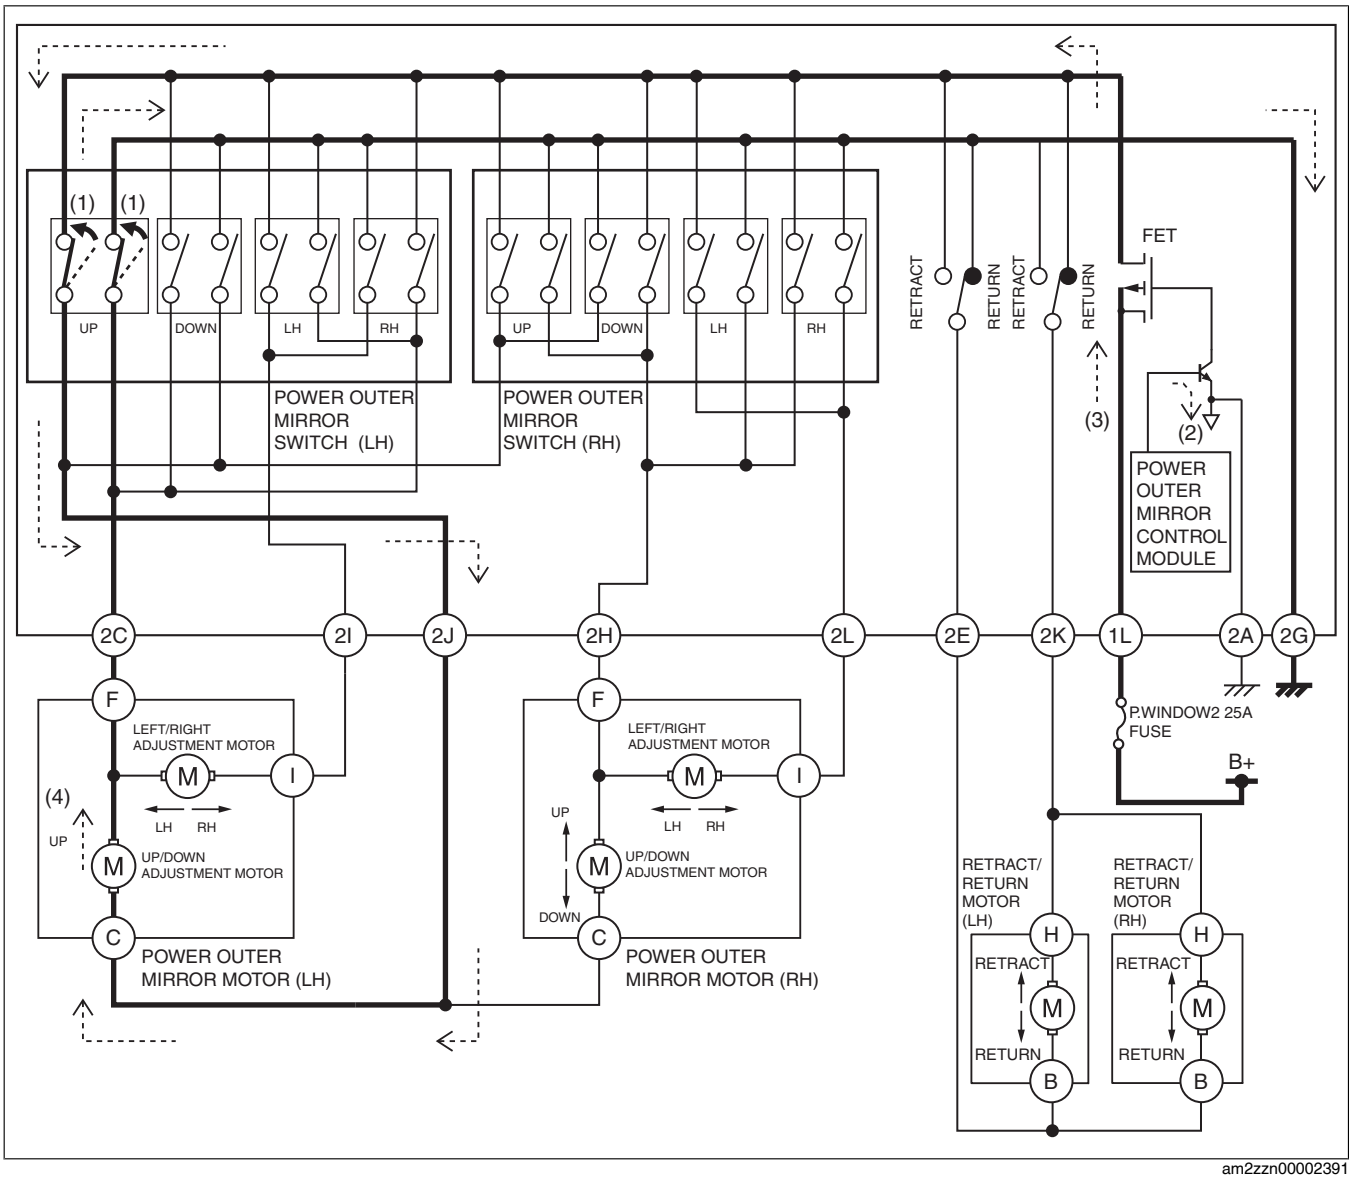

am2zzn00002391

Outer mirror glass retract/return operation (Example: retracting outer mirrors)

1. When the ignition is switched ON (engine off or on) or the IG OFF timer function is operating and the retraction direction switch is turned on (1), the power outer mirror control module turns the transistor on (2).
2. The FET turns on when the transistor turns on and current flows (3).
3. When the FET turns on, the retract/return motor operates in the retracting direction (4) and the outer mirrors retract.

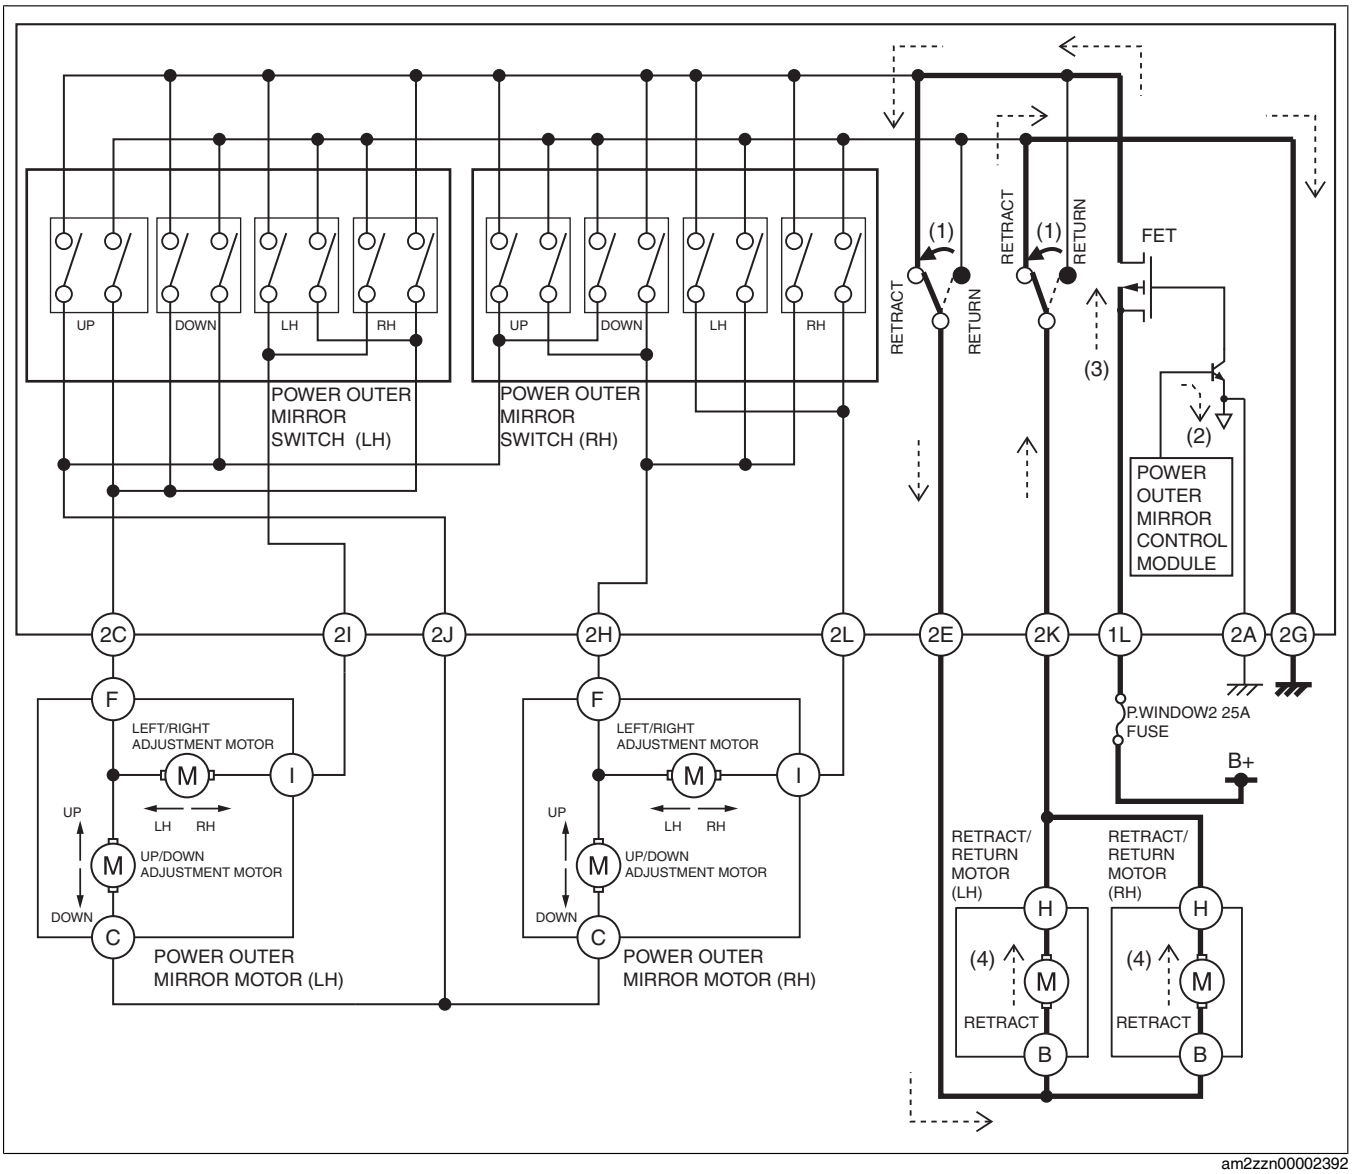

am2zzn00002392


IG OFF timer operation

- When the ignition is switched from ON (engine off or on) to OFF, the IG OFF timer function inside the power outer mirror control module is turned on and the power outer mirror switch can be operated for **approx. 40 s** after IG OFF is detected.

Operation (Without retractable outer mirror)

Outer mirror glass adjustment operation (Example: adjusting left outer mirror upward)

- When the upward switch turns on (1), the up/down adjustment motor operates upward (2) and the outer mirror operates upward.

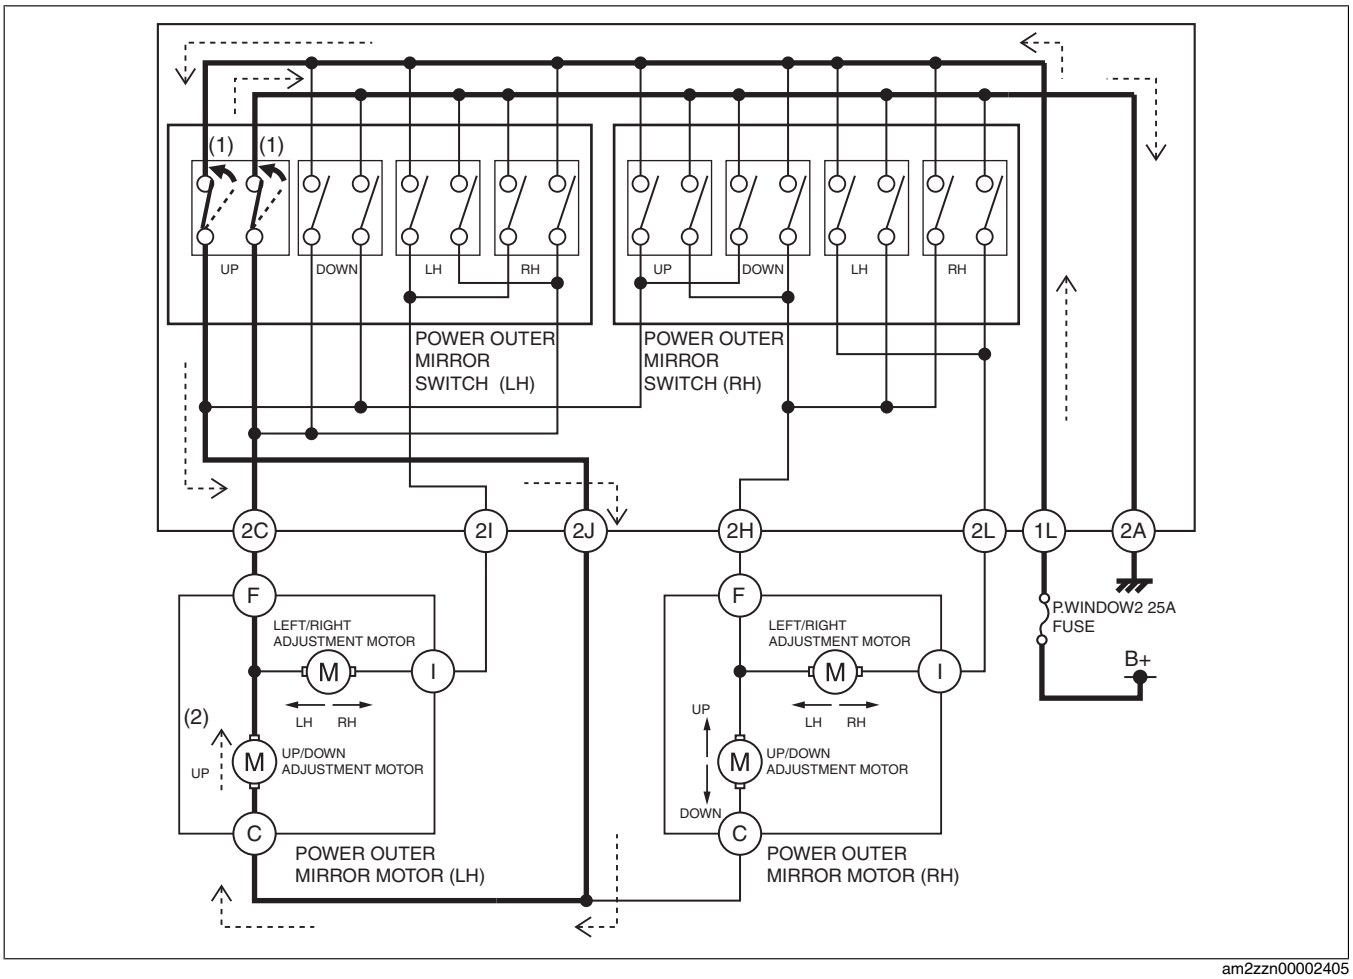

am2zzn00002405

IG OFF timer operation

- When the ignition is switched from ON (engine off or on) to OFF, the IG OFF timer function inside the power outer mirror control module is turned on and the power outer mirror switch can be operated for **approx. 40 s** after IG OFF is detected.

Fail-safe

- Not applicable