POWER OUTER MIRROR SWITCH

id091200014600

Purpose

- The switch turns on/off in conjunction with the driver's switch operation and switches the power outer mirror angle adjustment circuit and retract/return circuit contact points.

Function

Up-down/left-right adjustment function

- The power outer mirror switch switches the contact point according to the switch operation. As a result, the circuit to the up-down/left-right adjustment motor is switched.

Left/right selection function


- The power outer mirror switch is used to select the side on which adjustment of the power outer mirror glass is desired.

Retract/return function (With retractable outer mirror)

- The power outer mirror switch switches the contact point according to the switch operation. As a result, the circuit to the retract/return motor is switched.

Construction

- The power outer mirror switch consists of the following parts.
  - — Up-down/left-right adjustment switch
  - — Left/right selection switch
  - — Retract/return switch (With retractable outer mirror)

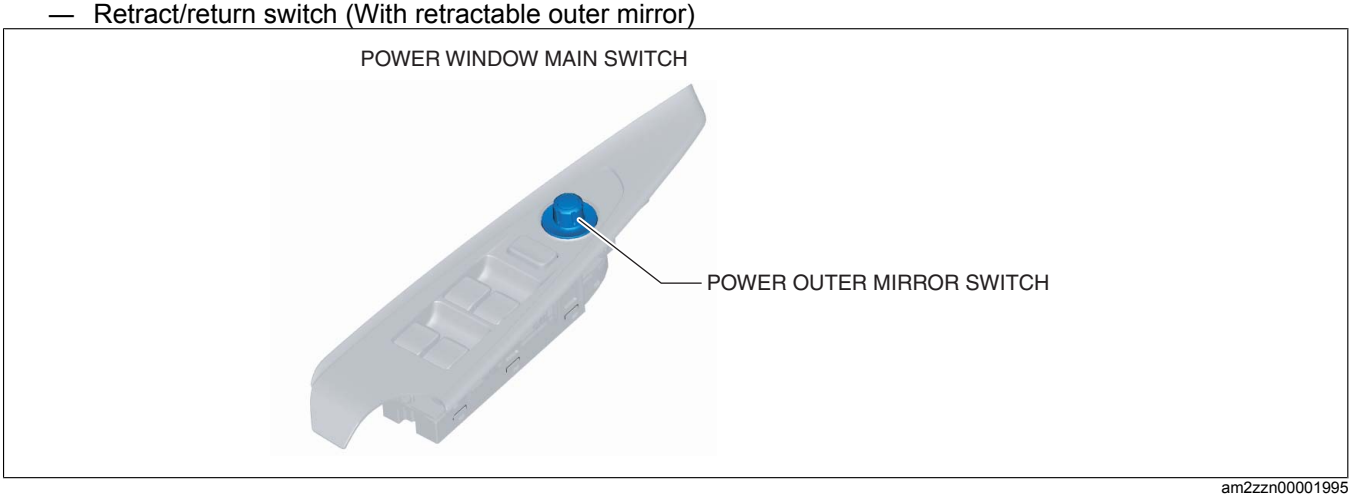


am2zzn00001995

Operation

Ex: Switch is pressed in the upward direction


- By operating the power outer mirror switch, up-down/left-right contact points for the power outer mirror can be switched.

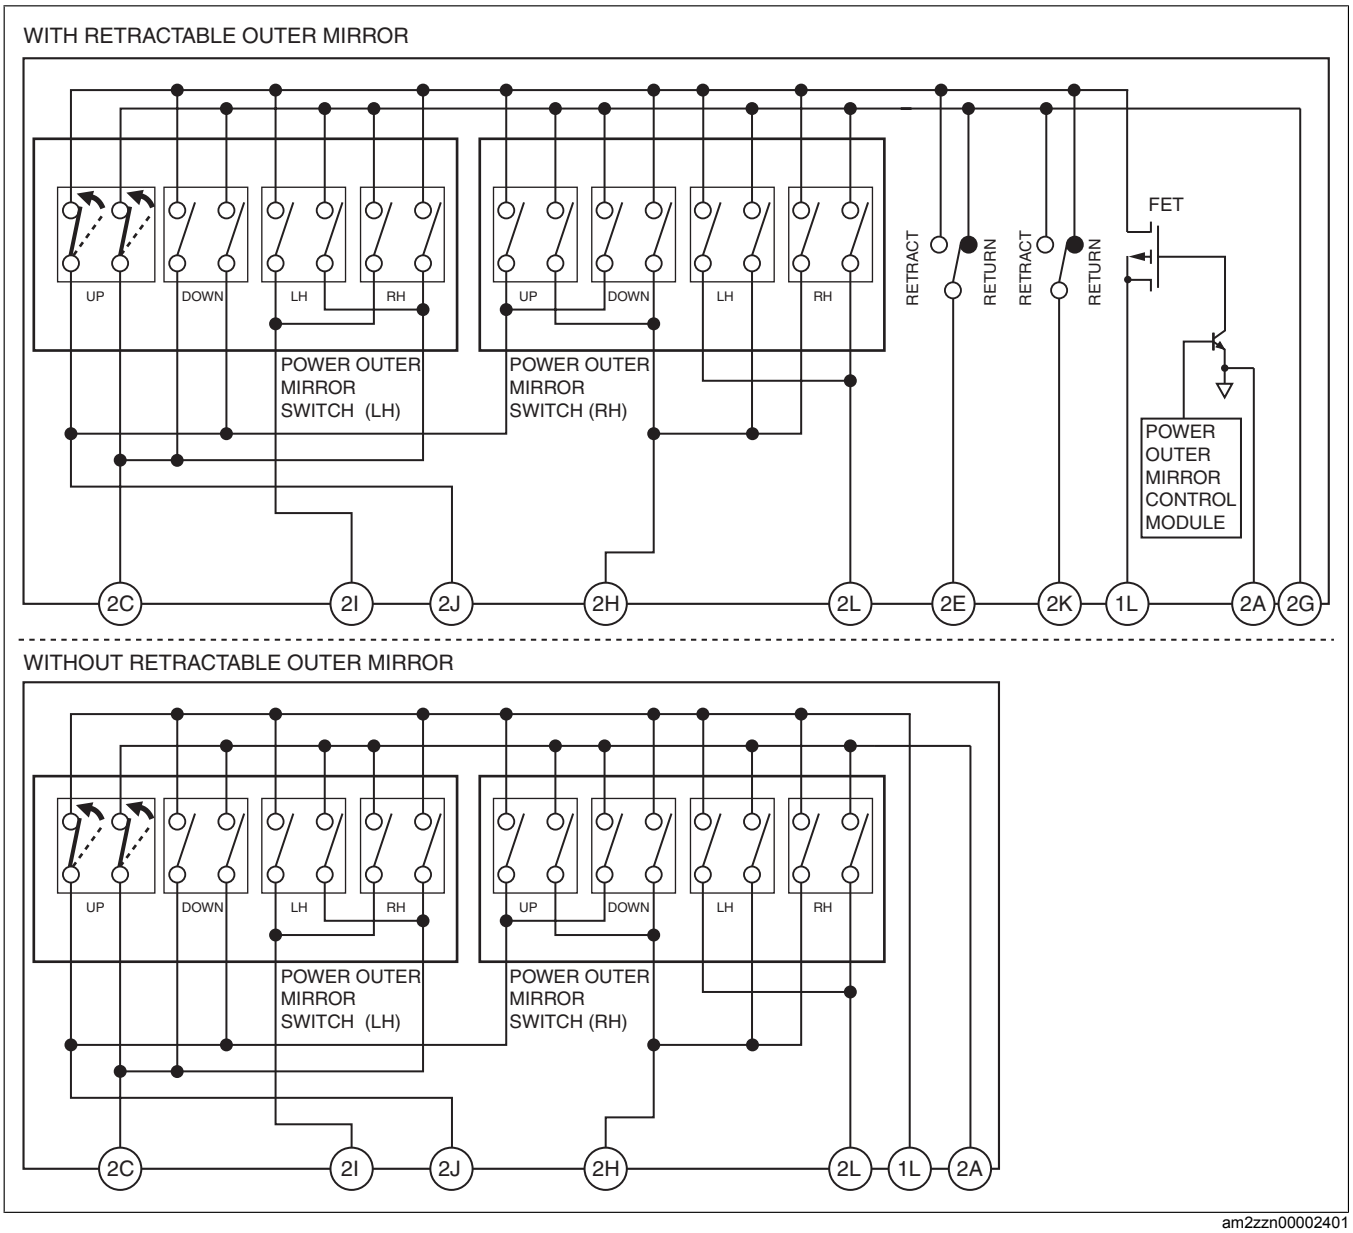

am2zzn00002401

Ex: Switched from return to retract

- By operating the power outer mirror switch, retract/return contact points for the power outer mirror can be switched.

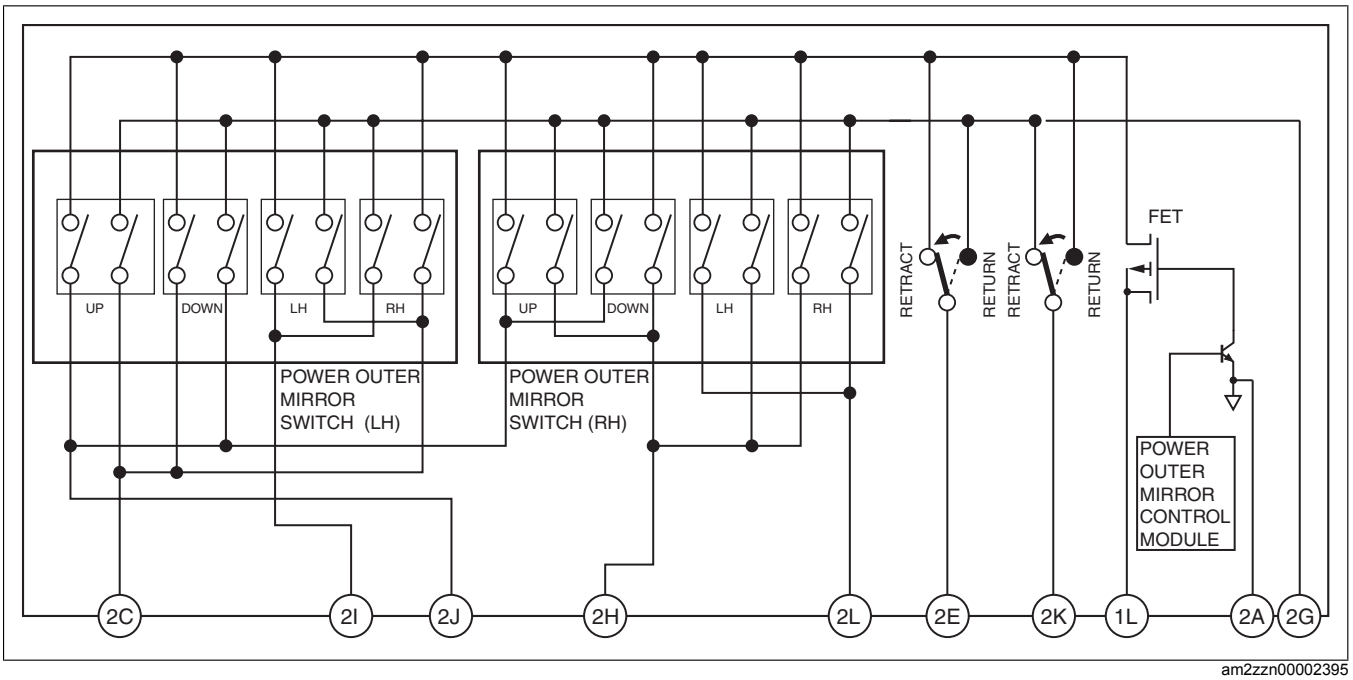

am2zzn00002395

Fail-safe

- Not applicable