
SENSOR COVER REMOVAL/INSTALLATION


id091200025000

1. Pull cover A in the direction of the arrow shown in the figure and detach tab A of cover A and cover B.

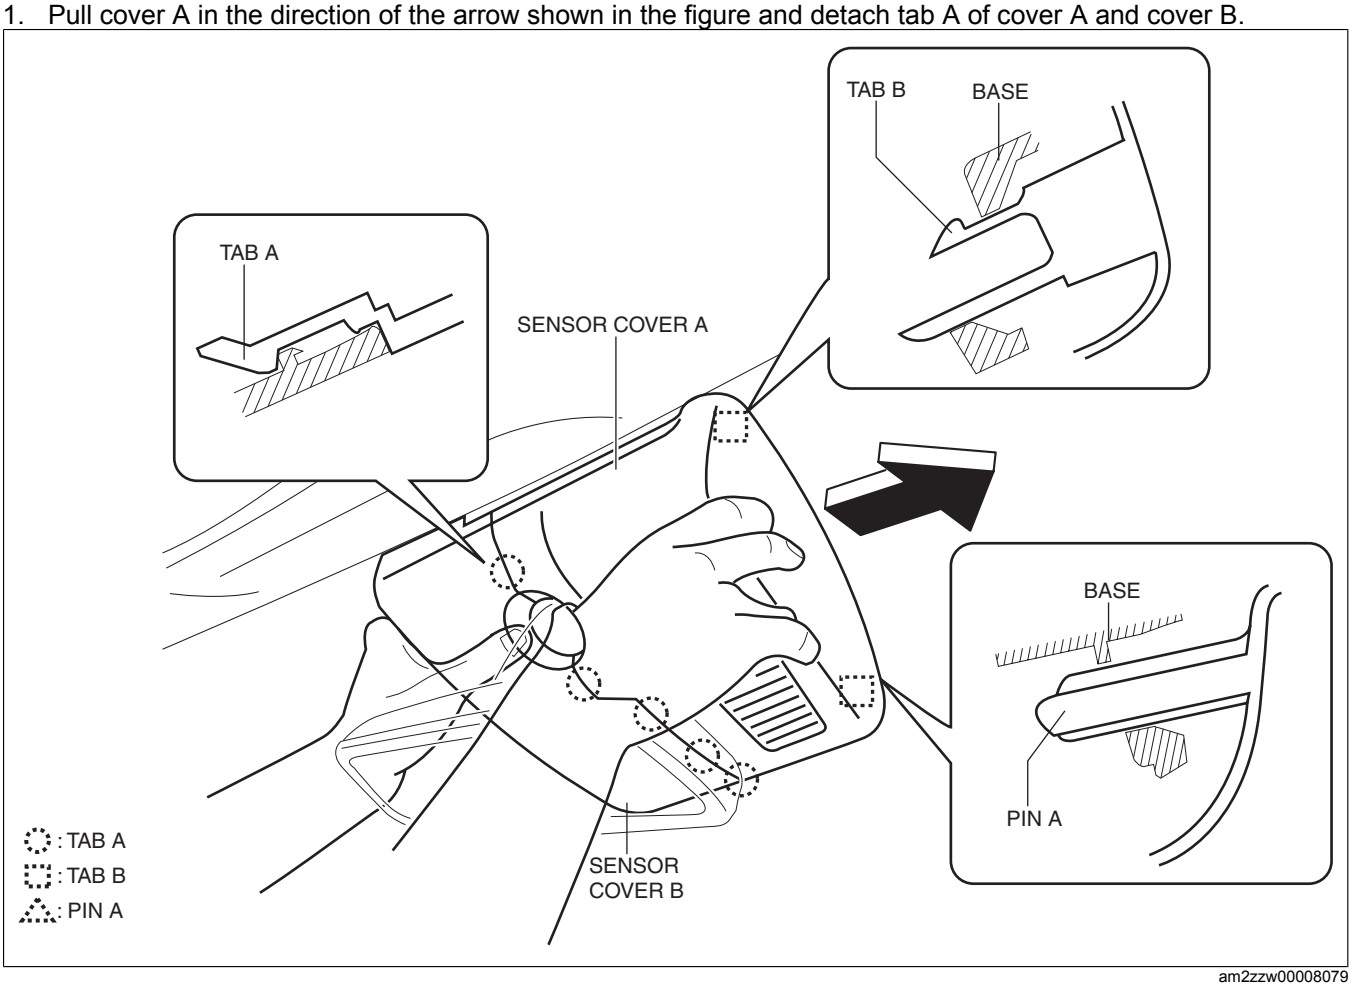

am2zzw00008079

2. Pull cover A in the direction of the arrow shown in the figure, detach the tab B and pin A for cover A and the base, and remove cover A from the base.
3. Remove the wiring harness from the hook.

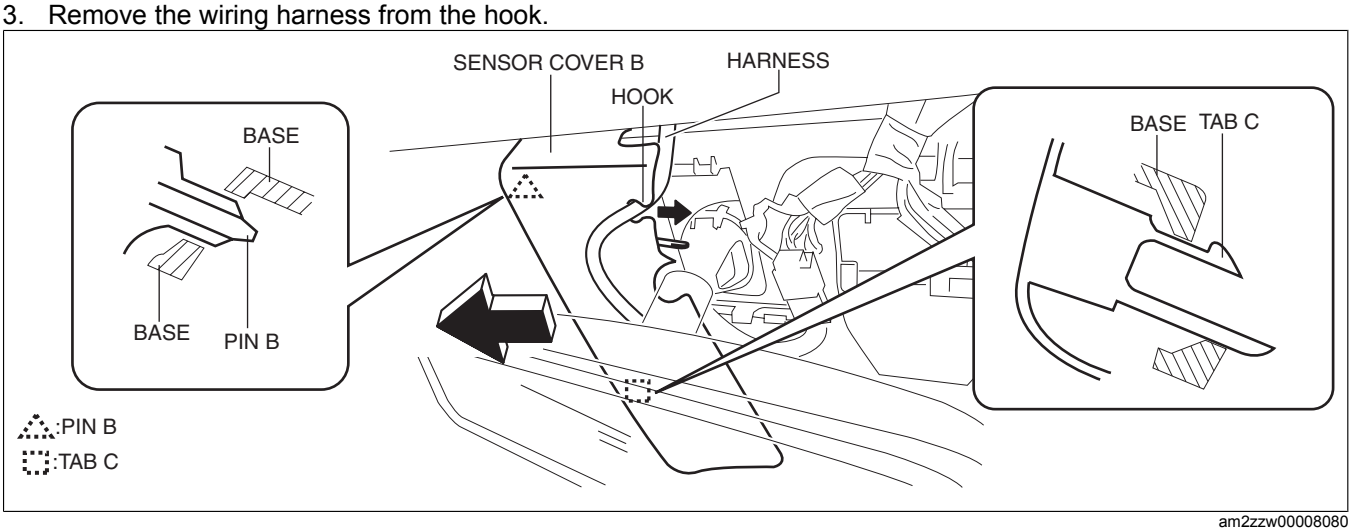

am2zzw00008080

4. Pull cover B in the direction of the arrow shown in the figure, detach the tab C and pin B for cover B and the base, and remove cover B from the base.
5. Install in the reverse order of removal.