
REAR MANUAL WINDOW REGULATOR REMOVAL/INSTALLATION

id091200807100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Regulator handle (See REGULATOR HANDLE REMOVAL.) (See REGULATOR HANDLE INSTALLATION.)
   (2) Rear door trim (See REAR DOOR TRIM REMOVAL/INSTALLATION.)
   (3) Rear door speaker (See REAR DOOR SPEAKER REMOVAL/INSTALLATION.)
   (4) Rear door glass (See REAR DOOR GLASS REMOVAL/INSTALLATION.)
   (5) Rear door module panel (See REAR DOOR MODULE PANEL REMOVAL/INSTALLATION.)
3. Remove the nuts.

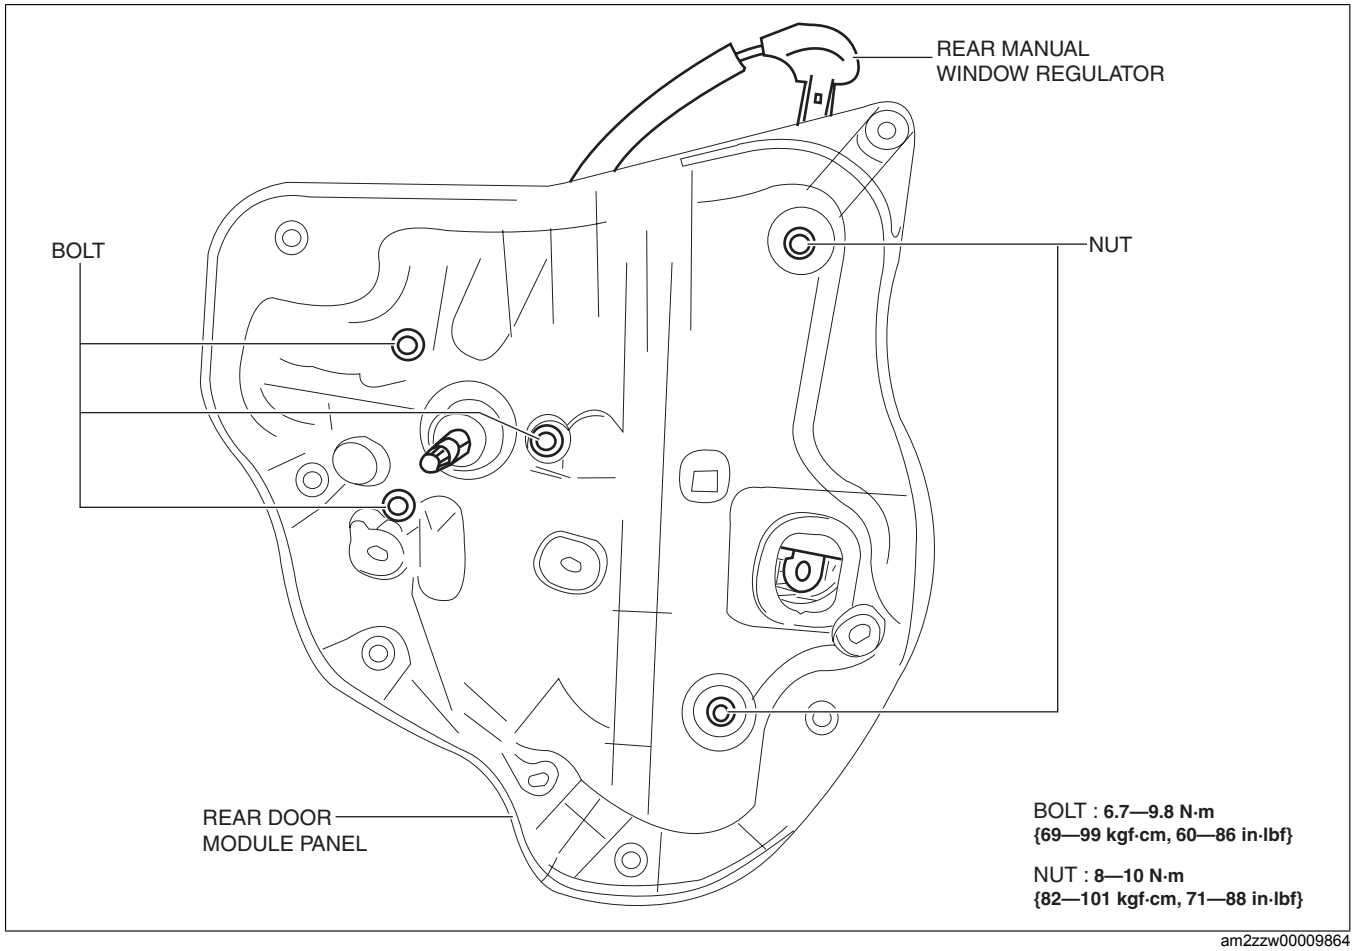

am2zzw00009864

4. Remove the bolts.
5. Remove the rear manual window regulator.
6. Install in the reverse order of removal.