
SEATS LOCATION INDEX

id091300800100

Front Seat

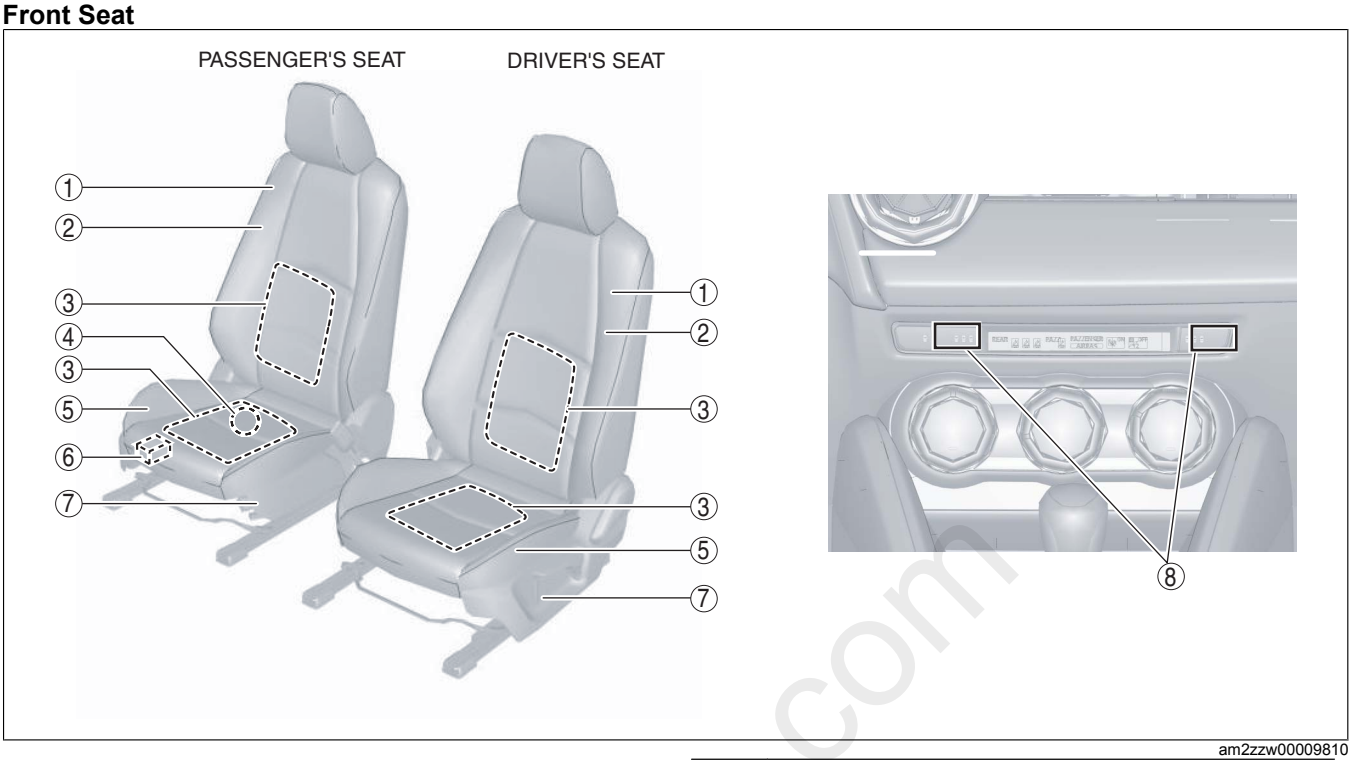

am2zzw00009810


1	Front seat (See FRONT SEAT REMOVAL/INSTALLATION.)
2	Front seat back (See FRONT SEAT BACK FRAME REMOVAL/INSTALLATION.) (See FRONT SEAT BACK FRAME DISASSEMBLY/ASSEMBLY.) (See FRONT SEAT BACK TRIM REMOVAL/INSTALLATION.)
3	Seat warmer unit (with seat warmer system) (See SEAT WARMER UNIT INSPECTION.)
4	Occupancy sensor (See OCCUPANCY SENSOR INSPECTION.)
5	Front seat cushion (See FRONT SEAT CUSHION TRIM REMOVAL/INSTALLATION.) (See FRONT SEAT CUSHION FRAME/ADJUSTER UNIT DISASSEMBLY/ASSEMBLY.)

6	Seat warmer control unit (with seat warmer system) (See SEAT WARMER CONTROL UNIT REMOVAL/INSTALLATION.)
7	Front seat side cover (See FRONT SEAT SIDE COVER REMOVAL/INSTALLATION.)
8	Seat warmer switch (with seat warmer system) (See SEAT WARMER SWITCH REMOVAL/INSTALLATION.)


cardiagn.com

Rear Seat

4SD

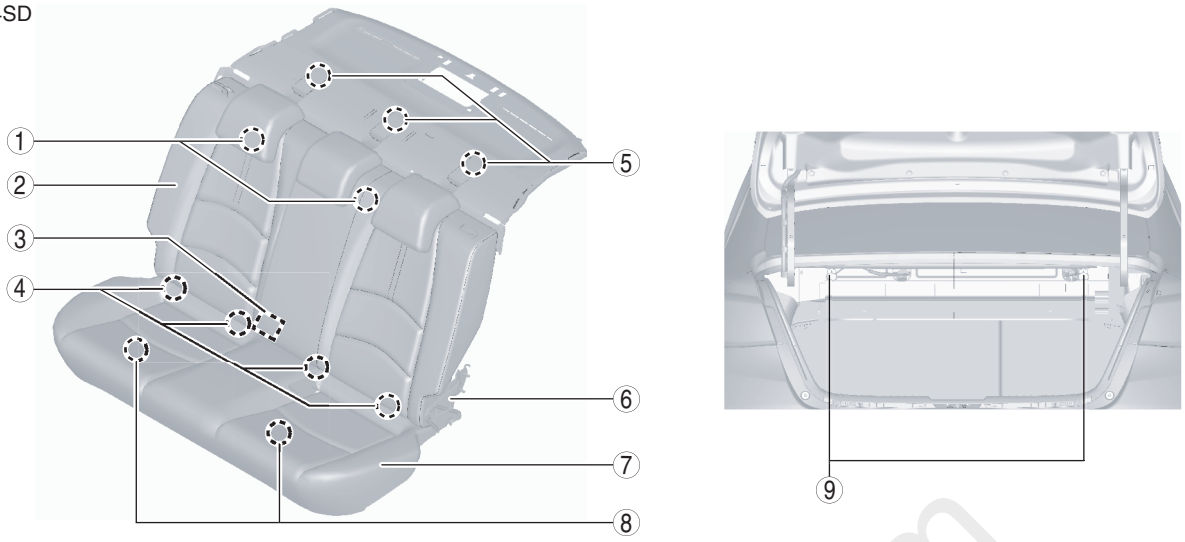

5HB

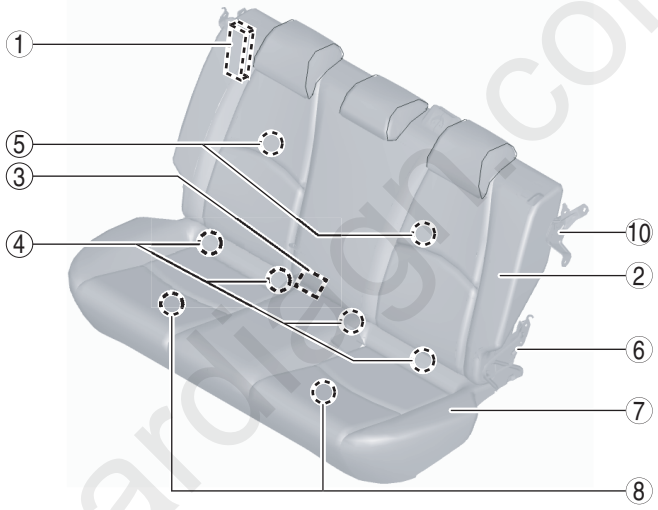

am2zzw00009811

1	Rear seat back latch (See REAR SEAT BACK LATCH REMOVAL/ INSTALLATION.)
2	Rear seat back (See REAR SEAT BACK REMOVAL/ INSTALLATION.) (See REAR SEAT BACK FRAME REMOVAL/ INSTALLATION.) (See REAR SEAT BACK TRIM REMOVAL/ INSTALLATION.)
3	Rear seat hinge (center) (6:4 split type) (See REAR SEAT HINGE REMOVAL/ INSTALLATION.)
4	ISOFIX anchor (See CHILD-RESTRAINT SEAT ANCHOR REMOVAL/INSTALLATION.)
5	Top tether anchor (See CHILD-RESTRAINT SEAT ANCHOR REMOVAL/INSTALLATION.)

6	Rear seat hinge (side) (See REAR SEAT HINGE REMOVAL/ INSTALLATION.)
7	Rear seat cushion (See REAR SEAT CUSHION REMOVAL/ INSTALLATION.) (See REAR SEAT CUSHION TRIM REMOVAL/ INSTALLATION.)
8	Rear seat cushion lock (See REAR SEAT CUSHION LOCK REMOVAL/ INSTALLATION.)
9	Remote handle lever (See REMOTE HANDLE LEVER REMOVAL/ INSTALLATION.)
10	Rear seat back striker (See REAR SEAT BACK STRIKER REMOVAL/ INSTALLATION.)

cardiagn.com