SEAT WARMER UNIT INSPECTION


id091300801400

Warning

- **Handling a front seat equipped with a side air bag improperly can accidentally operate (deploy) the air bag, which may seriously injure you. Read the service warnings/cautions in the Workshop Manual before handling the front seat (side air bag integrated). (See AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].)**

Simple Inspection


1. Place a cooling agent on the seat cushion (thermistor).
2. Operate the seat warmer switch to turn on the seat warmer.
3. Touch the seat cushion and the seat back to verify a temperature increase.
4. If a temperature increase cannot be verified, go to the resistance inspection. (See Resistance Inspection.)

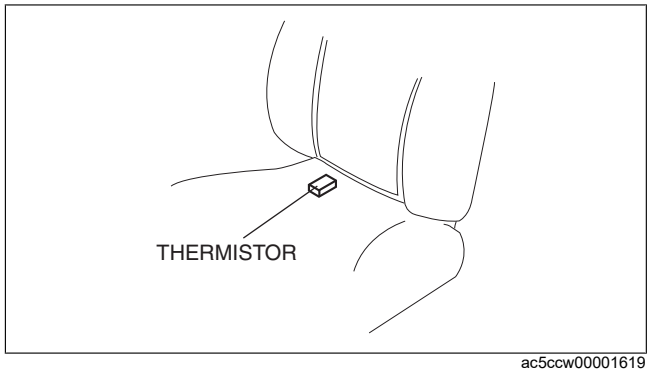

ac5ccw00001619


Resistance Inspection
Driver-side
Front seat cushion

1. Switch the ignition to off.
2. Disconnect the negative battery cable and wait **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Disconnect the driver-side seat warmer unit connector.
4. Inspect for continuity between the driver-side seat warmer unit connector terminal 6C and 6D.

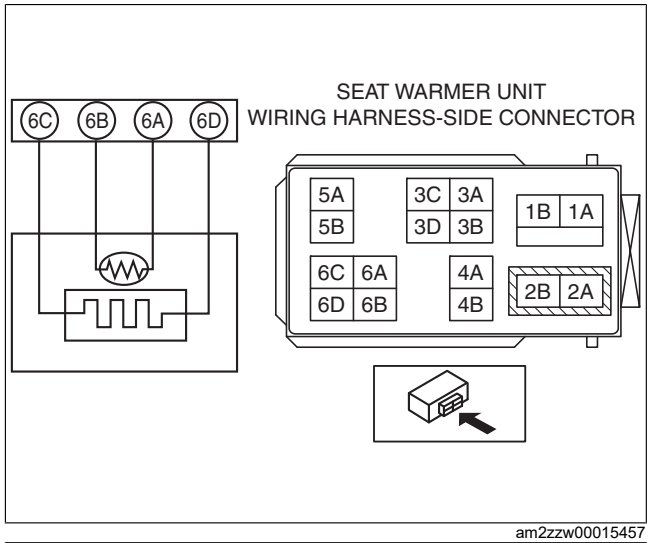

am2zzw00015457


— If not as indicated in the table, replace the front seat cushion trim. (See FRONT SEAT CUSHION TRIM REMOVAL/INSTALLATION)

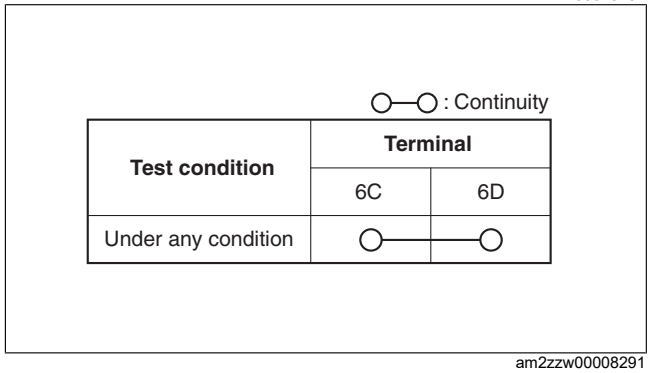

Test condition	Terminal	
	6C	6D
Under any condition	○	○

am2zzw00008291


5. Measure the resistance between the driver-side seat warmer unit connector terminals 6A and 6B, and verify that the condition is as indicated in the table.
   — If the thermistor characteristic is not as shown in the graph, replace the front seat cushion trim. (See FRONT SEAT CUSHION TRIM REMOVAL/INSTALLATION.)

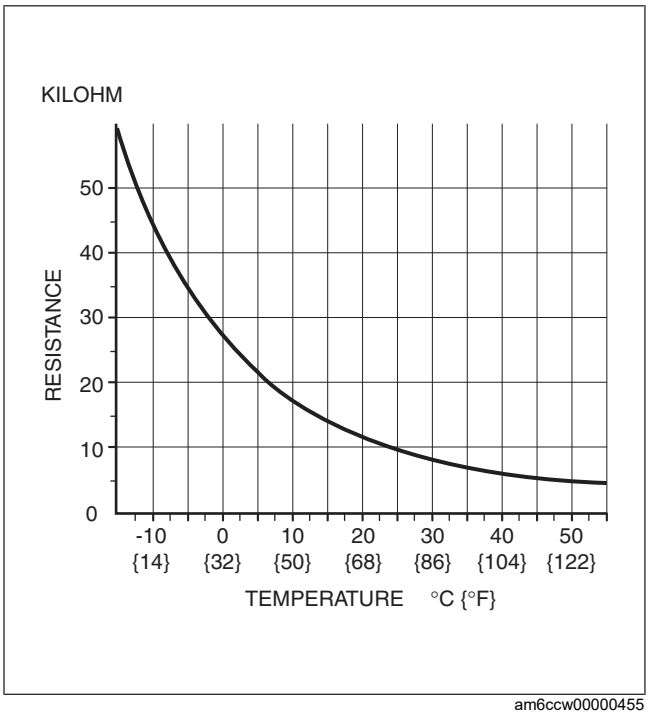

am6ccw00000455


Front seat back

1. Switch the ignition to off.
2. Disconnect the negative battery cable and wait **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Disconnect the driver-side seat warmer unit connector.
4. Inspect for continuity between the driver-side seat warmer unit connector (short cord) terminal A and B.

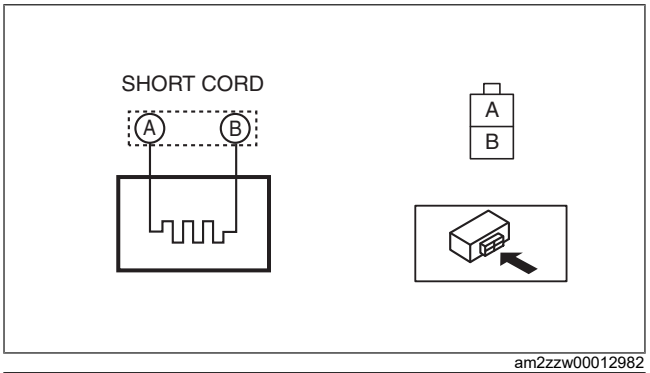

am2zzw00012982

   — If not as indicated in the table, replace the front seat back trim. (See FRONT SEAT BACK TRIM REMOVAL/INSTALLATION)

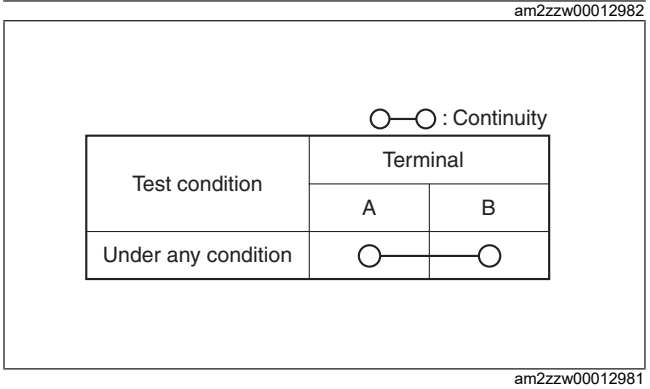


am2zzw00012981

Passenger-side

Front seat cushion


1. Switch the ignition to off.
2. Disconnect the negative battery cable and wait **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Disconnect the passenger-side seat warmer unit connector.
4. Inspect for continuity between the passenger-side seat warmer unit connector terminal 6A and E.

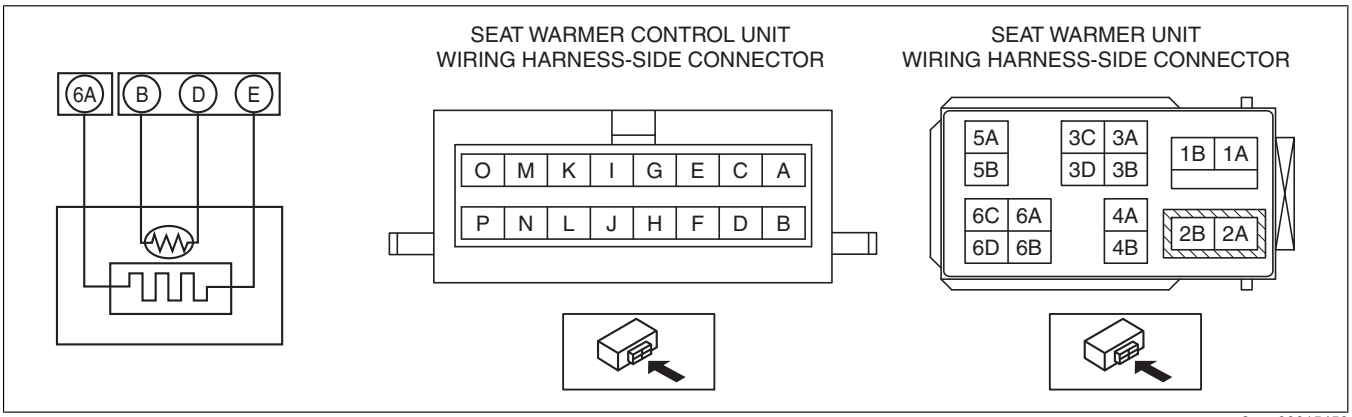


am2zzw00015458

— If not as indicated in the table, replace the front seat cushion trim. (See FRONT SEAT CUSHION TRIM REMOVAL/ INSTALLATION.)

5. Measure the resistance between the passenger-side seat warmer unit connector terminals B and D, and verify that the condition is as indicated in the table.
   — If the thermistor characteristic is not as shown in the graph, replace the front seat cushion trim. (See FRONT SEAT CUSHION TRIM REMOVAL/INSTALLATION.)

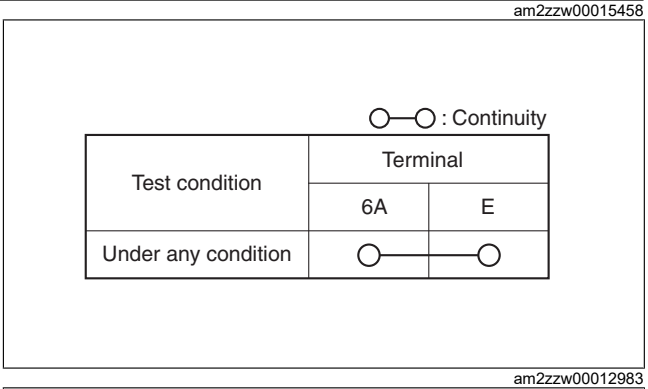

am2zzw00012983

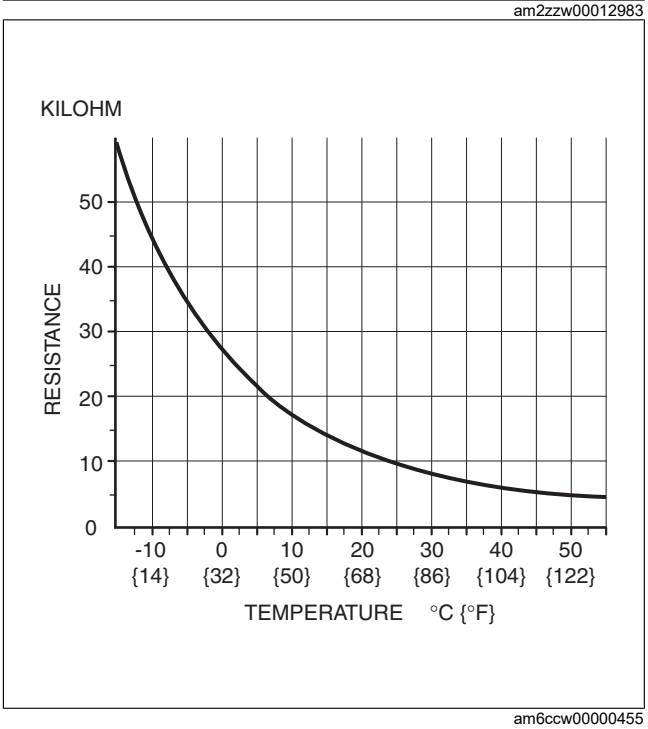


am6ccw00000455

Front seat back


1. Switch the ignition to off.
2. Disconnect the negative battery cable and wait **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Disconnect the passenger-side seat warmer unit connector.

4. Inspect for continuity between the passenger-side seat warmer unit connector (short cord) terminal A and B.

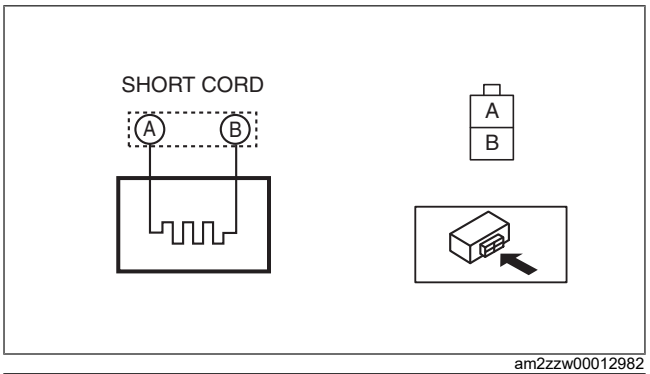

am2zzw00012982

— If not as indicated in the table, replace the front seat back trim. (See FRONT SEAT BACK TRIM REMOVAL/INSTALLATION.)

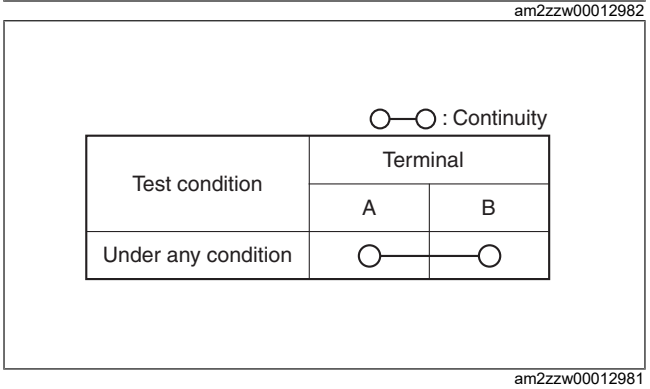

Test condition	Terminal	
	A	B
Under any condition	○—○	

am2zzw00012981