
REAR SEAT BACK LATCH REMOVAL/INSTALLATION

id091300809400


4SD

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
   (3) Tire house trim (See TIRE HOUSE TRIM REMOVAL/INSTALLATION.)
   (4) C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
   (5) High-mount brake light (See HIGH-MOUNT BRAKE LIGHT REMOVAL/INSTALLATION.)
   (6) Rear package trim (See REAR PACKAGE TRIM REMOVAL/INSTALLATION.)
3. Remove the nuts.

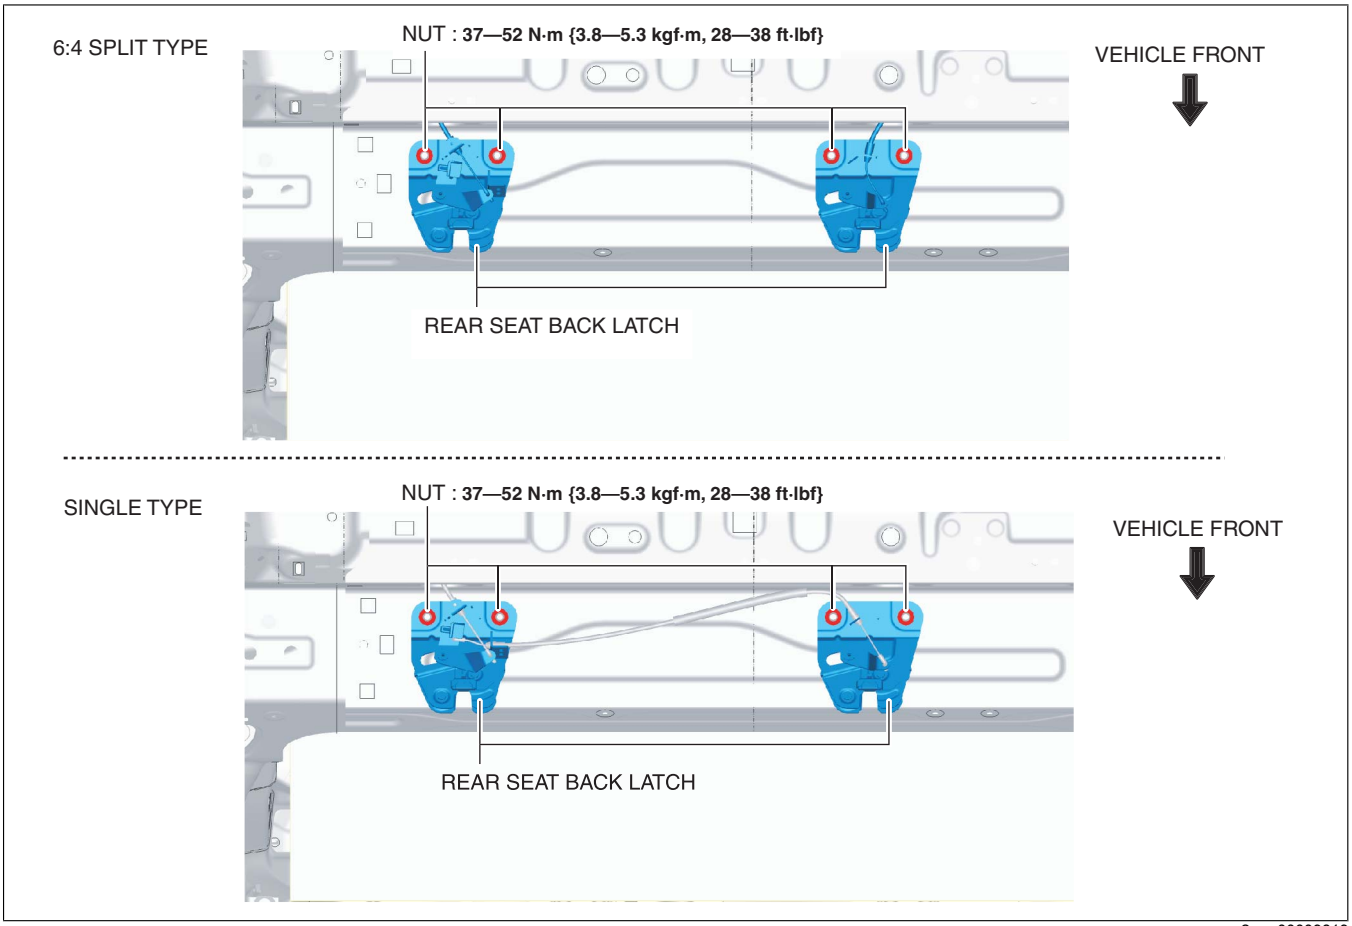

am2zzw00009819

4. Disconnect the cables and remove the rear seat back latches.

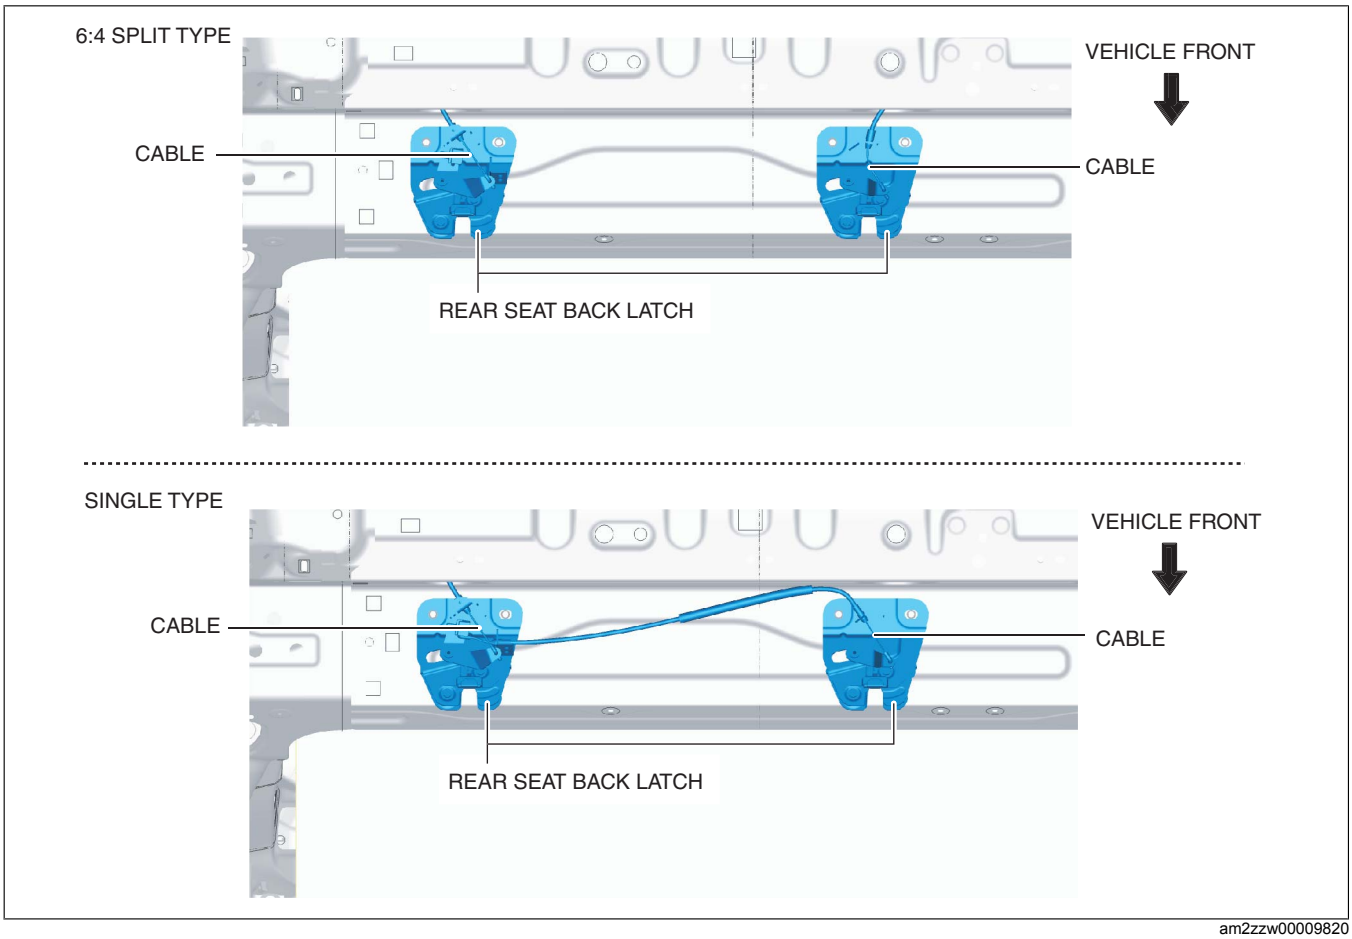


am2zzw00009820

5. Install in the reverse order of removal.

5HB

1. Remove the rear seat cushion.(See REAR SEAT CUSHION REMOVAL/INSTALLATION)
2. Remove the rear center seat belt anchor.(See REAR CENTER SEAT BELT REMOVAL/INSTALLATION)
3. Remove the following parts:
   (1) Head restraint
   (2) Rear seat back (See REAR SEAT BACK REMOVAL/INSTALLATION)
   (3) Rear seat back frame (See REAR SEAT BACK FRAME REMOVAL/INSTALLATION)
4. Remove in the order indicated in the table.

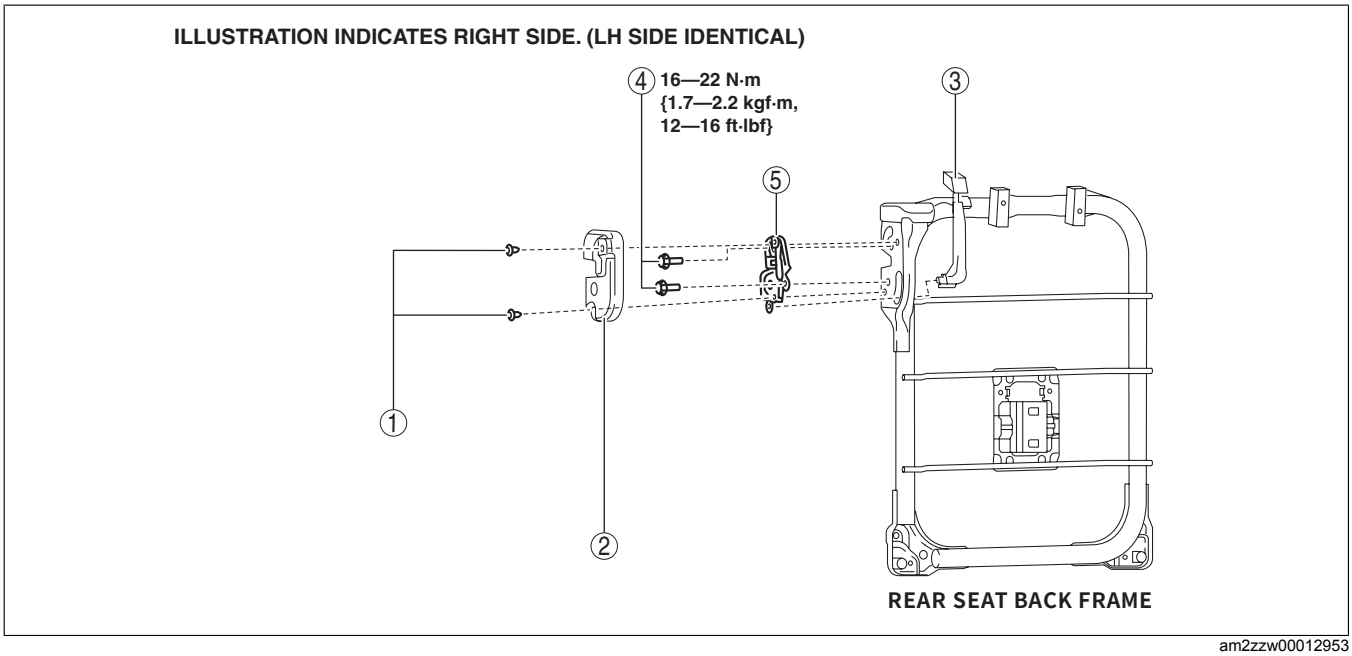

am2zzw00012953

1	Screw

2	Rear seat back latch cover
3	Push knob
4	Bolt
5	Rear seat back latch

5. Install in the reverse order of removal.