FRONT SEAT BACK FRAME REMOVAL/INSTALLATION


id091300825700

Warning

- **Handling a front seat equipped with a side air bag improperly can accidentally operate (deploy) the air bag, which may seriously injure you. Read the service warnings/cautions in the Workshop Manual before handling the front seat (side air bag integrated). (See AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].)**
- **If the sliding mechanisms on both sides are not locked after assembling the front seat, the front seat will operate accidentally while the vehicle is driven, which could result in serious injury. After assembling the front seat, shake it up and down and verify that the sliding mechanism on the both sides are locked.**


Caution

- **After the front seat has been removed, if the slider lever is operated and the front seat is reinstalled with the left/right slide positions deviated, the adjuster unit could be damaged. After removing a front seat, do not operate the slider lever.**
- **Verify that there are no malfunctions in the forward/back slide of the seat and in the adjuster unit after installing a front seat.**
- **When performing the procedure with a front seat removed from the vehicle, perform the procedure on a clean cloth so as not to damage or soil the seat.**

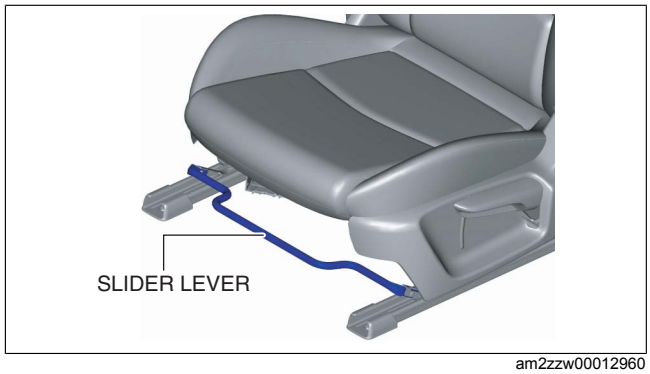

am2zzw00012960

1. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Head restraint
   (2) Front seat (See FRONT SEAT REMOVAL/INSTALLATION.)
   (3) Front seat side cover (See FRONT SEAT SIDE COVER REMOVAL/INSTALLATION.)
   (4) Front seat back trim (See FRONT SEAT BACK TRIM REMOVAL/INSTALLATION.)
   (5) Side air bag module (See SIDE AIR BAG MODULE REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See SIDE AIR BAG MODULE REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
3. Remove the nuts.

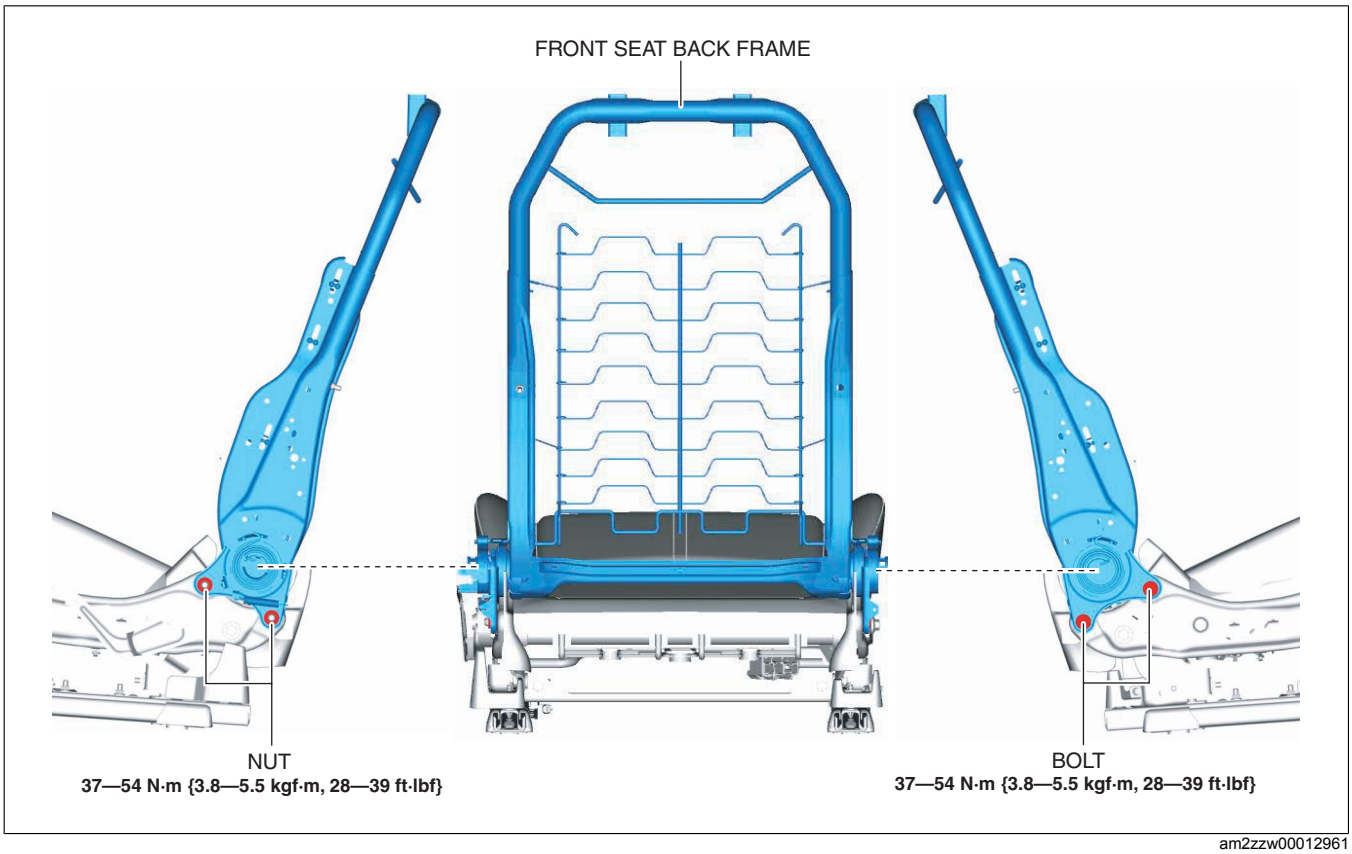

am2zzw00012961

4. Remove the bolts.
5. Remove the front seat back frame.
6. Install in the reverse order of removal.