REAR SEAT CUSHION TRIM REMOVAL/INSTALLATION


id091300912700

Caution

- **When performing the procedure with a rear seat cushion removed from the vehicle, perform the procedure on a clean cloth so as not to damage or soil the seat.**

Removal

1. Remove the rear seat cushion.(See REAR SEAT CUSHION REMOVAL/INSTALLATION)
2. Remove the C-rings.

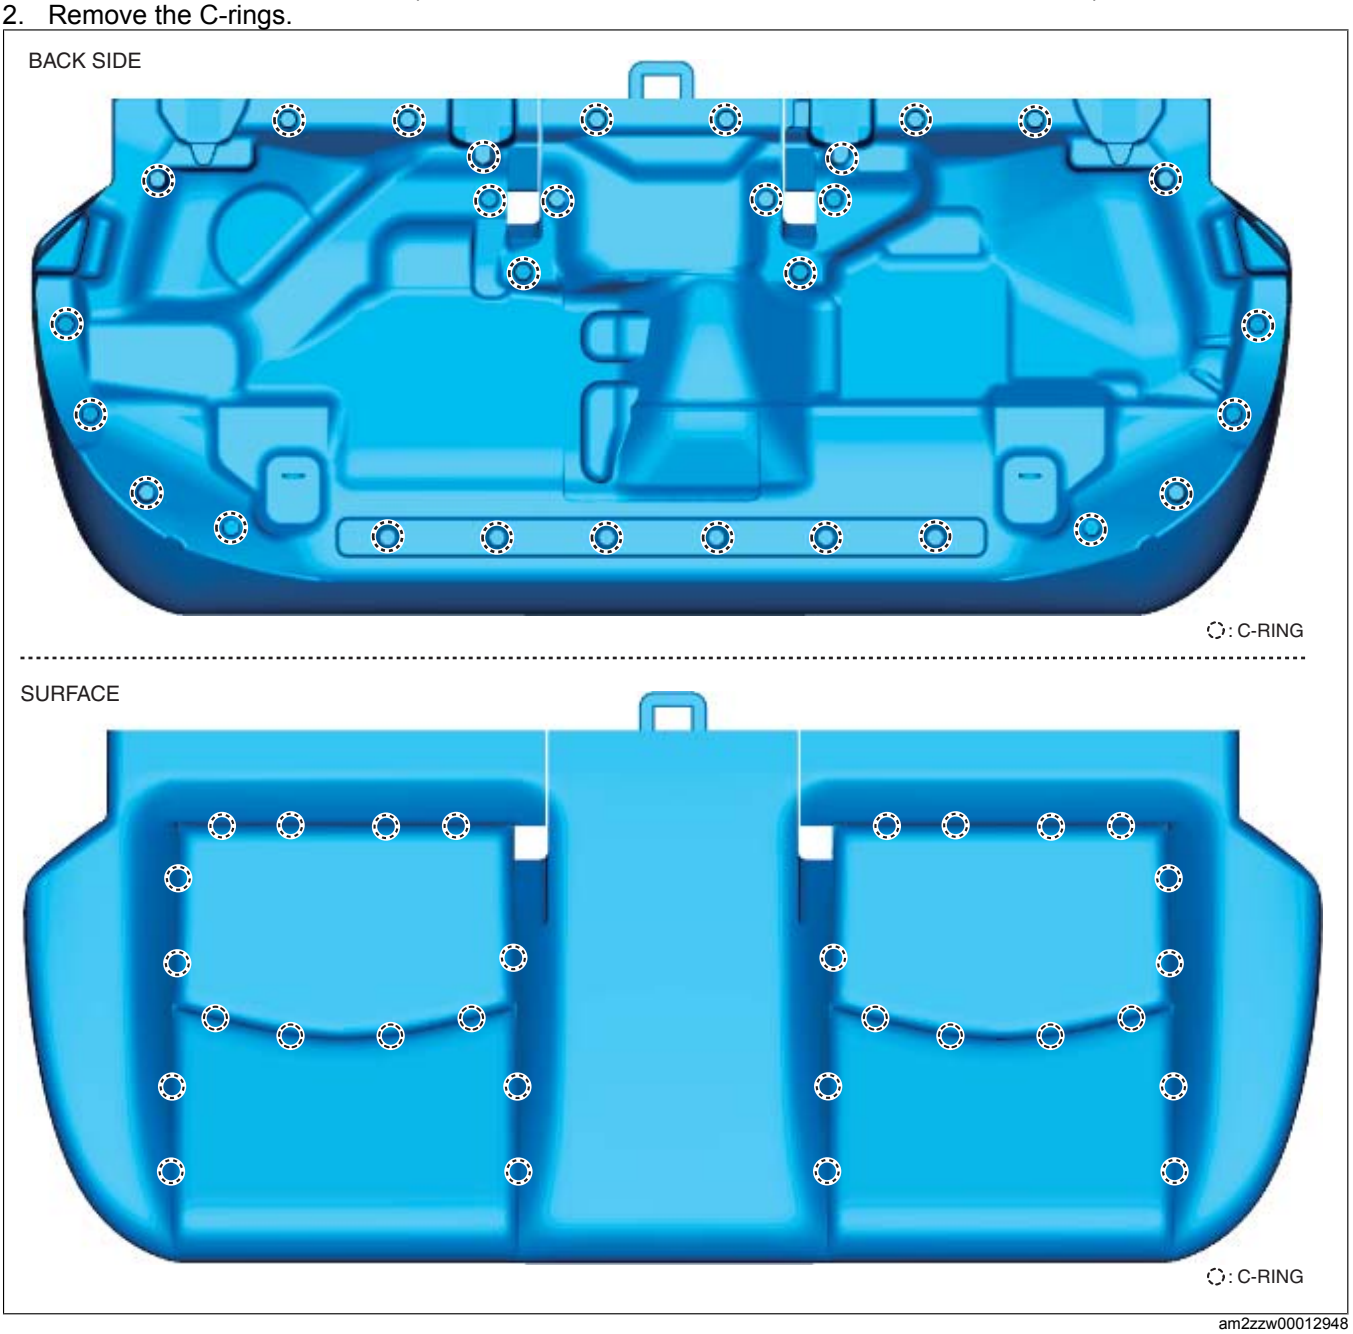

am2zzw00012948

Caution

- **If a C-ring is damaged while removing or installing the rear seat back trim and rear seat back pad, it may not be possible to install the rear seat back trim and rear seat back pad normally. When removing or installing the rear seat back trim and rear seat back pad, be careful not to damage the C-rings.**
- **If a C-ring is damaged, replace it with a new one.**


Note

- The position and number of C-rings differ depending on the type of seat.

3. Remove the rear seat cushion trim from the rear seat cushion pad.

Installation

1. Align the rear seat cushion trim with the installation hole of the rear seat cushion pad, and install the C-rings.

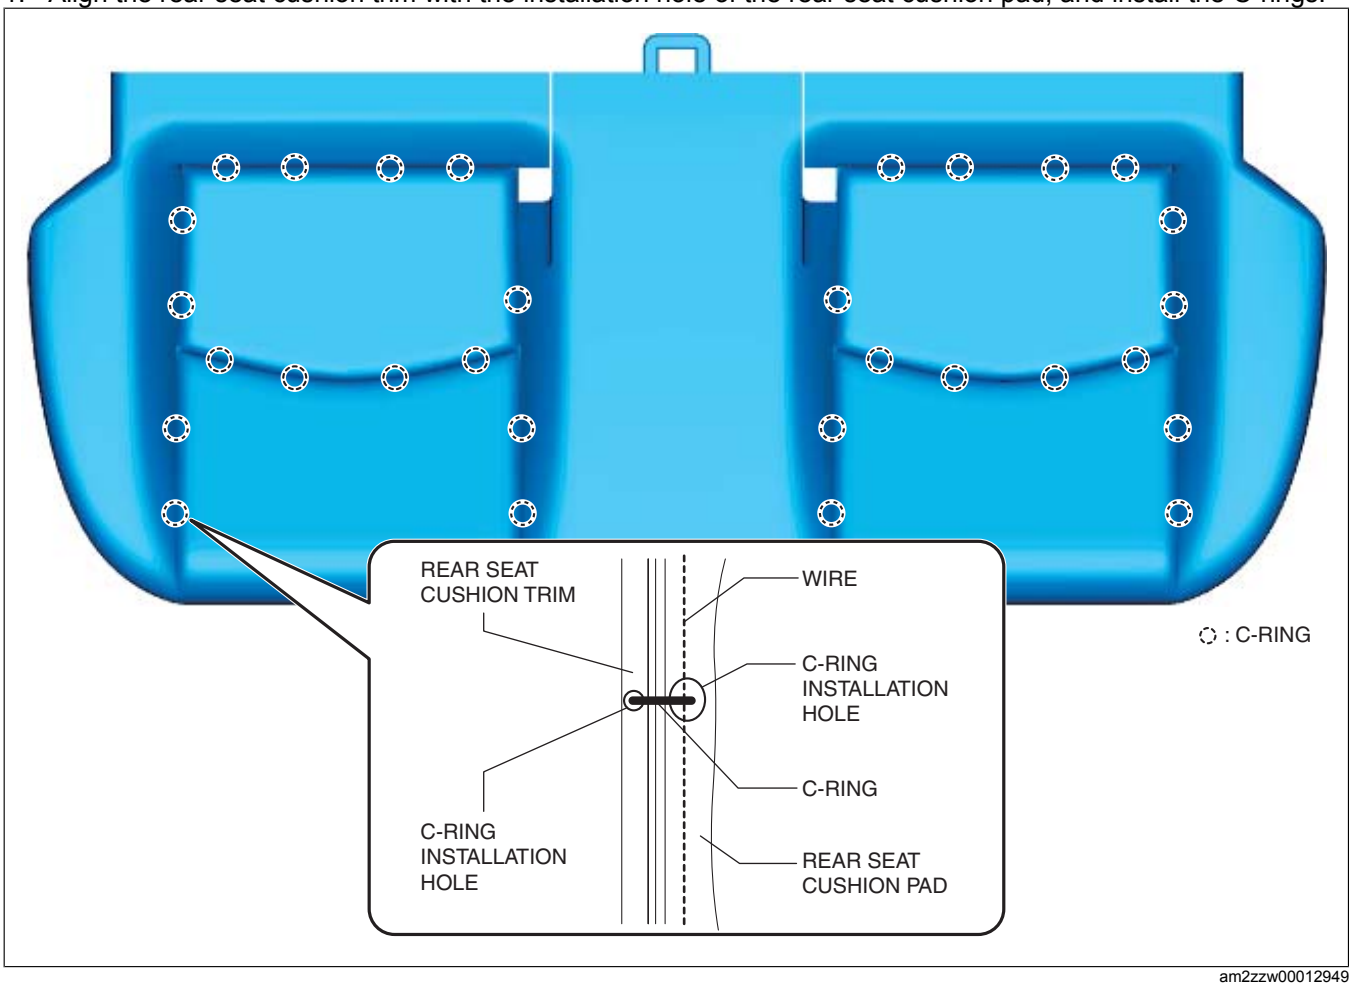


am2zzw00012949

Caution

- **If a C-ring is damaged while removing or installing the rear seat back trim and rear seat back pad, it may not be possible to install the rear seat back trim and rear seat back pad normally. When removing or installing the rear seat back trim and rear seat back pad, be careful not to damage the C-rings.**
- **If a C-ring is damaged, replace it with a new one.**


Note

- The position and number of C-rings differ depending on the type of seat.
- Wrinkling can be easily prevented by installing the C-rings with a certain amount of tightening.

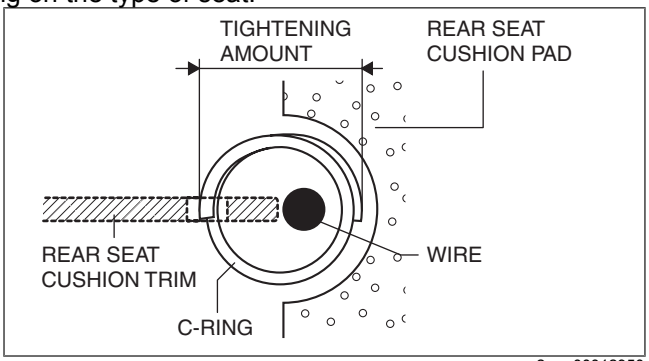

am2zzw00012950

2. Press the rear seat back pad inward while pulling the rear seat back trim outward.

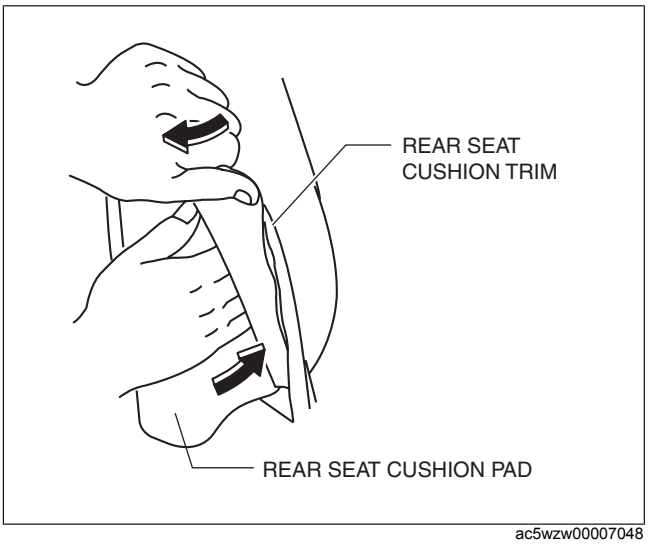

ac5wzw00007048


3. Align the rear seat back trim with the shape of the rear seat back pad while pressing the rear seat back pad outward.

Caution


- **If a C-ring is damaged while removing or installing the rear seat back trim and rear seat back pad, it may not be possible to install the rear seat back trim and rear seat back pad normally. When removing or installing the rear seat back trim and rear seat back pad, be careful not to damage the C-rings.**
- **If a C-ring is damaged, replace it with a new one.**

Note

- The position and number of C-rings differ depending on the type of seat.
- Wrinkling can be easily prevented by installing the C-rings with a certain amount of tightening.

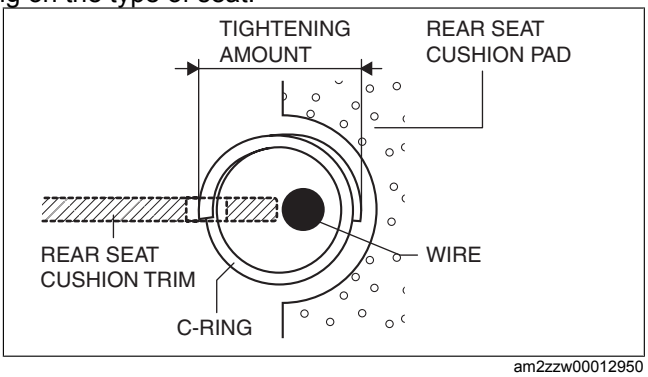


am2zzw00012950

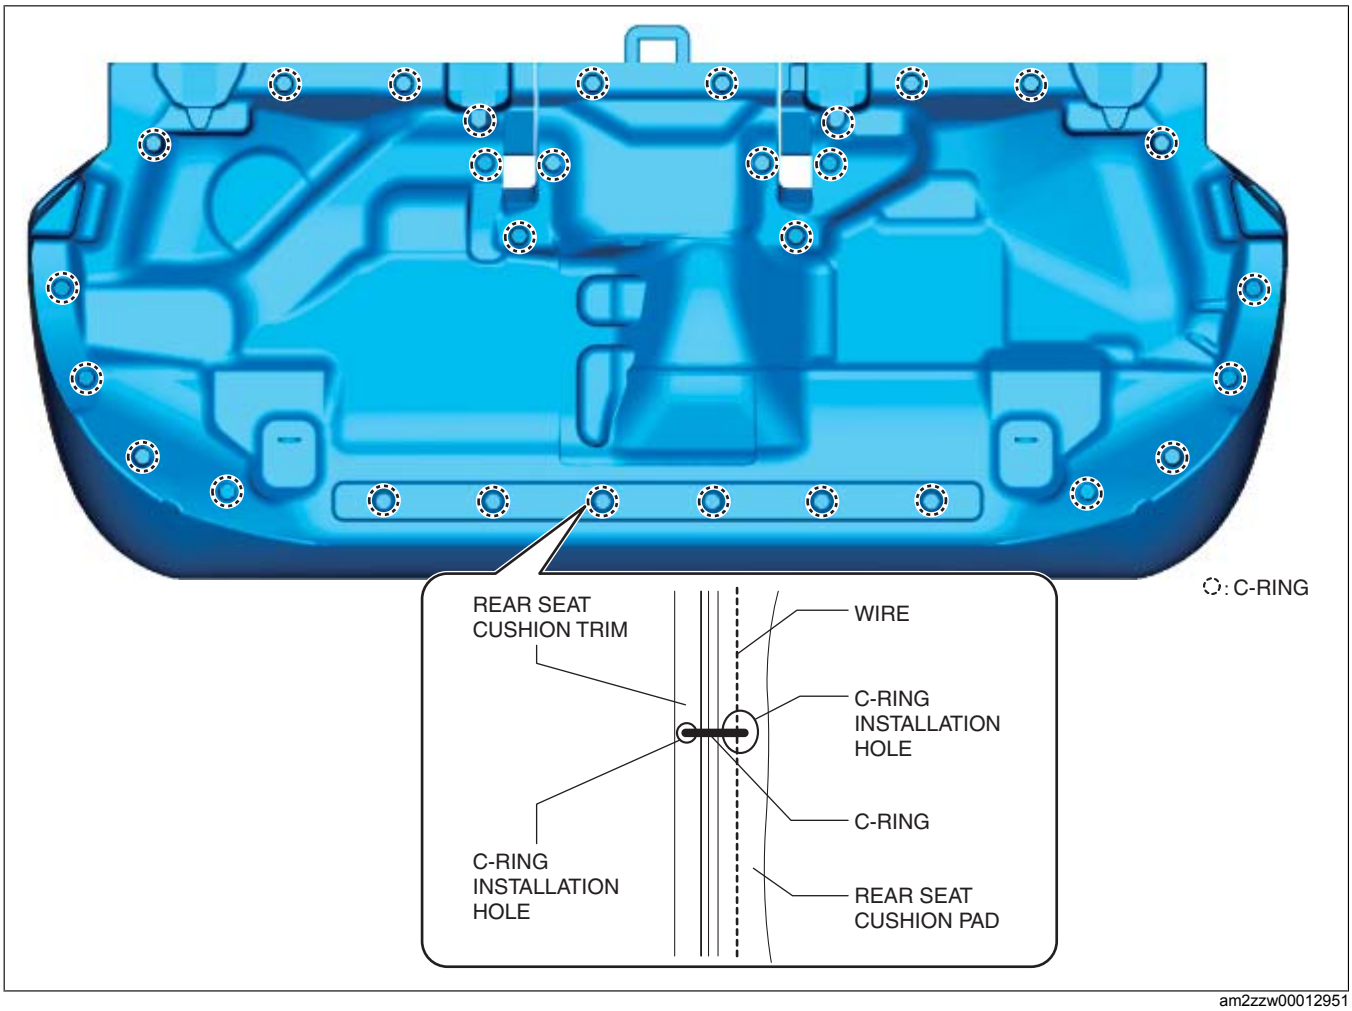

am2zzw00012951

4. Align the rear seat cushion trim with the shape of the rear seat cushion pad while pressing the rear seat cushion pad outward.

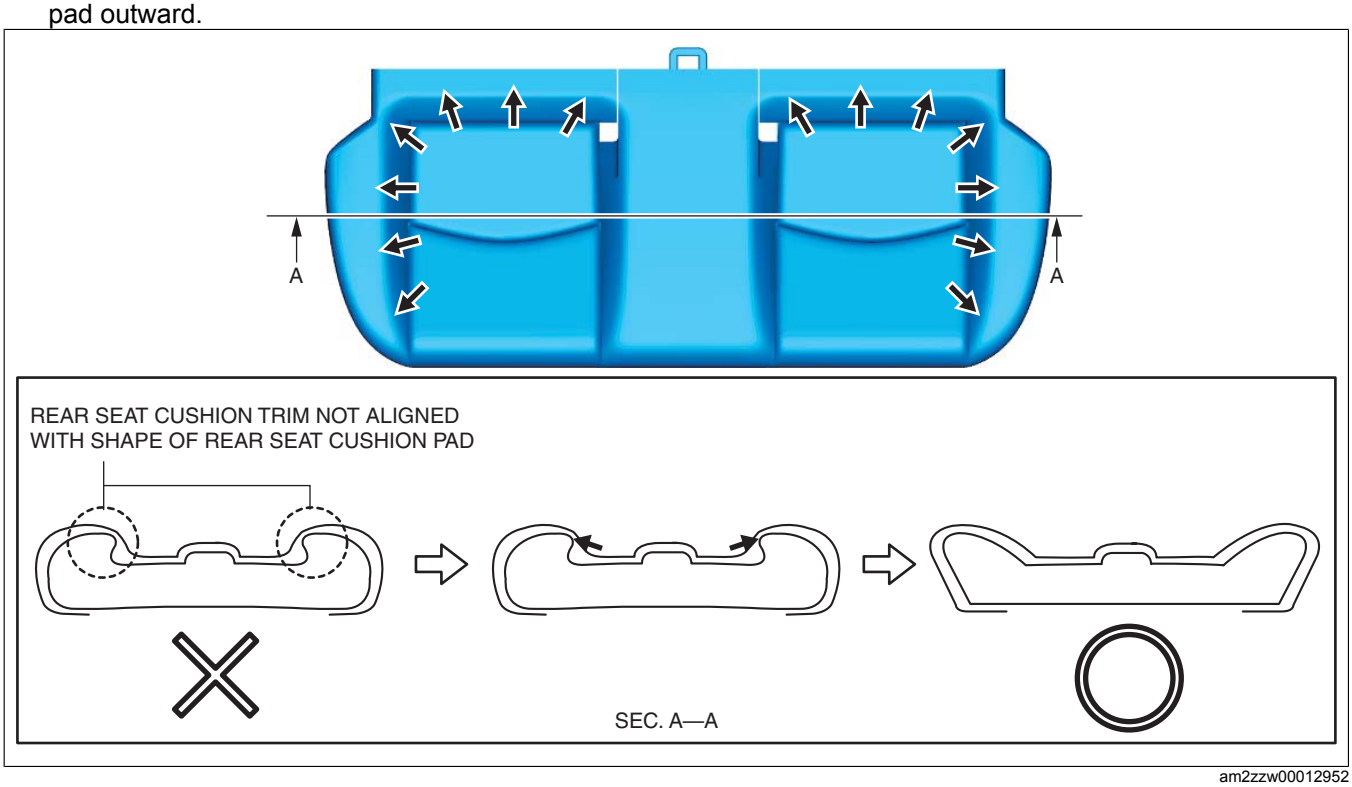

am2zzw00012952

5. Install the rear seat cushion.(See REAR SEAT CUSHION REMOVAL/INSTALLATION)