
SEAT WARMER CONTROL UNIT REMOVAL/INSTALLATION

id091300977500

Warning


- **Handling a front seat equipped with a side air bag improperly can accidentally operate (deploy) the air bag, which may seriously injure you. Read the service warnings/cautions in the Workshop Manual before handling the front seat (side air bag integrated). (See AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].)**

1. Disconnect the negative battery cable and wait for **1 min or more**. (Rear console side) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the front seat side cover. (front door side) (See FRONT SEAT SIDE COVER REMOVAL/INSTALLATION.)
3. Disconnect the seat warmer control unit connector.

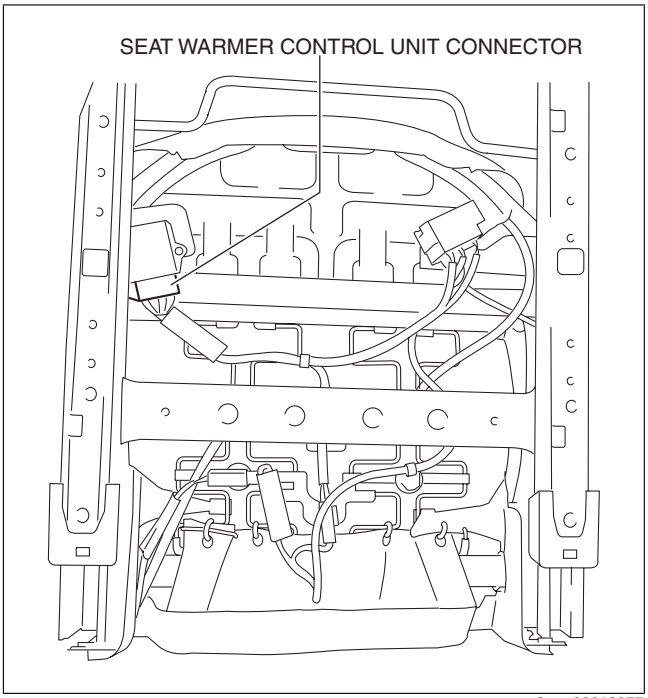

am2zzw00012977


4. Remove the screws.

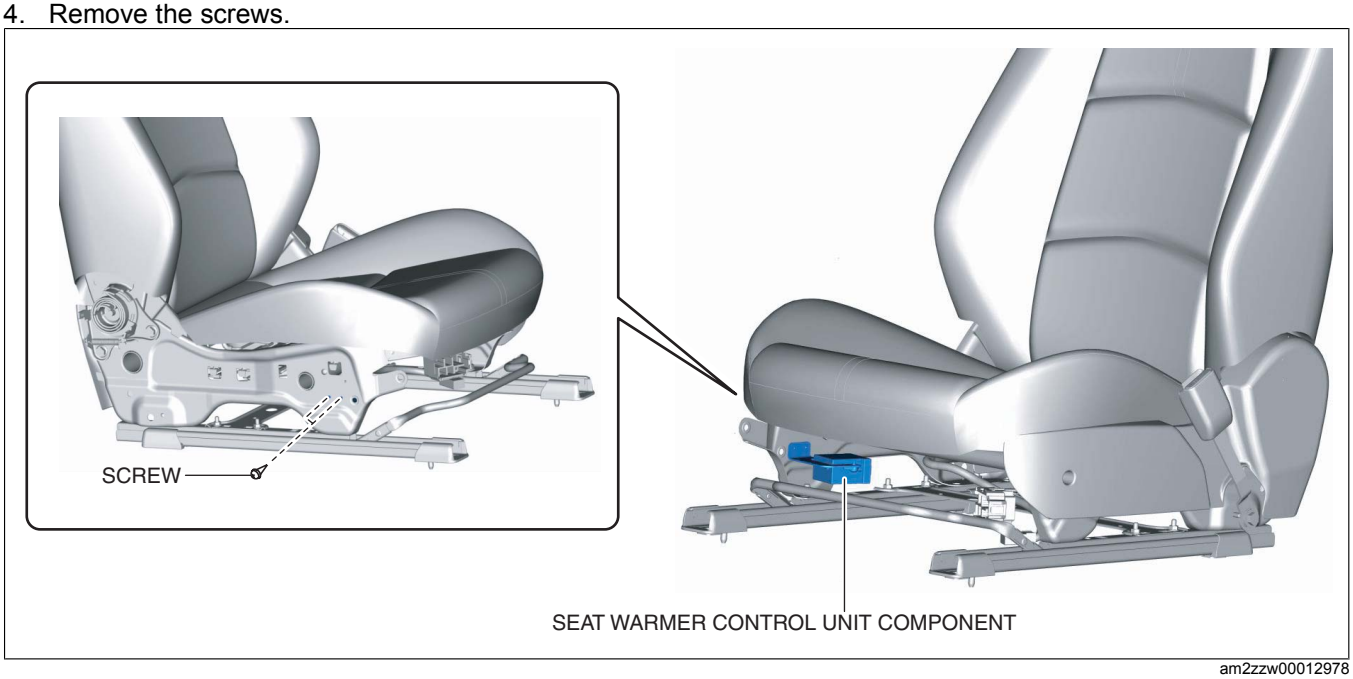

am2zzw00012978

5. Remove the seat warmer control unit component.

6. Remove the screws.
7. Remove the seat warmer control unit.
8. Install in the reverse order of removal.

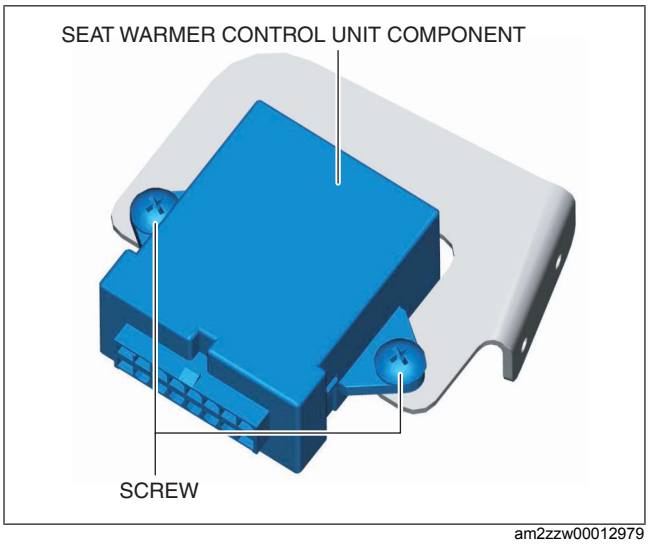

am2zzw00012979