
INTRUDER SENSOR

id091400003500

Purpose
- A cabin intrusion is detected.


Function
- The intruder sensor detects movement in the vehicle by ultrasonic waves and sends the detection signal to the BCM.

Construction
- The intruder sensor is located in center part of the roof the forward part of the roof.

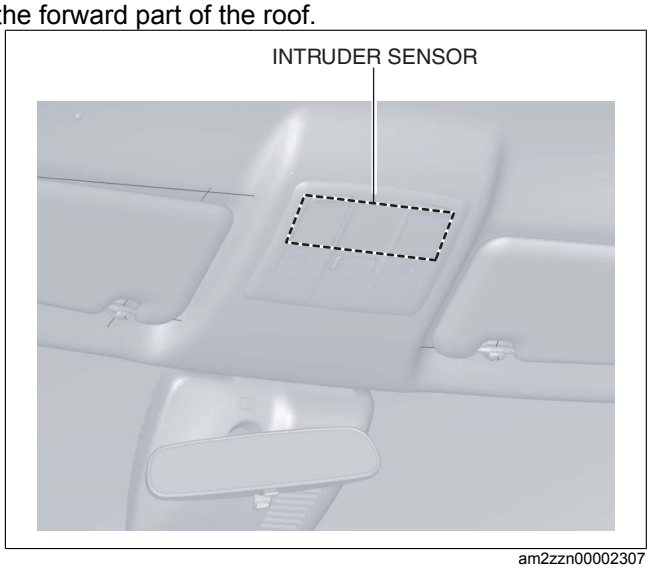

am2zzn00002307

Operation
1. When the theft-deterrent system is stand-by mode, the intruder sensor outputs ultrasonic waves in the passenger compartment. The intruder sensor detects differences in the ultrasonic waves (reflected waves) that are output and bounced off a target object.
2. When a difference in reflected waves occurs by movement in the vehicle (intruder), the CPU calculates the level of difference.
3. If the differences meet certain criteria, the intruder sensor sends a detection signal to the BCM.

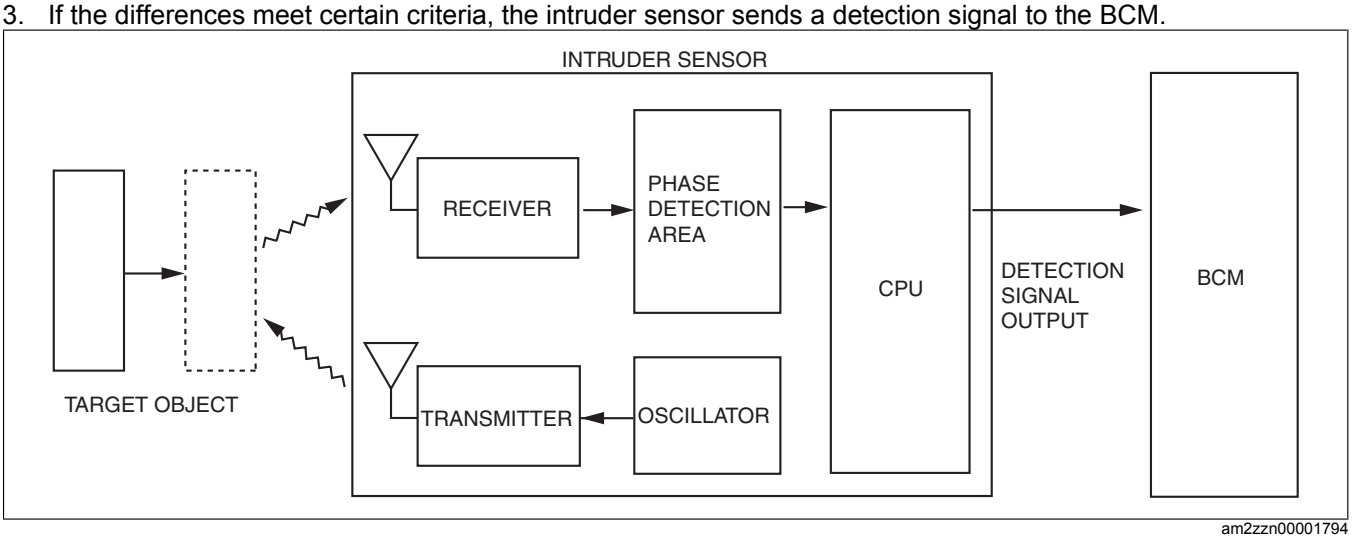

am2zzn00001794

Fail-safe
- Not applicable