FRONT DOOR LOCK-LINK SWITCH INSPECTION

id091400005700


LH

1. Perform the front door glass preparation. (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the following parts:
   (1) Power window main switch (Driver's side)/Power window subswitch (Passenger's side) (See POWER WINDOW MAIN SWITCH INSPECTION.) (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
   (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
   (3) Front inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
   (4) Front door glass (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
   (5) Front door module panel (See FRONT DOOR MODULE PANEL REMOVAL/INSTALLATION.)
   (6) Front door key cylinder (See FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION.)
   (7) Front door latch and lock actuator (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
4. When the door lock knob cable is pulled or pressed in, verify that the continuity is as indicated in the table.

○—○ : Continuity

Lock knob position	Terminal		
	D	J	B
Lock	○	○	
Unlock		○	○

am3uuw00009820

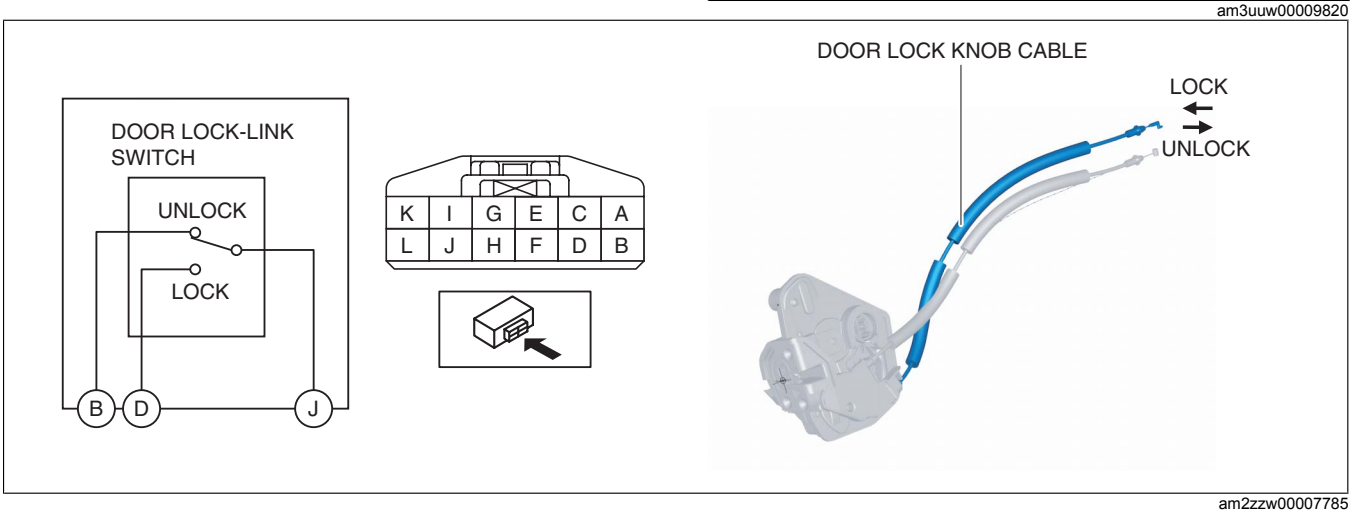

am2zzw00007785

- If not as indicated in the table, replace the front door latch and lock actuator. (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

RH


1. Perform the front door glass preparation. (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the following parts:
   (1) Power window main switch (Driver's side)/Power window subswitch (Passenger's side) (See POWER WINDOW MAIN SWITCH INSPECTION.) (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
   (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
   (3) Front inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
   (4) Front door glass (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
   (5) Front door module panel (See FRONT DOOR MODULE PANEL REMOVAL/INSTALLATION.)
   (6) Front door key cylinder (See FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION.)
   (7) Front door latch and lock actuator (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

4. When the door lock knob cable is pulled or pressed in, verify that the continuity is as indicated in the table.

○—○ : Continuity

Lock knob position	Terminal		
	J	D	L
Lock	○—○		
Unlock		○—○	

am3uuw00009822

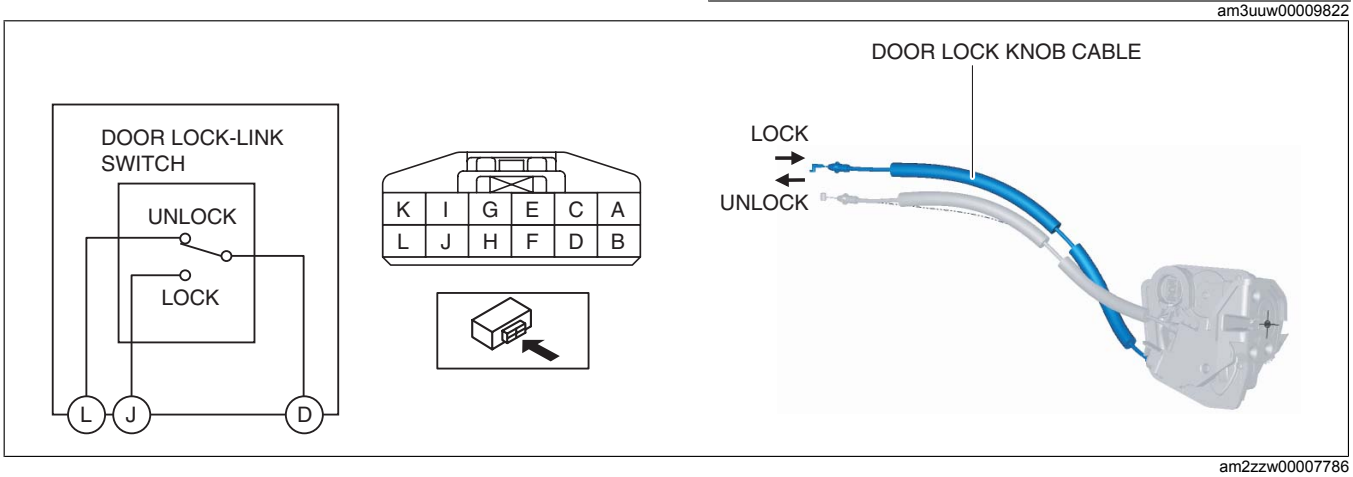

am2zzw00007786

- If not as indicated in the table, replace the front door latch and lock actuator. (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)