REAR DOOR LOCK-LINK SWITCH INSPECTION

id091400005800


LH

1. Fully lower the rear door glass.
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the following parts:
   (1) Power window subswitch (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
   (2) Rear door trim (See REAR DOOR TRIM REMOVAL/INSTALLATION.)
   (3) Rear inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
   (4) Rear door latch and lock actuator (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
4. If the door lock condition is to be inspected, pull the door lock knob cable, or press it in.
5. Verify that the continuity is as indicated in the table.

○—○ : Continuity

Lock knob position	Terminal		
	D	J	B
Lock	○	○	
Unlock		○	○

am3uuw00009824

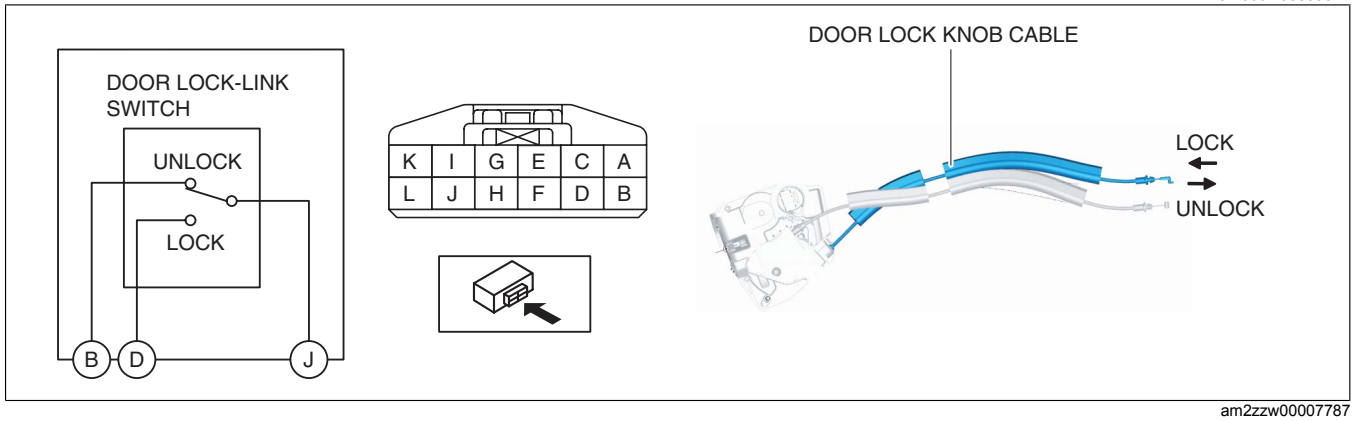

am2zzw00007787

- If not as indicated in the table, replace the rear door latch and lock actuator. (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

RH


1. Fully lower the rear door glass.
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the following parts:
   (1) Power window subswitch (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
   (2) Rear door trim (See REAR DOOR TRIM REMOVAL/INSTALLATION.)
   (3) Rear inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
   (4) Rear door latch and lock actuator (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
4. If the door lock condition is to be inspected, pull the door lock knob cable, or press it in.

5. Verify that the continuity is as indicated in the table.

: Continuity

Lock knob position	Terminal		
	J	D	L
Lock	○—○		
Unlock		○—○	○—○

am3uuw00009826

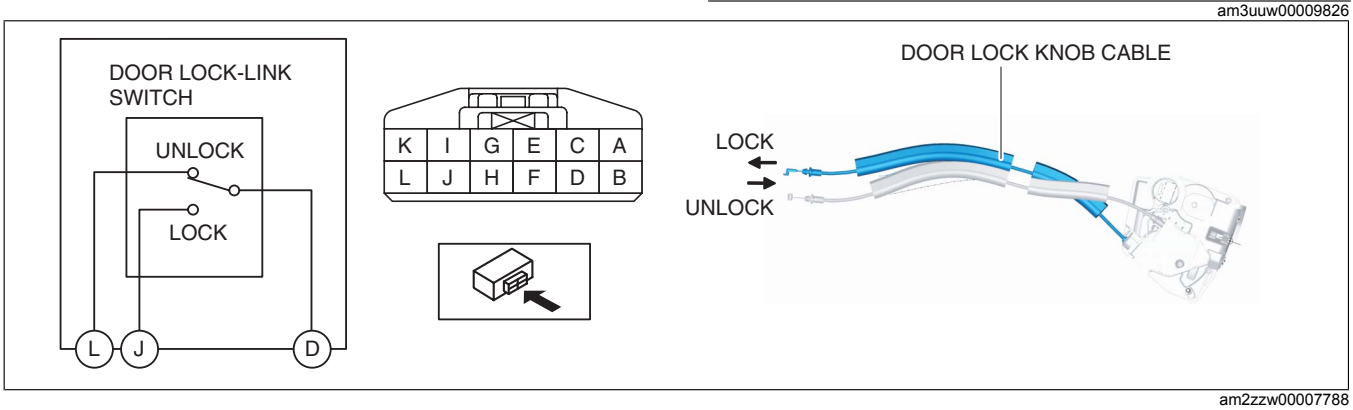

am2zzw00007788

- If not as indicated in the table, replace the rear door latch and lock actuator. (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)