## PUSH BUTTON START

id091400006000

### Purpose

- By pressing the switch ON/OFF, the push button start notifies the start stop unit of the driver power supply switching operation.

### Function

#### Push button start indicator light


- If the push button start indicator light detects the engine switch condition, a malfunction, or the steering lock cannot be released, it indicates the driver by turning on/flashing the light.

#### START/STOP/ENGINE indicator light

- The push button start turns on the characters to improve visibility of the button.

### Construction

- The push button start is located on the meter hood.
- Two types of switches are integrated in the push button start.
- The push button start has the following integrated indicators. For the illumination/flash condition of the indicator, refer to the [KEYLESS ENTRY SYSTEM]/[ADVANCED KEYLESS ENTRY SYSTEM] OR [PUSH BUTTON START SYSTEM]. (See KEYLESS ENTRY SYSTEM.) (See ADVANCED KEYLESS ENTRY SYSTEM.) (See PUSH BUTTON START SYSTEM [KEYLESS ENTRY SYSTEM].) (See PUSH BUTTON START SYSTEM [ADVANCED KEYLESS ENTRY SYSTEM].)
  - — ACC indicator
  - — ON indicator
  - — Indicator (green)
  - — Indicator (amber)
- The push button start is built into the coil antenna. (See COIL ANTENNA.)

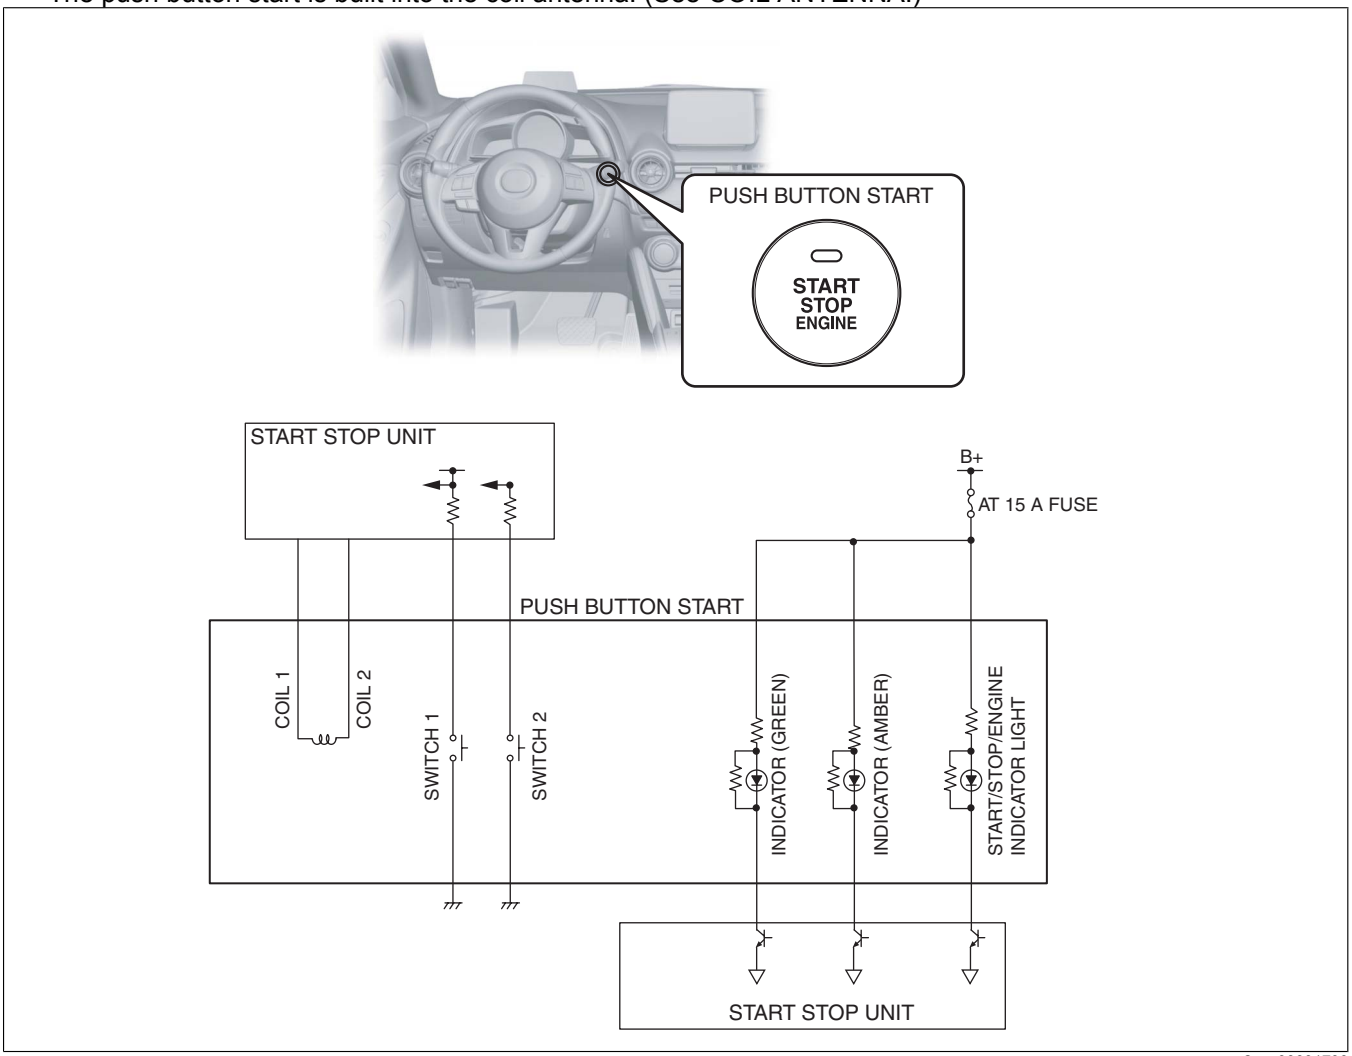


am2zzn00001799


**Operation**
- When the push button start is pressed, switches 1 and 2 turn on (contact point: closed), and when released, it turns off (contact point: open).

**Push button start indicator light**
**Green illumination**
- Illuminates if the conditions necessary for engine-start are met.

**Green flashing**
- Flashes when the steering lock cannot be released.


**Amber illumination**
- Turns on when the ignition is switched ON (engine off) or to ACC.

**Amber flashing**
- Flashes when a malfunction is detected.

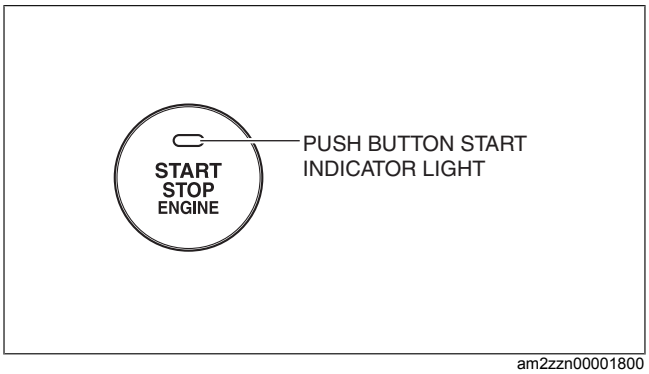

am2zzn00001800

**START/STOP/ENGINE indicator light**
- When a door is open/closed, the START/STOP/ENGINE indicator light turns on when the headlights are turned on.

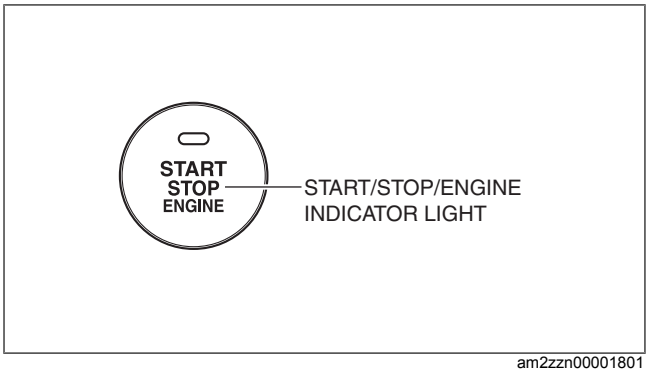

am2zzn00001801

**Fail-safe**
- Not applicable