PUSH BUTTON START INSPECTION

id091400006900

Resistance Inspection


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the upper column cover. (See COLUMN COVER REMOVAL/INSTALLATION.)
3. Remove the meter hood. (See METER HOOD REMOVAL/INSTALLATION.)
4. Remove the push button start. (See PUSH BUTTON START REMOVAL/INSTALLATION.)
5. Verify that the continuity between the push button start terminals is as indicated in the table.

: Continuity

Test condition	Terminal			
	C	E	G	I
Button pressed	○		○	
		○		○
Button released				

am3uuw00009904


- If not as indicated in the table, replace the push button start. (See PUSH BUTTON START REMOVAL/INSTALLATION.)

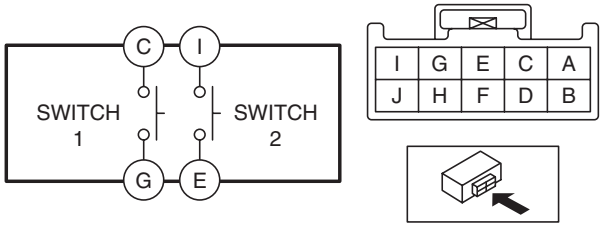

am3uuw00009903


LED Illumination Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the upper column cover. (See COLUMN COVER REMOVAL/INSTALLATION.)
3. Remove the meter hood. (See METER HOOD REMOVAL/INSTALLATION.)
4. Remove the push button start. (See PUSH BUTTON START REMOVAL/INSTALLATION.)
5. Apply battery positive voltage and connect the ground to the push button start terminals and verify that the LED illuminates as indicated in the table.

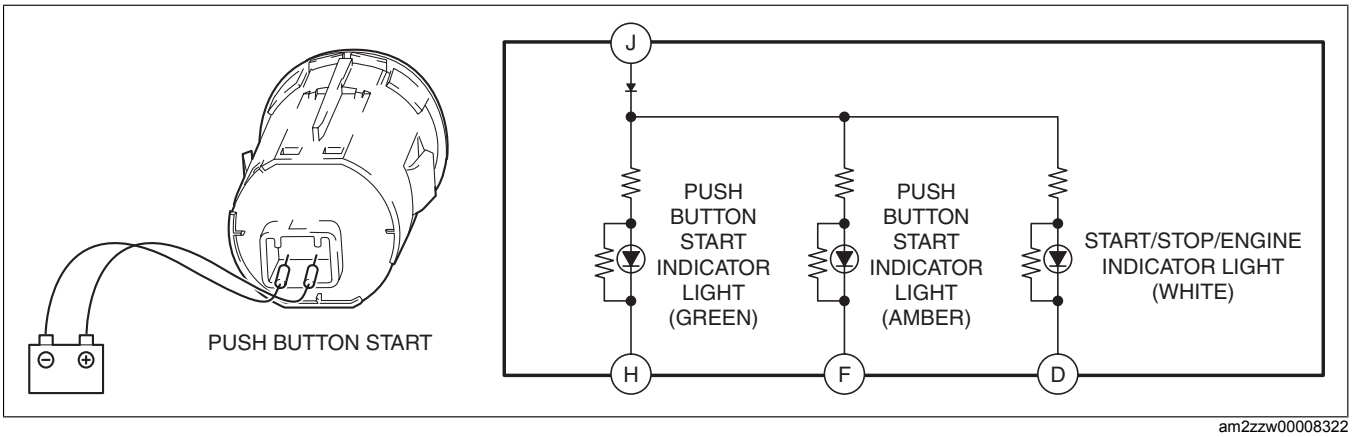

am2zzw00008322

- If the LED does not illuminate as indicated in the table, replace the push button start. (See PUSH BUTTON START REMOVAL/INSTALLATION.)

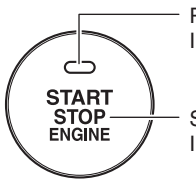

PUSH BUTTON START INDICATOR LIGHT

START/STOP/ENGINE INDICATOR LIGHT

B+ terminal	Ground terminal	Illumination positions (Color)
J	D	START/STOP/ENGINE indicator light (White)
	F	Push button start indicator light (Amber)
	H	Push button start indicator light (Green)

am2zzw00008323