KEYLESS ANTENNA [ADVANCED KEYLESS ENTRY SYSTEM]

id091400108033

Purpose


- Outputs a request signal and specifies the remote transmitter location.

Function

- The keyless antenna outputs request signals to the inside and outside of the vehicle based on the signals from the LF control unit.

Construction/Operation


- The antennas for request signal output form the request signal output range at 5 locations.

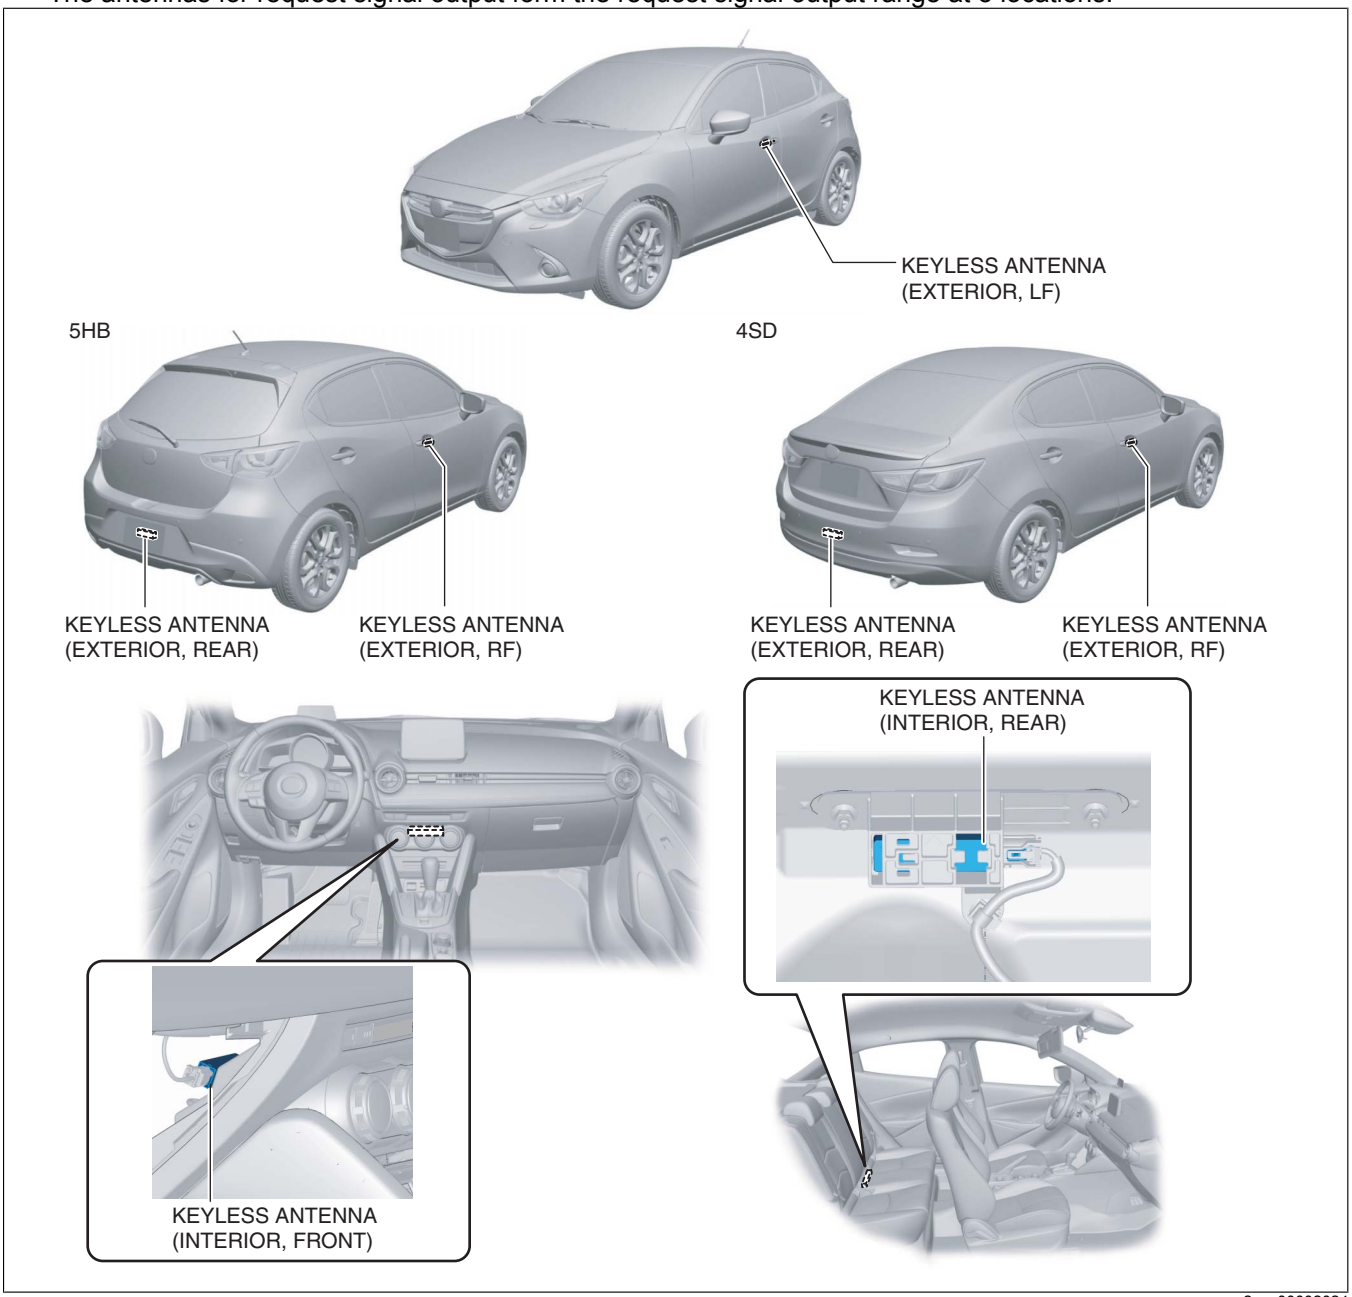

am2zzn00002024


Request signal output range

- The keyless antennas for the vehicle exterior (LF, RF, rear) form the request signal output area in the range of an **approx. 80 cm** radius from each location and communicate with the remote transmitter.

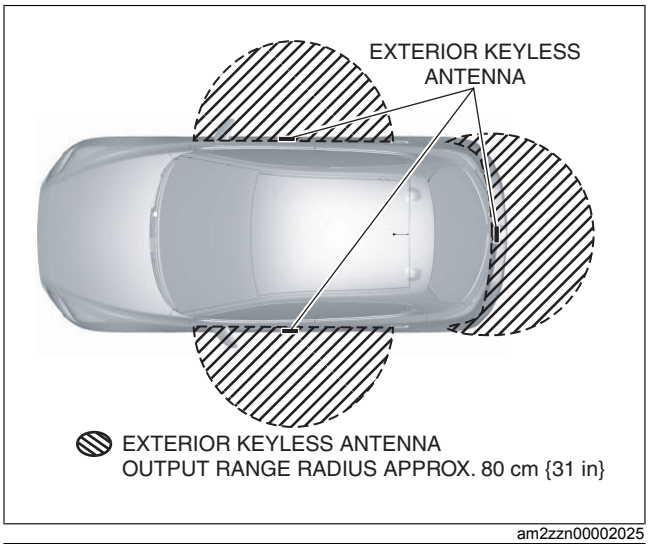

am2zzn00002025

- The keyless antennas for the vehicle interior (front, rear) form the output range inside the vehicle.

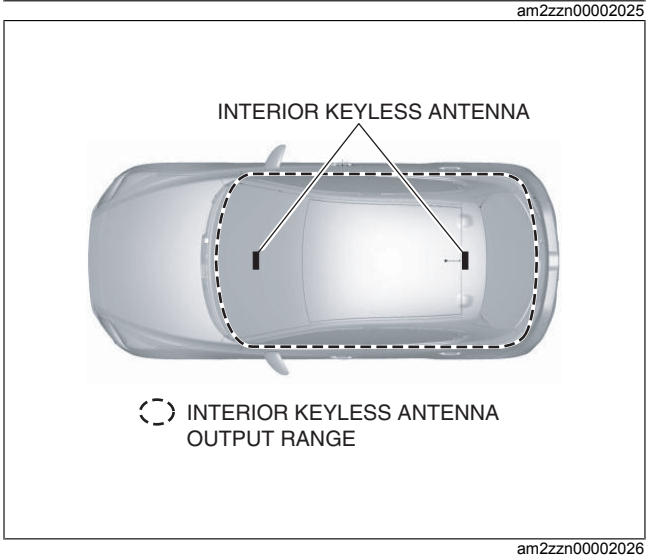

am2zzn00002026

Fail-safe

- Not applicable