
KEYLESS ANTENNA [KEYLESS ENTRY SYSTEM]

id0914001080b3

Purpose
- Outputs a request signal and specifies the remote transmitter location.

Function
- The keyless antennas output request signals based on the signals from the start stop unit.

Construction/Operation
- Request signals are output by the keyless antenna installed in the rear console to produce the keyless antenna output range shown in the figure.

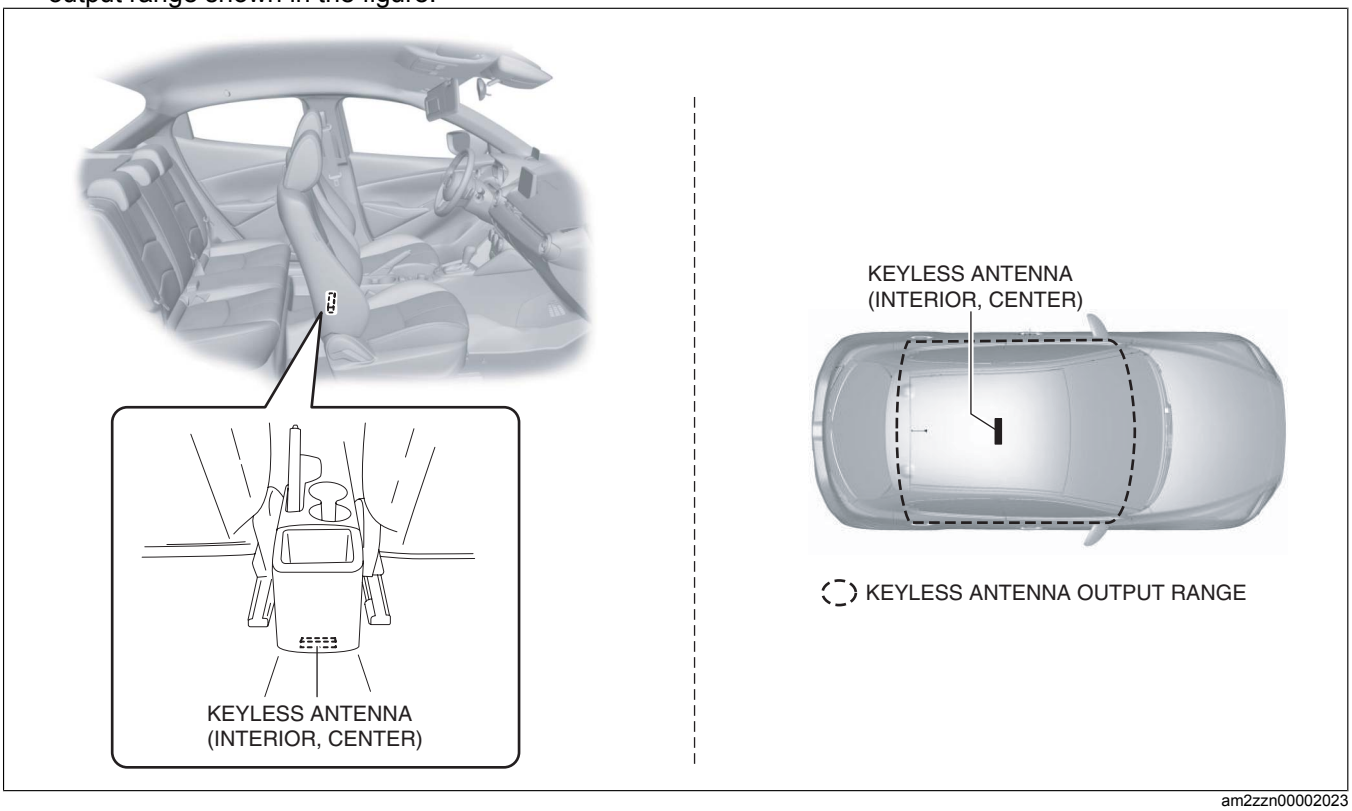

am2zzn00002023

Fail-safe
- Not applicable