
FRONT DOOR LOCK-LINK SWITCH

id091400108500

Purpose
- Switches on/off in conjunction with the driver's door lock knob lock/unlock, and the driver's front door lock/unlock condition is output to the BCM.

Function
- The door lock-link switch contact point changes in conjunction with the driver's door lock knob lock/unlock operation.

Construction
- The driver's door lock knob and door lock-link switch are connected by the door lock-link cable, and are built into the driver's door front door latch and lock actuator.

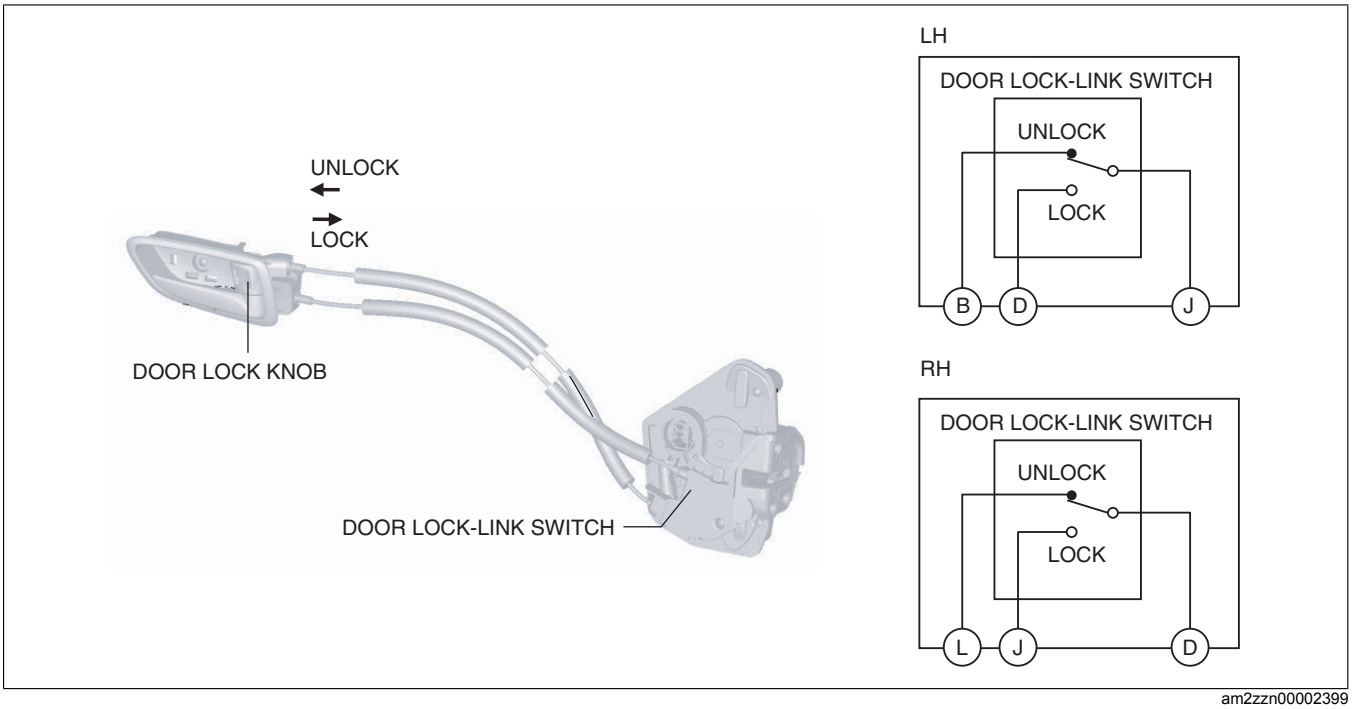

am2zzn00002399

Operation
Lock operation
- When the driver's door lock knob is turned to the lock position, the door lock-link cable is pressed, and the door lock-link switch is switched to the lock side.

Unlock operation
- When the driver's door lock knob is turned to the unlock position, the door lock-link cable is pulled, and the door lock-link switch is switched to the unlock side.

Fail-safe
- Not applicable