
KEY CYLINDER SWITCH

id091400108600

Purpose
- Turns on/off in conjunction with the lock/unlock of the front door key cylinder so that the key cylinder operation condition is output to the BCM.

Function
- The key cylinder switch contact point changes in conjunction with the front door key cylinder lock/unlock operation.

Construction
- Built into the driver's side front door latch and lock actuator.
- The front door key cylinder is connected to the front door latch and lock actuator, and the front door key cylinder is rotated to directly switch the key cylinder switch.
- For the front door key cylinder, the switch contacts according to the lock/unlock operation.

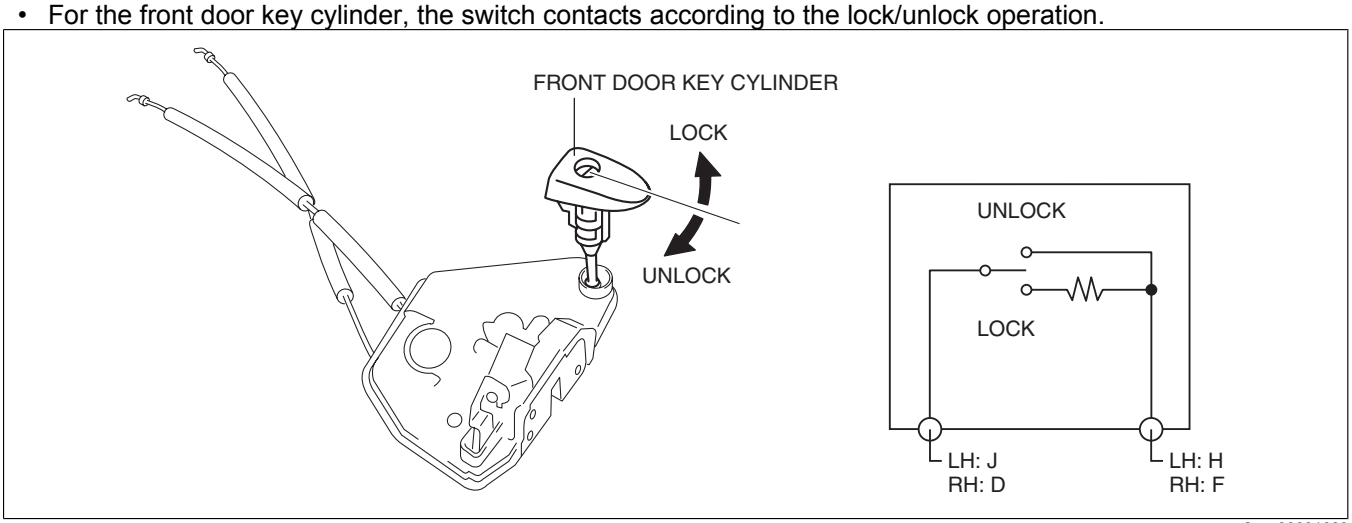

am2zzn00001669

Operation
Lock operation
- When the key is inserted in the front door key cylinder and it is rotated in the lock direction, the key cylinder switch switches to the lock side, and the lock-side switch turns on (contact point: Closed).

Unlock operation
- When the key is inserted in the front door key cylinder and it is rotated in the unlock direction, the key cylinder switch switches to the unlock side, and the unlock-side switch turns on (contact point: Closed).

Fail-safe
- Not applicable