START STOP UNIT REMOVAL/INSTALLATION

id091400110300

Warning

- **Handling the driver-side air bag module improperly can accidentally operate (deploy) the air bag module, which may seriously injure you. Read the SRS air bag system service warnings and cautions before handling the air bag module. (See AIR BAG SYSTEM SERVICE WARNINGS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE WARNINGS [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See AIR BAG SYSTEM SERVICE CAUTIONS [STANDARD DEPLOYMENT CONTROL SYSTEM].)**

Caution


- **Never remove bolts and screws other than the bolt in Steps 10 and 11. Otherwise, it will cause internal damage and the steering lock cannot be unlocked, resulting in the inability to perform the start-stop unit removal/installation.**
- **If configuration is not performed when the start stop unit is replaced with a new one, the vehicle specification information is not stored in the start stop unit and the system will not operate normally.**
- **When performing configuration, it is necessary to read the vehicle specification information from the start stop unit before replacing it. Connect the M-MDS to the vehicle and perform vehicle identification before removing the start stop unit. The vehicle specification information is temporarily stored in the M-MDS.**

Note

- The start stop unit prior to replacement stores the vehicle specification information.
- A new start stop unit does not store any vehicle specification information.
- If the vehicle specification information from the start stop unit prior to replacement cannot be read, perform the configuration using As-Built data.
- When removing the driver-side air bag module, it is necessary to rotate the steering wheel. If the ignition has been switched off with the driver's door closed, the steering wheel will be locked. Perform the procedure from Steps 2-4 so that the steering wheel will not be locked.


1. When replacing the start stop unit, perform the configuration. (See START STOP UNIT CONFIGURATION (USING READ/WRITE FUNCTION).)
2. Switch the ignition ON (engine off or on).
3. Open the driver's door.
4. Switch the ignition off.
5. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
6. Remove the following parts:
   (1) Driver-side air bag module (See DRIVER-SIDE AIR BAG MODULE REMOVAL [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE REMOVAL [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See DRIVER-SIDE AIR BAG MODULE INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM].)
   (2) Steering wheel (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
   (3) Column cover (See COLUMN COVER REMOVAL/INSTALLATION.)
   (4) Meter hood (See METER HOOD REMOVAL/INSTALLATION.)
   (5) Clock spring (See CLOCK SPRING REMOVAL/INSTALLATION [TWO-STEP DEPLOYMENT CONTROL SYSTEM] .) (See CLOCK SPRING REMOVAL/INSTALLATION [STANDARD DEPLOYMENT CONTROL SYSTEM] .)
   (6) Wiper and washer switch (See WIPER AND WASHER SWITCH REMOVAL/INSTALLATION.)
   (7) Light switch (See LIGHT SWITCH REMOVAL/INSTALLATION.)

7. Disconnect the connector.
8. While pressing the tabs of the clip in the direction of arrow (1) shown in the figure, press it in the direction of arrow (2) to detach the connector tabs from the start stop unit.
9. Remove the wiring harness clip from the start stop unit.

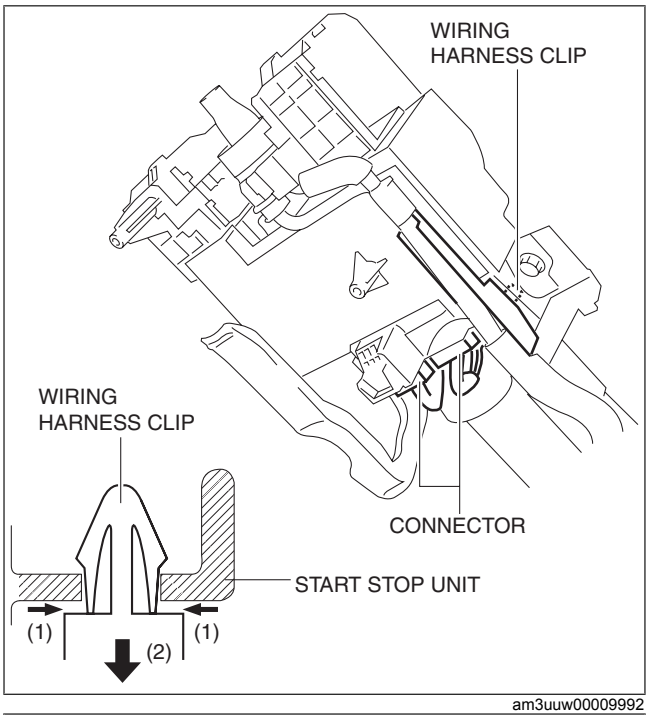

am3uuw00009992


10. Make a groove on the heads of the bolts by punching them with a chisel using a hammer.
11. Remove the bolts by rotating them counterclockwise.

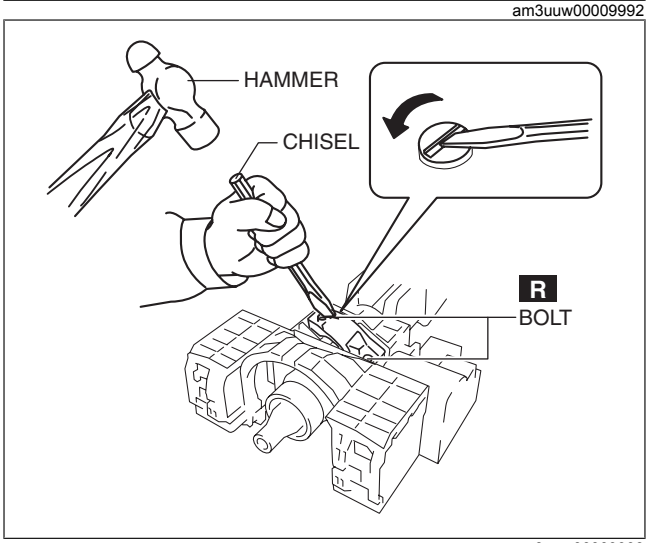

am3uuw00009993

12. Remove the start stop unit from the steering shaft by pulling it in the direction of the arrow shown in the figure.
13. Install in the reverse order of removal. (See Start Stop Unit Installation Note.)
14. Perform the following when replacing the start stop unit.
    - Start stop unit configuration. (See START STOP UNIT CONFIGURATION (USING READ/ WRITE FUNCTION).)

Note
- If configuration cannot be performed by reading/writing of the vehicle specification information, perform the configuration using As-Built information after replacing the start stop unit. (See START STOP UNIT CONFIGURATION (USING AS-BUILT DATA).)

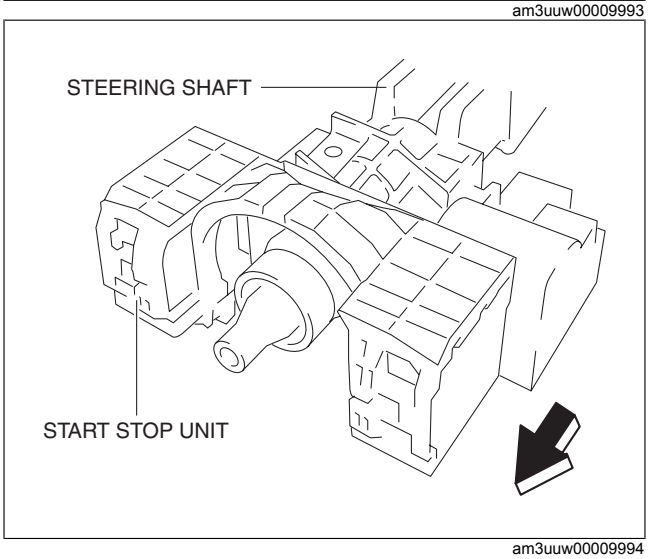


am3uuw00009994

- Immobilizer system-related parts programming. (See IMMOBILIZER SYSTEM-RELATED PARTS PROGRAMMING.)

Start Stop Unit Installation Note

1. Temporarily install the start stop unit to the steering shaft using new start stop unit installation bolts.
2. Tighten the start stop unit installation bolts until the heads break off.

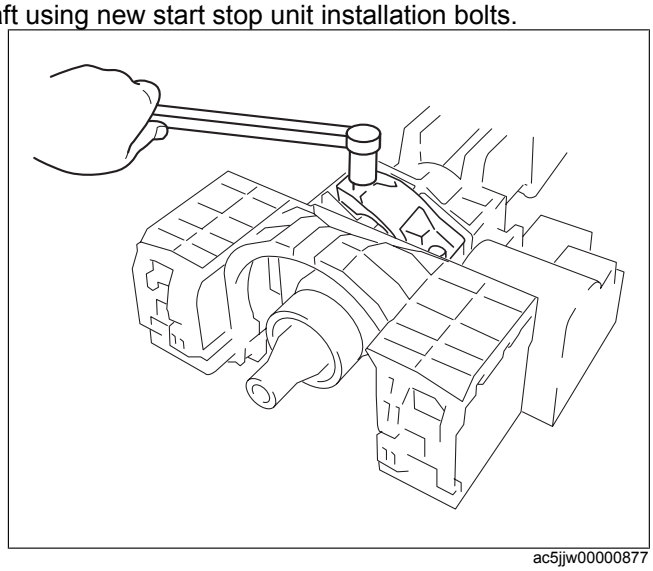

ac5jjw00000877