
LF CONTROL UNIT INSPECTION

id091400110600

1. Remove the front scuff plate (RH). (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
2. Remove the front side trim (RH). (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
3. Verify that the voltages of each of the terminals are as indicated in the terminal voltage table (reference).
   - If the voltage is not as specified in the terminal voltage table (reference), inspect the parts under Inspection item(s) and related wiring harnesses.
     — If the system does not work normally even though the inspection items or related wiring harnesses do not have any malfunction, replace the LF control unit. (See LF CONTROL UNIT REMOVAL/INSTALLATION.)

Terminal Voltage Table (Reference)

LF CONTROL UNIT WIRING HARNESS SIDE CONNECTOR

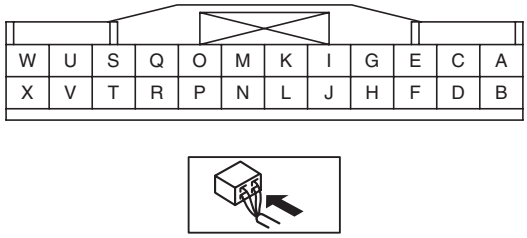

am2zzw00008325


Terminal	Signal name	Connected to	Measurement conditions	Voltage (V)	Inspection item (s)
A	Request switch signal (RF)	Request switch (RF)	When request switch (RF) is pressed	1.0 or less	• Request switch (RF)
			When request switch (RF) is not pressed	5.0	
B	Power supply	INTERIOR 15 A fuse	Under any condition	B+	• ROOM 25A fuse • INTERIOR 15 A fuse • Battery • DC-DC converter*1
C	Request switch signal (LF)	Request switch (LF)	When request switch (LF) is pressed	1.0 or less	• Request switch (LF)
			When request switch (LF) is not pressed	5.0	
G	Start stop unit signal	Start stop unit	Because this terminal is for communication, integrity determination using terminal voltage inspection is not possible.		
H	Keyless beeper power supply	Keyless beeper	When lock button on remote transmitter is pressed or front door request switch is pressed to lock	Wave pattern (See Pattern 1.)	• Keyless beeper
			Except above	1.0 or less	
I	Start stop unit signal	Start stop unit	Because this terminal is for communication, integrity determination using terminal voltage inspection is not possible.		
J	GROUND	Keyless beeper	Under any condition	1.0 or less	• Keyless beeper
K	Keyless antenna (interior, front)	Keyless antenna (interior, front)	Because this terminal is for communication, integrity determination using terminal voltage inspection is not possible.		
L	GROUND	Body ground	Under any condition	1.0 or less	Body ground
M	Keyless antenna (interior, front)	Keyless antenna (interior, front)	Because this terminal is for communication, integrity determination using terminal voltage inspection is not possible.		
O	Keyless antenna (exterior, LF)	Keyless antenna (exterior, LF)	Because this terminal is for communication, integrity determination using terminal voltage inspection is not possible.		
Q	Keyless antenna (exterior, LF)	Keyless antenna (exterior, LF)	Because this terminal is for communication, integrity determination using terminal voltage inspection is not possible.		
S	Keyless antenna (exterior, RF)	Keyless antenna (exterior, RF)	Because this terminal is for communication, integrity determination using terminal voltage inspection is not possible.		
T	Keyless antenna (interior, rear)	Keyless antenna (interior, rear)	Because this terminal is for communication, integrity determination using terminal voltage inspection is not possible.		

Terminal	Signal name	Connected to	Measurement conditions	Voltage (V)	Inspection item (s)
U	Keyless antenna (exterior, RF)	Keyless antenna (exterior, RF)	Because this terminal is for communication, integrity determination using terminal voltage inspection is not possible.		
V	Keyless antenna (interior, rear)	Keyless antenna (interior, rear)	Because this terminal is for communication, integrity determination using terminal voltage inspection is not possible.		
W	Keyless antenna (exterior, rear)	Keyless antenna (exterior, rear)	Because this terminal is for communication, integrity determination using terminal voltage inspection is not possible.		
X	Keyless antenna (exterior, rear)	Keyless antenna (exterior, rear)	Because this terminal is for communication, integrity determination using terminal voltage inspection is not possible.		

*1 : WIth i-ELOOP

Inspection Using an Oscilloscope (Reference)
Pattern 1

- LF control unit: H (+) ↔ body ground (-)
- Oscilloscope setting: 2 V/DIV (Y), 100 ms/DIV (X), DC range

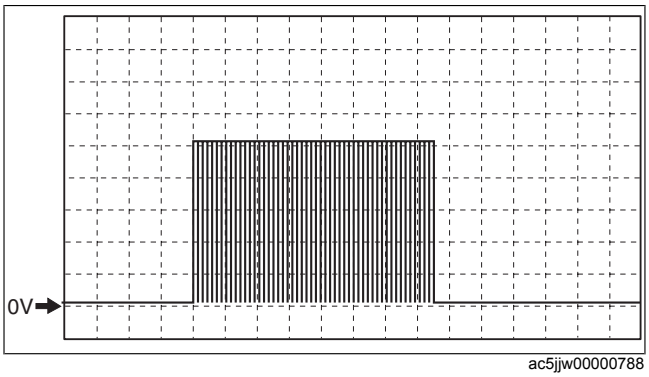

ac5jjw00000788