
## LF CONTROL UNIT

id091400111400

### Purpose
- The keyless buzzer and keyless antenna are controlled by the input/output signals from the start stop unit.


### Function
- The LF control unit controls the keyless buzzer sound based on the signal from the start stop unit.
- The LF control unit sends the request signal from the keyless antenna based on the signal from the start stop unit.

### Construction
- The LF control unit is located on the inside of the front side trim.

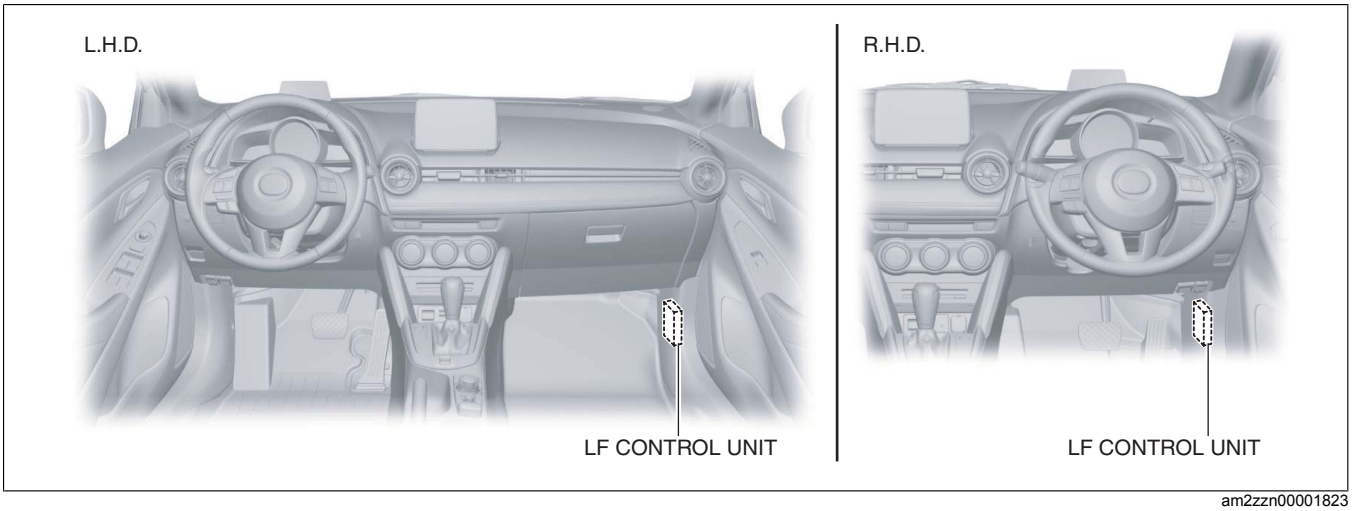



am2zzn00001823

### Operation
#### Keyless buzzer control
1. The LF control unit receives (1) a beeper sound request signal from the start stop unit.
2. When the LF control unit receives the beeper sound request signal, it sounds (2) the keyless buzzer.

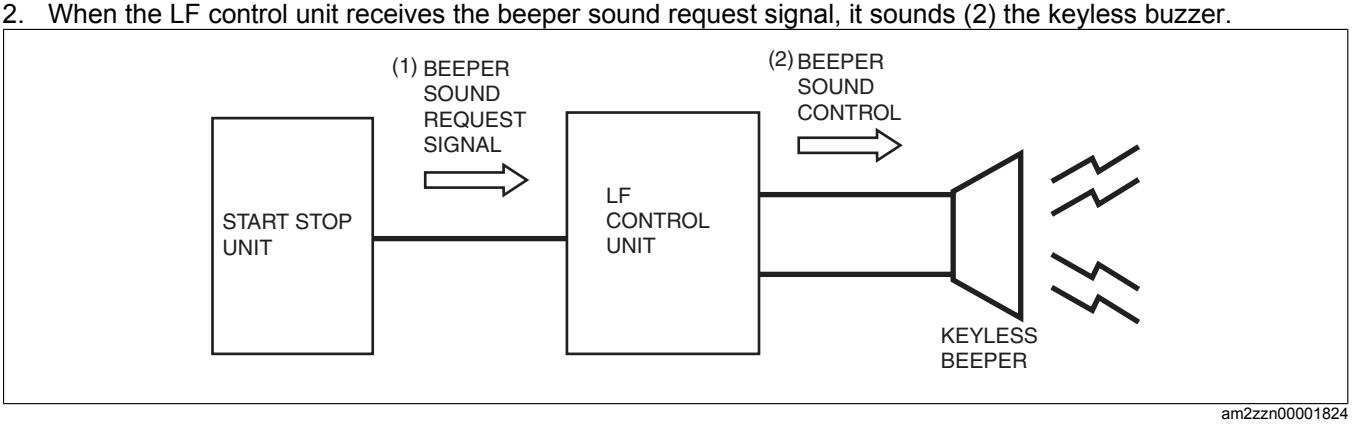


am2zzn00001824

#### Keyless antenna control
1. The LF control unit receives (1) a request output signal from the start stop unit.
2. When the LF control unit receives the request output signal, it outputs (2) the request signal from the keyless antenna.

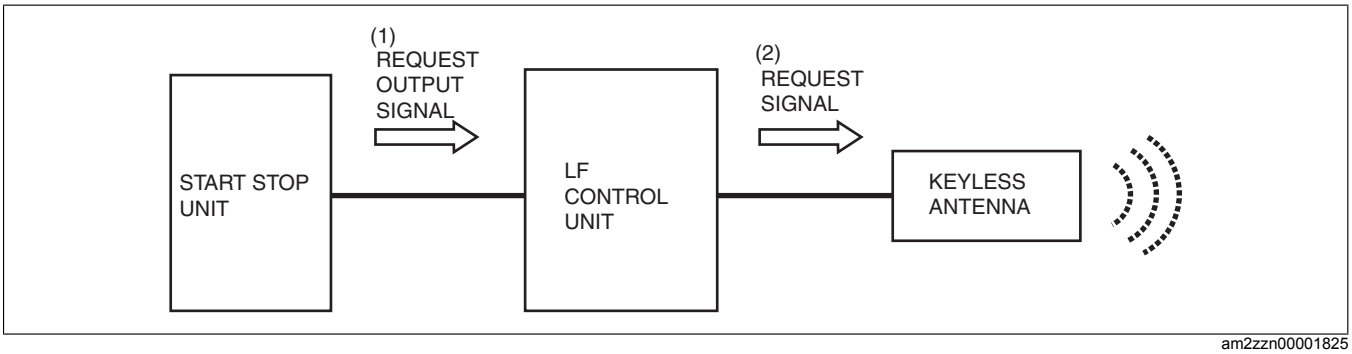


am2zzn00001825

**Fail-safe**

- Not applicable