SECURITY AND LOCKS PERSONALIZATION FEATURES SETTING PROCEDURE

id091400112900

Caution
- **The personalization feature may not be set correctly if [Not equipped] is selected in the setting displayed on the M-MDS. Do not select [Not equipped] in the setting displayed on the M-MDS.**
- **Settings of some personalization features displayed on the M-MDS cannot be switched depending on the vehicle specification.**

Advanced Keyless Entry System
Using M-MDS
1. Connect the M-MDS to DLC-2.
2. After the vehicle is identified, select the following items from the initial screen of the M-MDS.
    1. Select the “Module Programming”.
    2. Select “Programmable Parameters”.
3. Select menu in the SSU.
4. Select an item name, and then select option.

M-MDS display	Function	Initial setting	Setting contents	Control unit
Advanced keyless function.*1	The advanced keyless entry system and push button start system functions can be disabled.	Enabled.	Enabled. / Disabled.	Start stop unit
Walk Away Lock.	The out-of-area (reception area) type auto lock function can be set.	OFF	OFF / ON	Start stop unit
Auto Relock Time.	The operation start time of the auto re-lock function can be changed.	30 seconds	30 seconds / 60 seconds / 90 seconds	Start stop unit
Keyless Lock Beep Volume.	The keyless beeper volume can be adjusted.	Medium / off*2	Off / Low / Medium / High	Start stop unit


*1 : Because the push button start system function has been disabled, to start the engine press the upper part of the remote transmitter against the center of the push button start.
*2 : The initialization setting varies depending on the market and specification.

Setting method by operation of remote transmitter button
- The following setting can be changed by operation of the remote transmitter button.

M-MDS display	Function	Initial setting	Setting content	Control unit
Keyless Lock Beep Volume.	The keyless beeper volume can be adjusted.	Medium	Off / Low / Medium / High	Start stop unit

- Change the setting for the keyless beeper volume referring to the following procedure:

Note
- If any of the following conditions is met during procedure, the setting for changing the keyless beeper volume is finished.
    - — The ignition is switched to ACC or ON (engine off or on).
    - — The driver's door is closed.
    - — The liftgate is open.
    - — The remote transmitter operation is not performed for approx. 10 s.
    - — The UNLOCK button on the remote transmitter is pressed.
    - — A request switch is pressed.

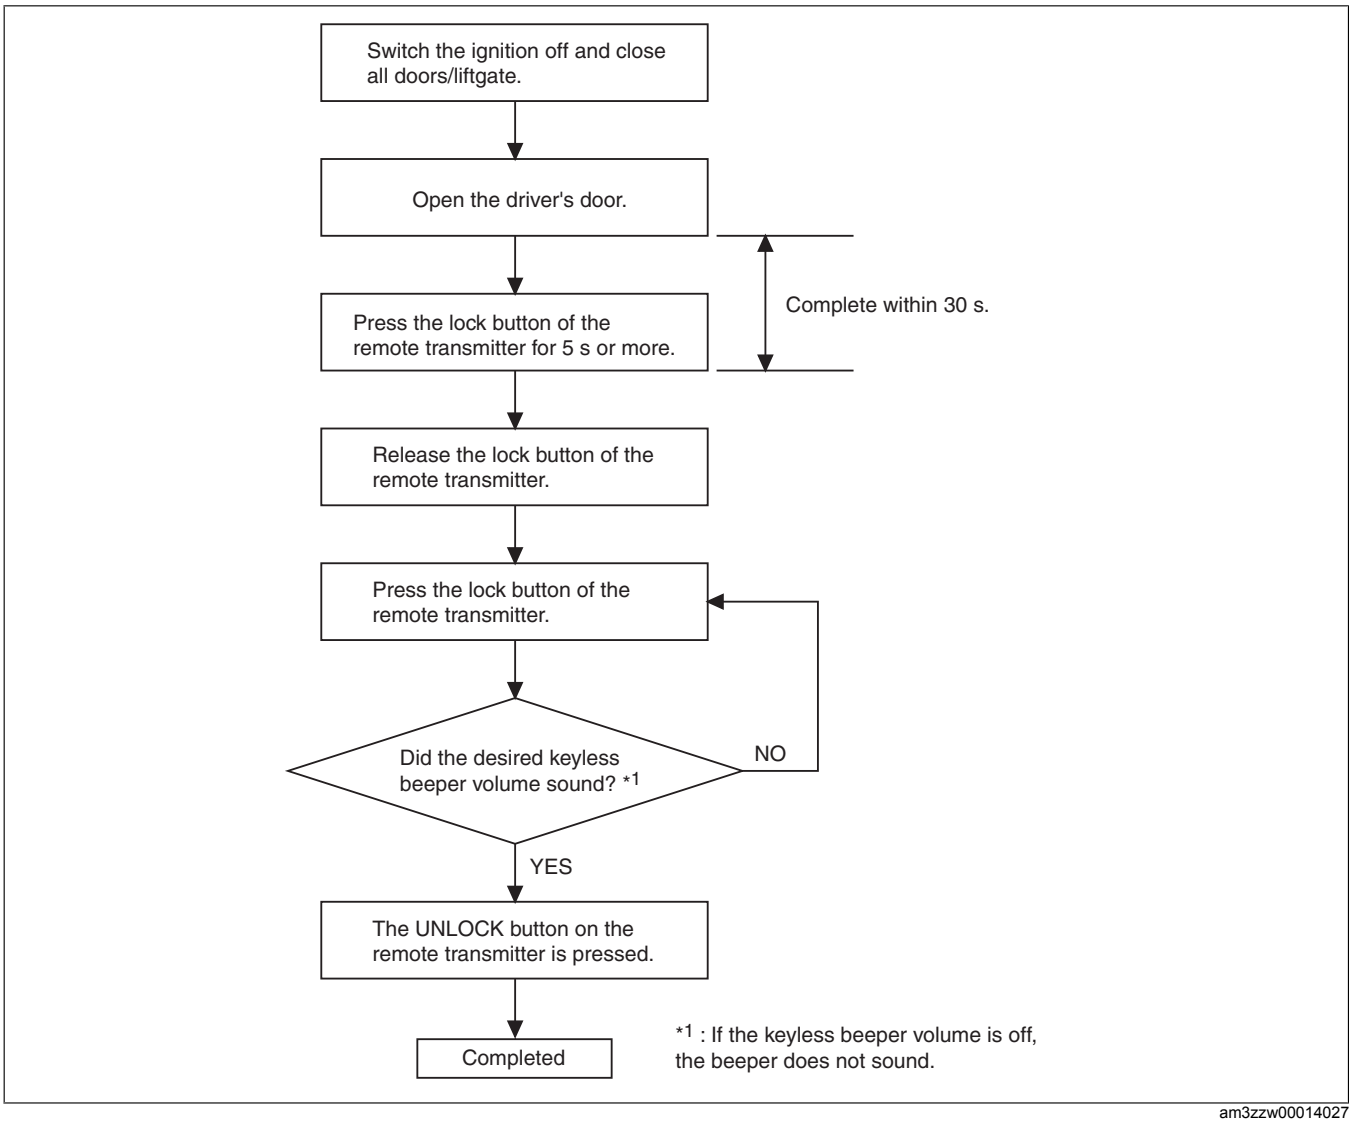

am3zzw00014027

Using center display

- (See CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE.)

Keyless Entry System
Using M-MDS

1. Connect the M-MDS to DLC-2.
2. After the vehicle is identified, select the following items from the initial screen of the M-MDS.
    1. Select the “Module Programming”.
    2. Select “Programmable Parameters”.
3. Select menu in the SSU.
4. Select an item name, and then select option.

M-MDS display	Function	Initial setting	Setting contents	Control unit
Advanced keyless function.*1	The keyless entry system and push button start system functions can be disabled.	Enabled.	Enabled. / Disabled.	Start stop unit
Auto Relock Time.	The operation start time of the auto re-lock function can be changed.	30 seconds	30 seconds / 60 seconds / 90 seconds	Start stop unit

*1 : Because the push button start system function has been disabled, to start the engine press the upper part of the remote transmitter against the center of the push button start.

Using center display

- (See CENTER DISPLAY PERSONALIZATION FEATURES SETTING PROCEDURE.)