
SECURITY AND LOCKS LOCATION INDEX

id091400510000

Locks and Openers

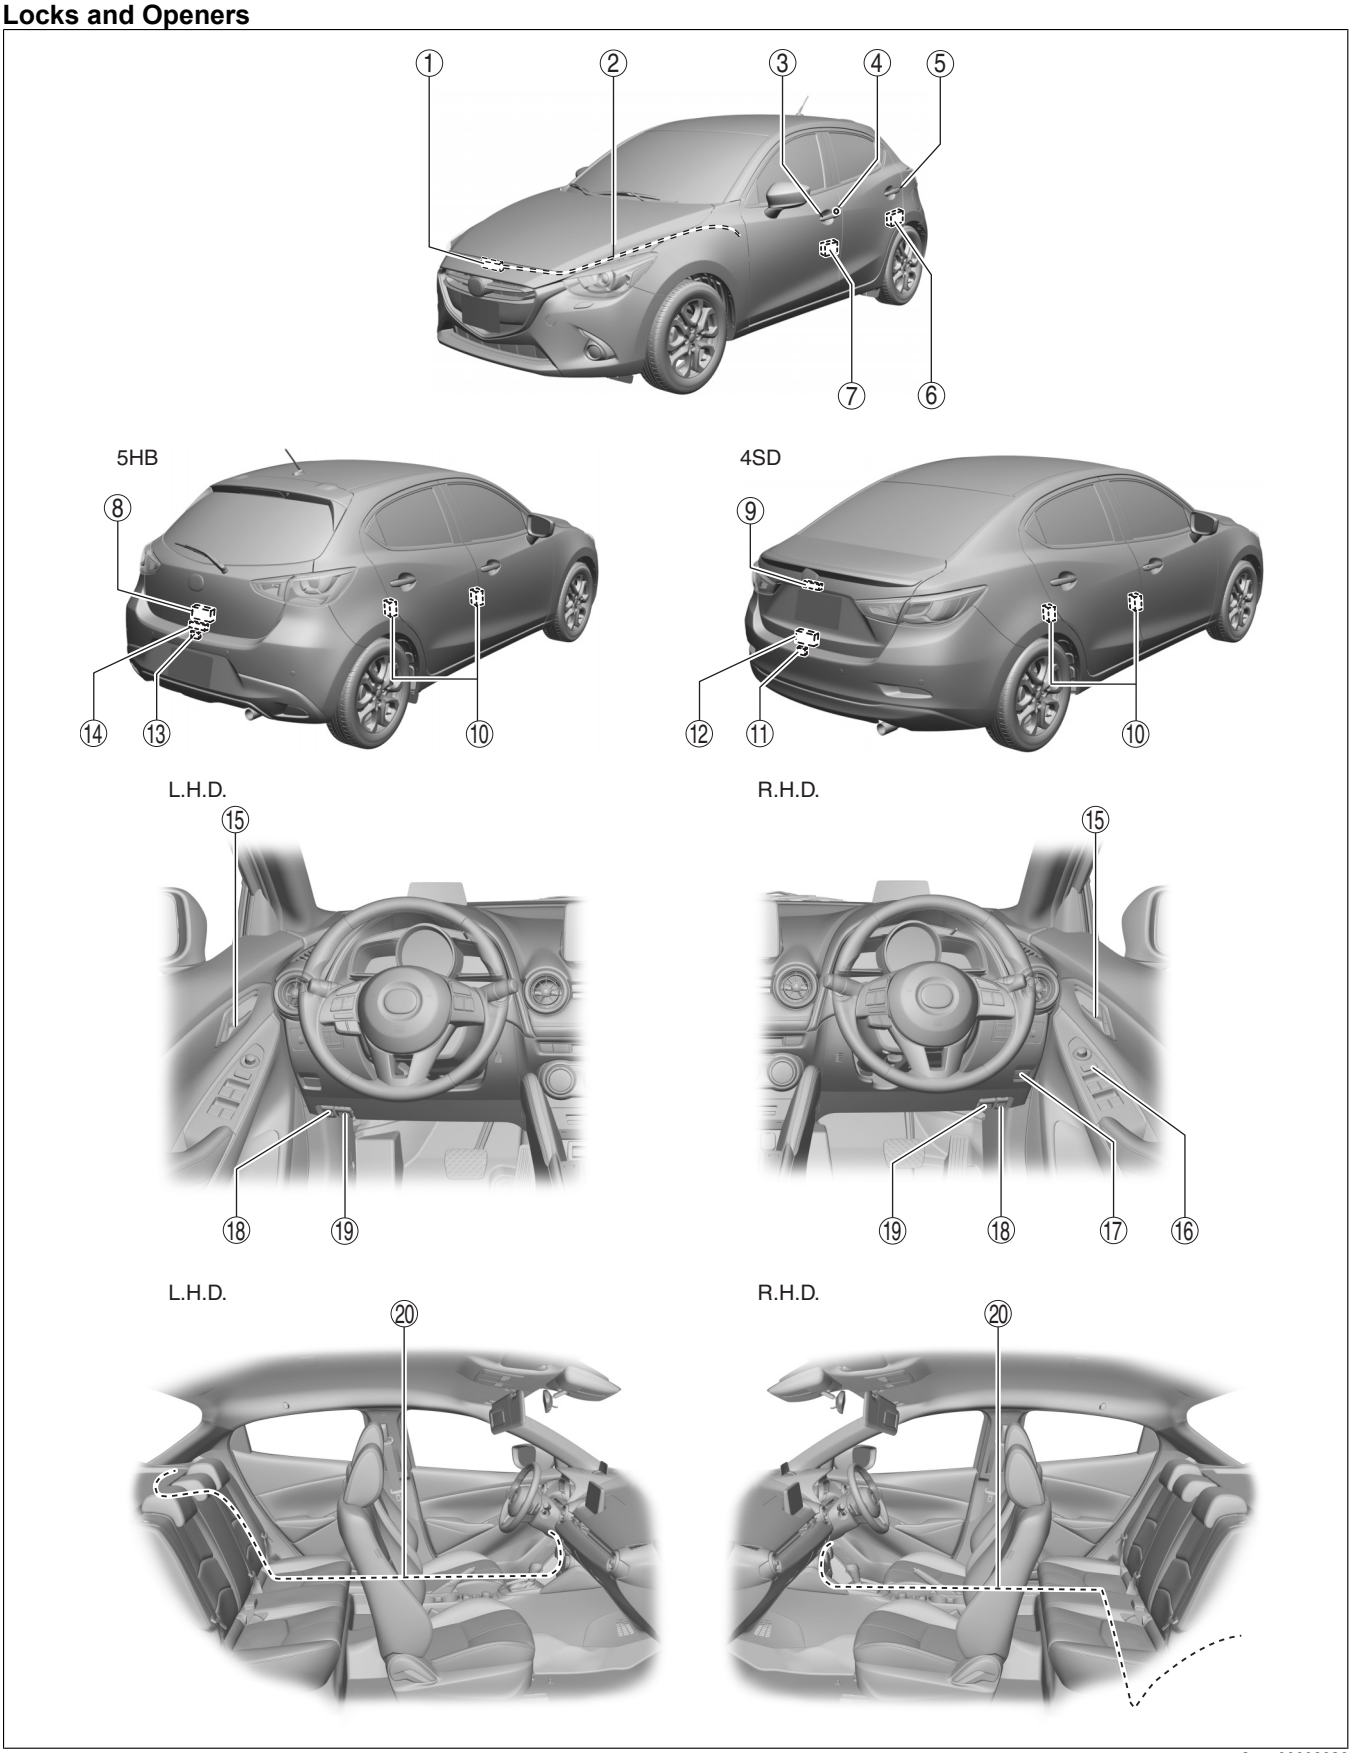


am2zzw00008326


1	Bonnet latch (See BONNET LATCH REMOVAL/INSTALLATION.) (See BONNET LATCH SWITCH INSPECTION.)
2	Bonnet release cable (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/INSTALLATION.)

3	Front outer handle (See FRONT OUTER HANDLE REMOVAL/ INSTALLATION.)
4	Front door key cylinder (See FRONT DOOR KEY CYLINDER REMOVAL/ INSTALLATION.) (See FRONT DOOR KEY CYLINDER SWITCH INSPECTION.)
5	Rear outer handle (See REAR OUTER HANDLE REMOVAL/ INSTALLATION.)
6	Rear door latch and lock actuator (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.) (See REAR DOOR LATCH AND LOCK ACTUATOR INSPECTION.) (See REAR DOOR LOCK ACTUATOR INSPECTION.) (See REAR DOOR LATCH SWITCH INSPECTION.) (See REAR DOOR LOCK-LINK SWITCH INSPECTION.)
7	Front door latch and lock actuator (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.) (See FRONT DOOR LATCH AND LOCK ACTUATOR INSPECTION.) (See FRONT DOOR LOCK ACTUATOR INSPECTION.) (See FRONT DOOR LATCH SWITCH INSPECTION.) (See FRONT DOOR LOCK-LINK SWITCH INSPECTION.)
8	Liftgate latch and lock actuator (See LIFTGATE LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.) (See LIFTGATE LATCH AND LOCK ACTUATOR INSPECTION.) (See LIFTGATE LOCK ACTUATOR INSPECTION.) (See LIFTGATE LATCH SWITCH INSPECTION.)
9	Trunk lid opener switch (See TRUNK LID OPENER SWITCH REMOVAL/ INSTALLATION.) (See TRUNK LID OPENER SWITCH INSPECTION.)
10	Door lock striker (See DOOR LOCK STRIKER REMOVAL/ INSTALLATION.)
11	Trunk lid striker (See TRUNK LID LOCK STRIKER REMOVAL/ INSTALLATION.)
12	Trunk lid latch and release actuator (See TRUNK LID LATCH AND RELEASE ACTUATOR REMOVAL/INSTALLATION.) (See TRUNK LID LATCH AND RELEASE ACTUATOR INSPECTION.) (See TRUNK LID RELEASE ACTUATOR INSPECTION.) (See TRUNK LID LATCH SWITCH INSPECTION.)
13	Liftgate lock striker (See LIFTGATE LOCK STRIKER REMOVAL/ INSTALLATION.)
14	Liftgate opener switch (See LIFTGATE OPENER SWITCH REMOVAL/ INSTALLATION.) (See LIFTGATE OPENER SWITCH INSPECTION.)
15	Inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
16	Door lock switch (See DOOR LOCK SWITCH REMOVAL/ INSTALLATION.) (See DOOR LOCK SWITCH INSPECTION.)
17	Trunk lid opener switch (interior) (See TRUNK LID OPENER SWITCH REMOVAL/ INSTALLATION.) (See TRUNK LID OPENER SWITCH INSPECTION.)
18	Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
19	Bonnet release lever (See BONNET RELEASE LEVER AND RELEASE CABLE REMOVAL/INSTALLATION.)
20	Fuel-filler lid opener cable (See FUEL-FILLER LID OPENER CABLE REMOVAL/INSTALLATION.)


Advanced Keyless Entry System / Push Button Start System / Immobilizer System

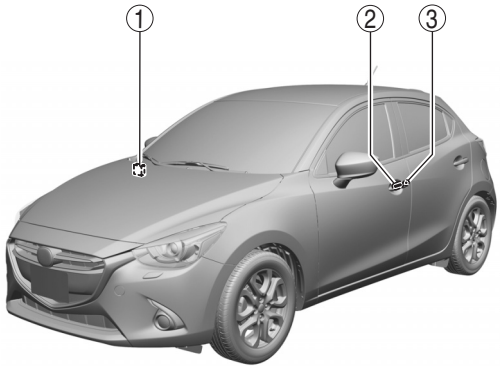


5HB

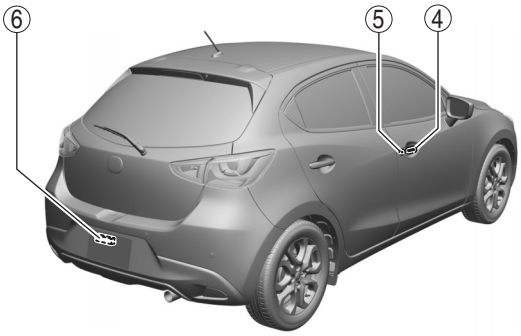


4SD

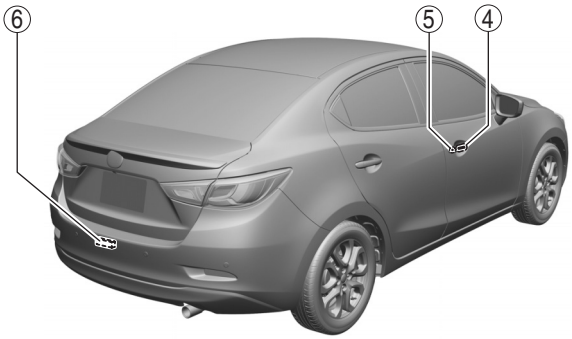


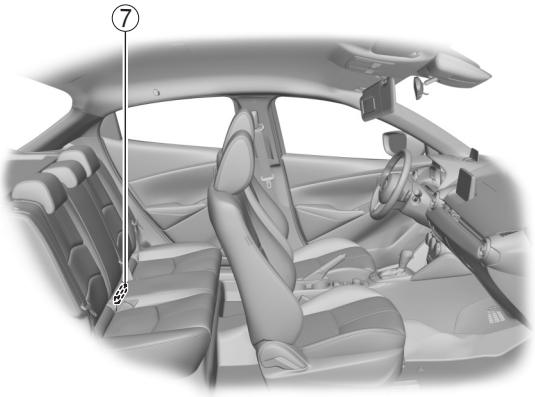


L.H.D.

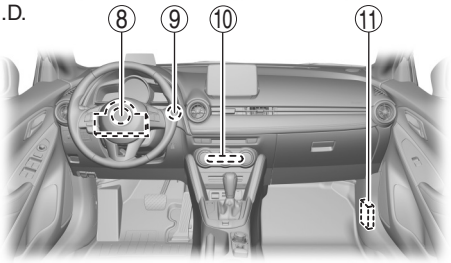


R.H.D.

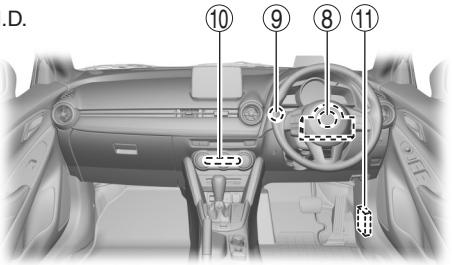


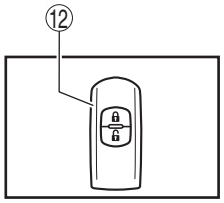

5HB

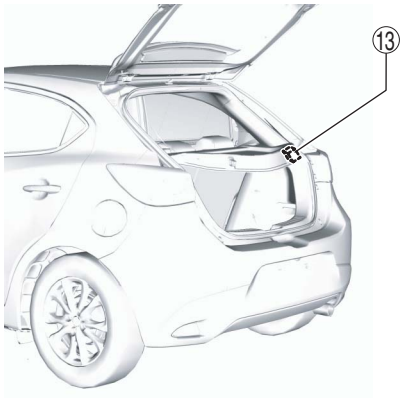


4SD

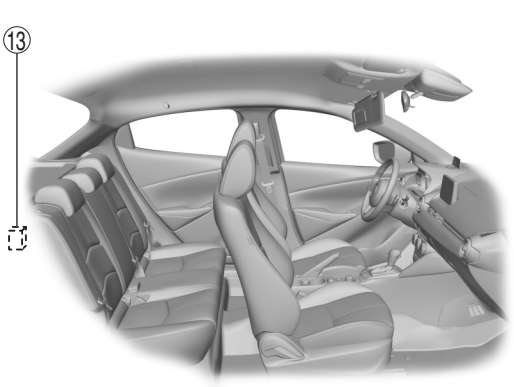

am2zzw00008327

1	Keyless beeper (See KEYLESS BEEPER REMOVAL/ INSTALLATION.) (See KEYLESS BEEPER INSPECTION.)
2	Keyless antenna (exterior, LF)) (See KEYLESS ANTENNA REMOVAL/ INSTALLATION.)
3	Request switch (LF) (See REQUEST SWITCH REMOVAL/ INSTALLATION.) (See REQUEST SWITCH INSPECTION.)
4	Keyless antenna (exterior, RF) (See KEYLESS ANTENNA REMOVAL/ INSTALLATION.)
5	Request switch (RF) (See REQUEST SWITCH REMOVAL/ INSTALLATION.) (See REQUEST SWITCH INSPECTION.)
6	Keyless antenna (exterior, rear) (See KEYLESS ANTENNA REMOVAL/ INSTALLATION.)
7	Keyless antenna (interior, rear) (See KEYLESS ANTENNA REMOVAL/ INSTALLATION.)
8	Start stop unit (See START STOP UNIT REMOVAL/ INSTALLATION.) (See START STOP UNIT INSPECTION.) (See START STOP UNIT CONFIGURATION (USING READ/WRITE FUNCTION).) (See START STOP UNIT CONFIGURATION (USING AS-BUILT DATA).)
9	Push button start (See PUSH BUTTON START REMOVAL/ INSTALLATION.) (See PUSH BUTTON START INSPECTION.)
10	Keyless antenna (interior, front) (See KEYLESS ANTENNA REMOVAL/ INSTALLATION.)
11	LF control unit (See LF CONTROL UNIT REMOVAL/ INSTALLATION.) (See LF CONTROL UNIT INSPECTION.)
12	Remote transmitter (See REMOTE TRANSMITTER DISASSEMBLY/ ASSEMBLY.) (See REMOTE TRANSMITTER ID CODE REGISTRATION.) (See CLEARING REMOTE TRANSMITTER.) (See REMOTE TRANSMITTER BATTERY VOLTAGE INSPECTION.)
13	Keyless receiver (See KEYLESS RECEIVER REMOVAL/ INSTALLATION.) (See KEYLESS RECEIVER INSPECTION.)

Keyless entry system / Push Button Start System / Immobilizer system

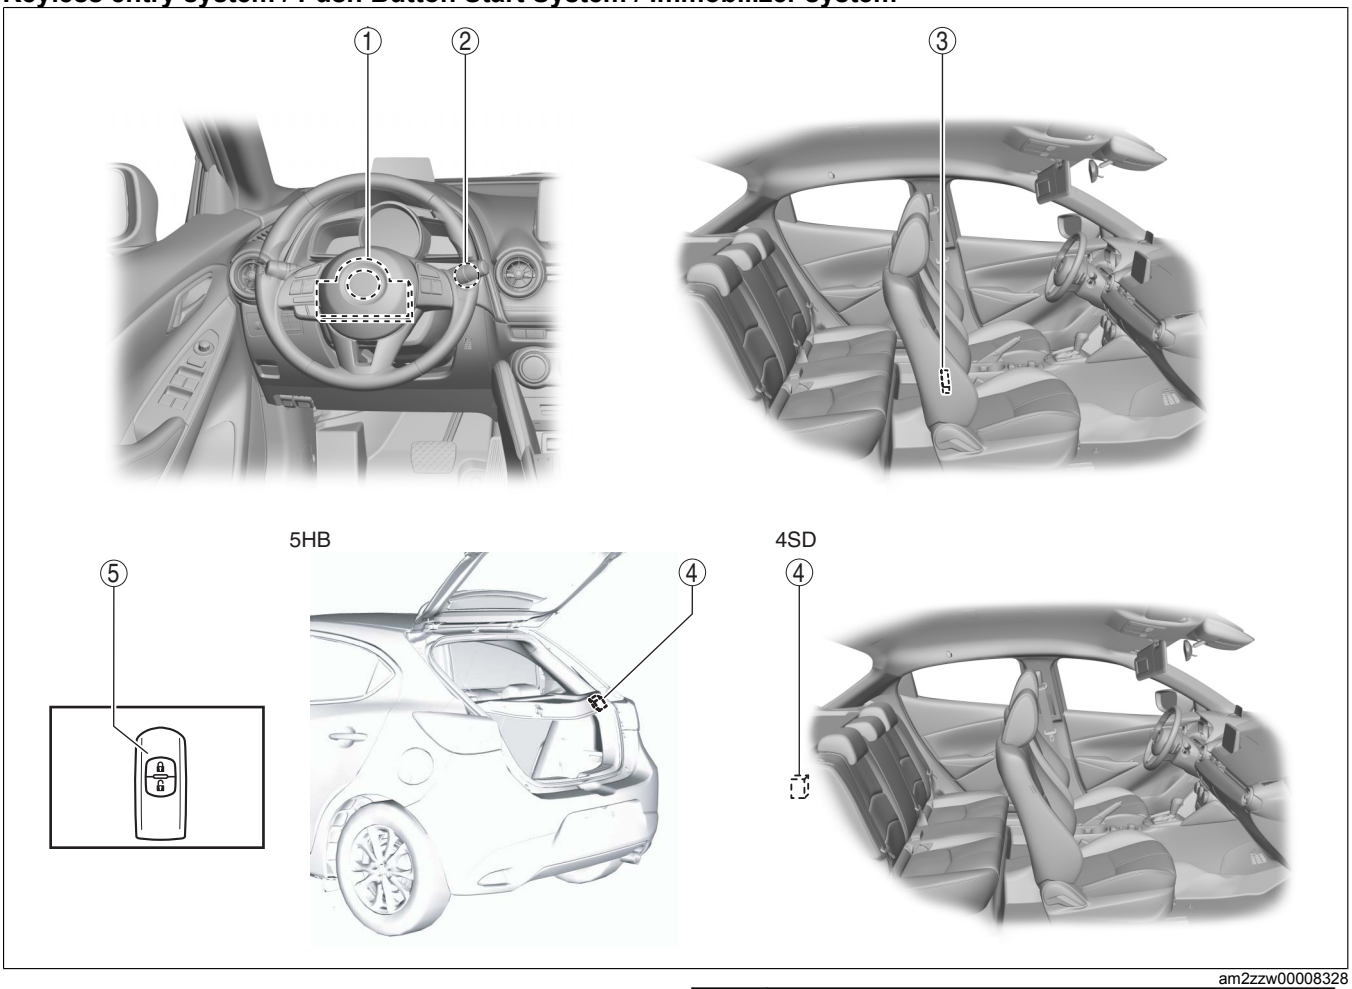


am2zzw00008328

1	Start stop unit (See START STOP UNIT REMOVAL/ INSTALLATION.) (See START STOP UNIT INSPECTION.) (See START STOP UNIT CONFIGURATION (USING READ/WRITE FUNCTION).) (See START STOP UNIT CONFIGURATION (USING AS-BUILT DATA).)
2	Push button start (See PUSH BUTTON START REMOVAL/ INSTALLATION.) (See PUSH BUTTON START INSPECTION.)
3	Keyless antenna (center) (See KEYLESS ANTENNA REMOVAL/ INSTALLATION.)

4	Keyless receiver (See KEYLESS RECEIVER REMOVAL/ INSTALLATION.) (See KEYLESS RECEIVER INSPECTION.)
5	Remote transmitter (See REMOTE TRANSMITTER DISASSEMBLY/ ASSEMBLY.) (See REMOTE TRANSMITTER ID CODE REGISTRATION.) (See CLEARING REMOTE TRANSMITTER.) (See REMOTE TRANSMITTER BATTERY VOLTAGE INSPECTION.)


Theft-deterrent System
With intruder sensor

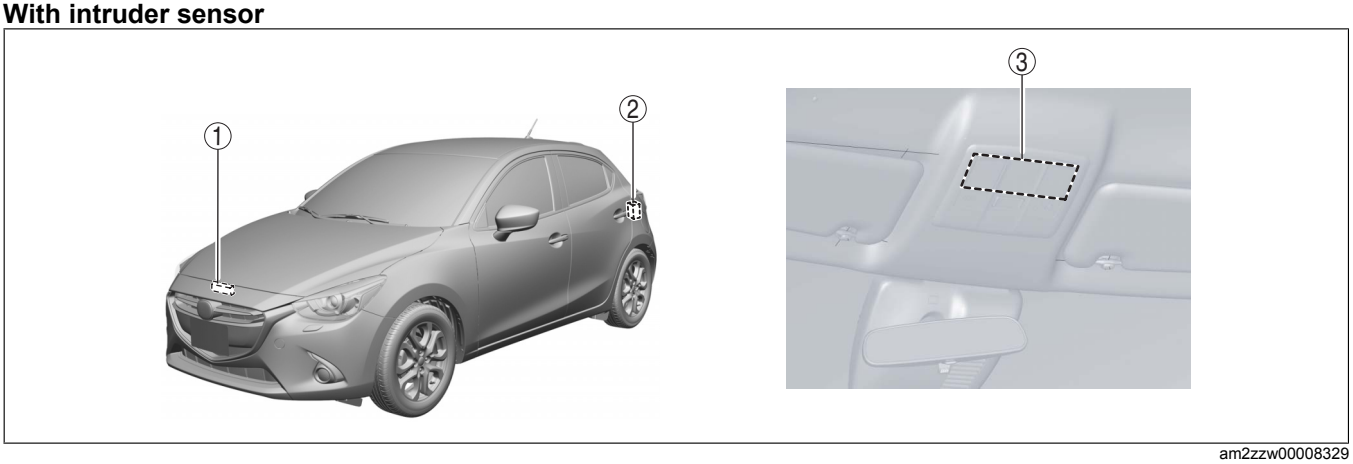

am2zzw00008329

1	Bonnet latch switch (See BONNET LATCH SWITCH INSPECTION.)
2	Intruder sensor (See INTRUDER SENSOR REMOVAL/ INSTALLATION.) (See INTRUDER SENSOR INSPECTION.)
3	Theft-deterrent siren (See THEFT-DETERRENT SIREN REMOVAL/ INSTALLATION.) (See THEFT-DETERRENT SIREN INSPECTION.)

Without intruder sensor

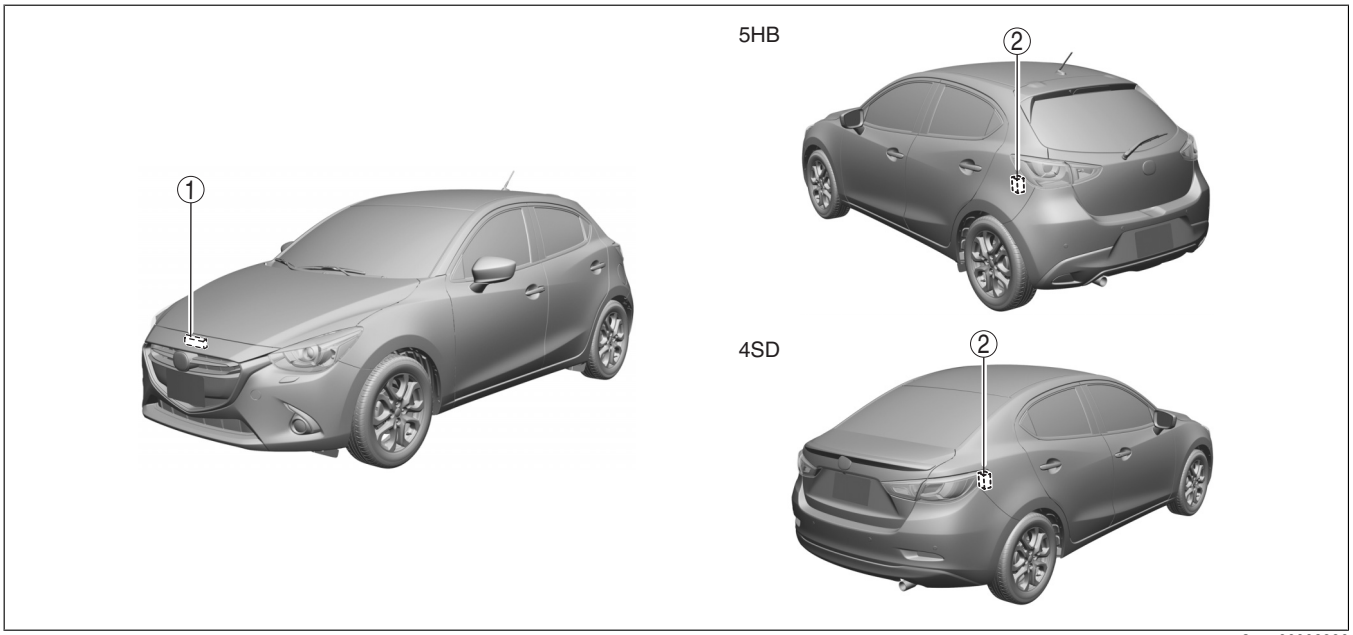

am2zzw00008330

1	Bonnet latch switch (See BONNET LATCH SWITCH INSPECTION.)
2	Theft-deterrent horn (See THEFT-DETERRENT HORN REMOVAL/ INSTALLATION.) (See THEFT-DETERRENT HORN INSPECTION.)