BONNET LATCH SWITCH INSPECTION

id091400510600

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL.) (See FRONT BUMPER INSTALLATION.)
3. Remove the front mudguard (Driver's side). (See MUDGUARD REMOVAL/INSTALLATION.)
4. Remove the bonnet latch protector. (See BONNET LATCH REMOVAL/INSTALLATION.)
5. Disconnect the bonnet latch switch connector. (See BONNET LATCH REMOVAL/INSTALLATION.)
6. Verify that the continuity is as indicated in the table.


Note

- Inspect the continuity when the bonnet is open and closed.

○—○ :Continuity

Bonnet latch switch (bonnet condition)	Terminal	
	A	B
Latch (close)	○	○
Unlatch (open)		

am3zzw00013548

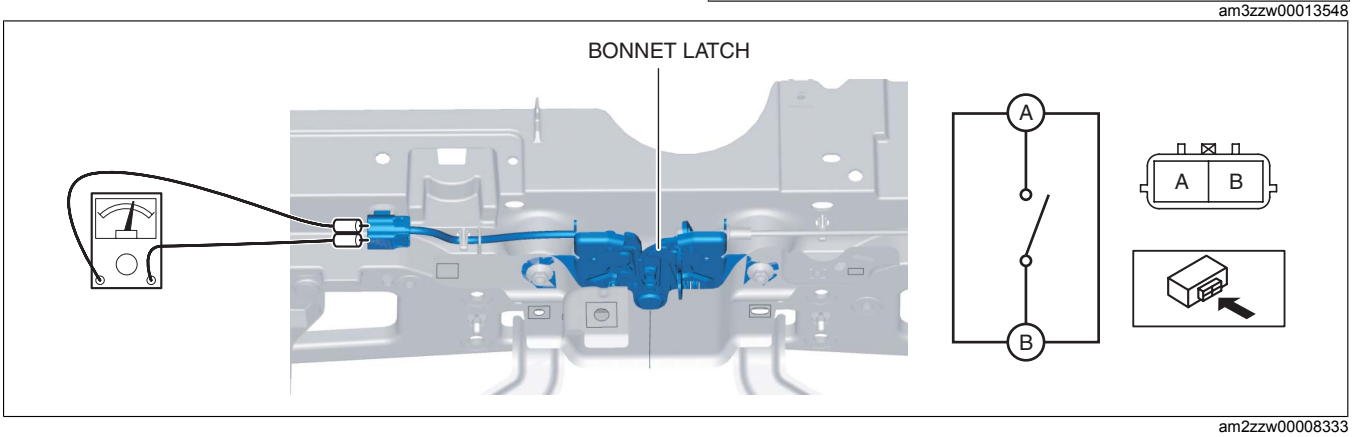

am2zzw00008333

- If the operation as indicated in the table cannot be verified, replace the bonnet latch. (See BONNET LATCH REMOVAL/INSTALLATION.)