FRONT DOOR KEY CYLINDER SWITCH INSPECTION


id091400511000

LH

1. Perform the front door glass preparation. (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the following parts:
   (1) Power window main switch (Driver's side) (See POWER WINDOW MAIN SWITCH INSPECTION.)
   (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
   (3) Front inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
   (4) Front door glass (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
   (5) Front door module panel (See FRONT DOOR MODULE PANEL REMOVAL/INSTALLATION.)
   (6) Front door key cylinder (See FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION.)
   (7) Front door latch and lock actuator (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)


Front door key cylinder switch lock-side inspection

1. Press in the latch lever of the front door latch and lock actuator using a flathead screwdriver, and set it to the latched condition.

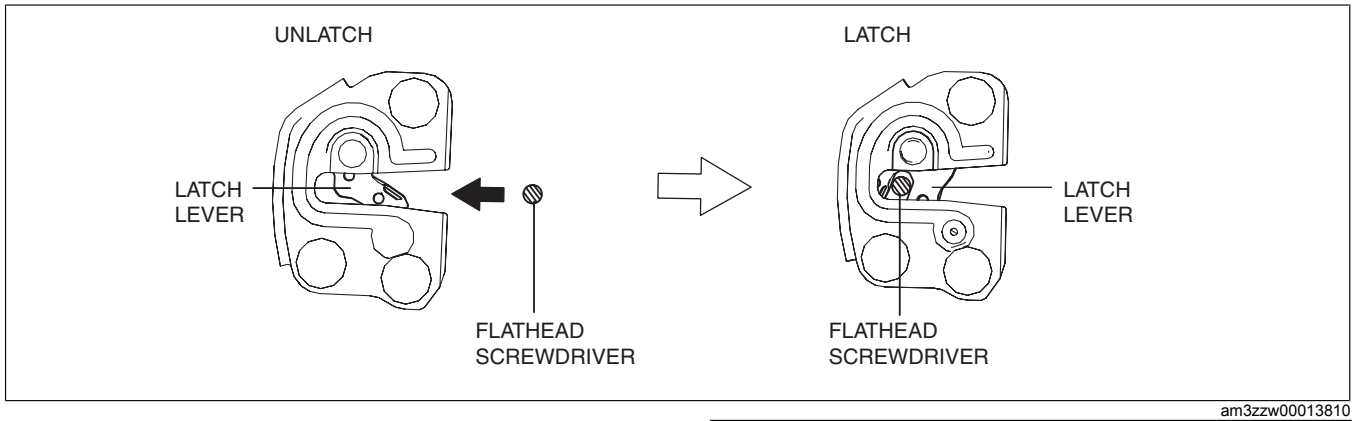


am3zzw00013810

2. Rotate the front door key cylinder in the direction of the arrow until it stops to set the front door key cylinder switch to the locked condition.

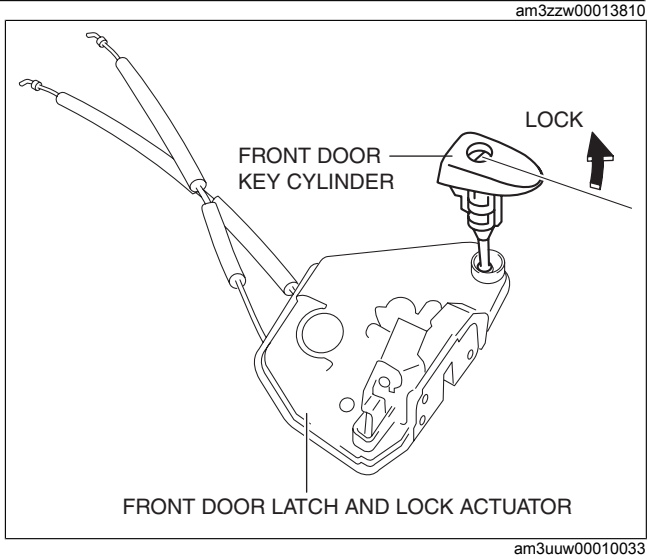

am3uuw00010033

3. To verify that the switch is in the locked position, press down the rod holder in the direction of the arrow and verify that the latch lever does not move.

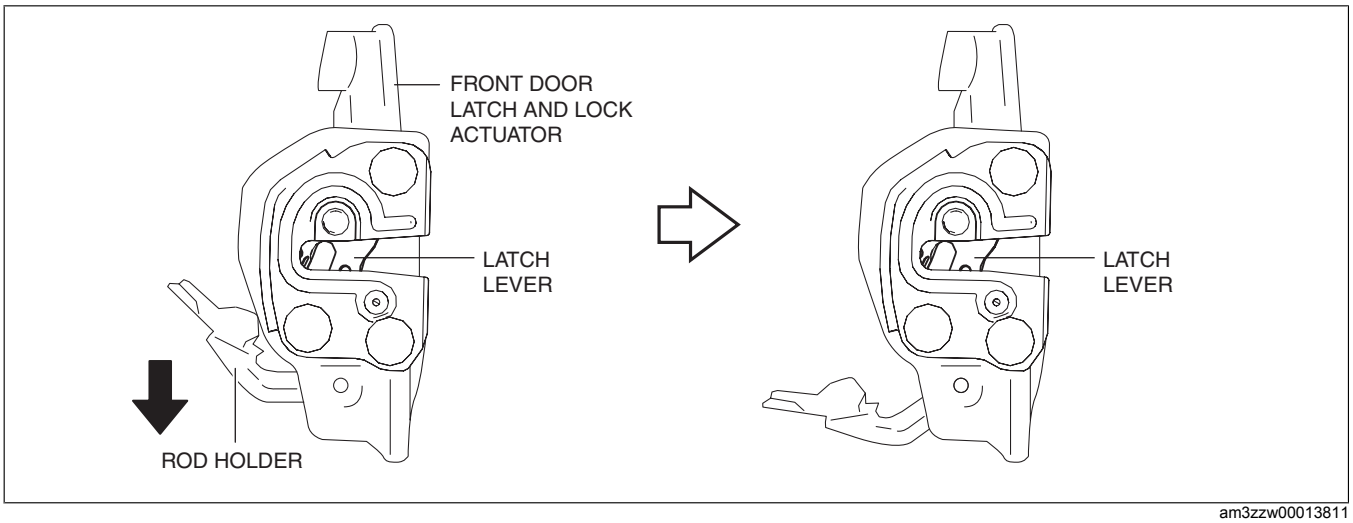

am3zzw00013811


Note

- If the latch lever moves, the front door key cylinder switch is not in the locked position. Repeat the procedure from Step 1.

4. Inspect the resistance between front door latch and lock actuator terminals J and H.

Front door latch and lock actuator resistance
1 kilohm


- If not as indicated in the table, replace the front door latch and lock actuator. (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

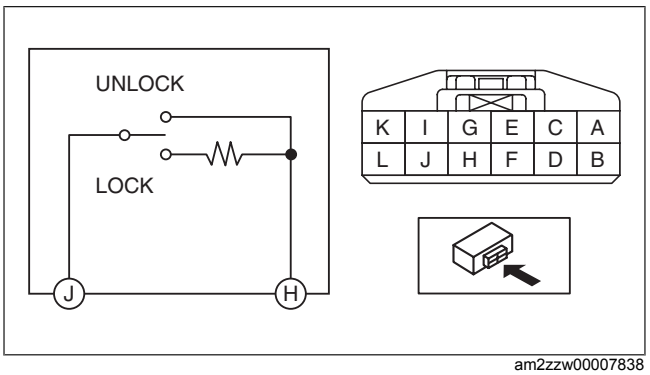

am2zzw00007838


Front door key cylinder switch unlock-side inspection

1. Press in the latch lever of the front door latch and lock actuator using a flathead screwdriver, and set it to the latched condition.

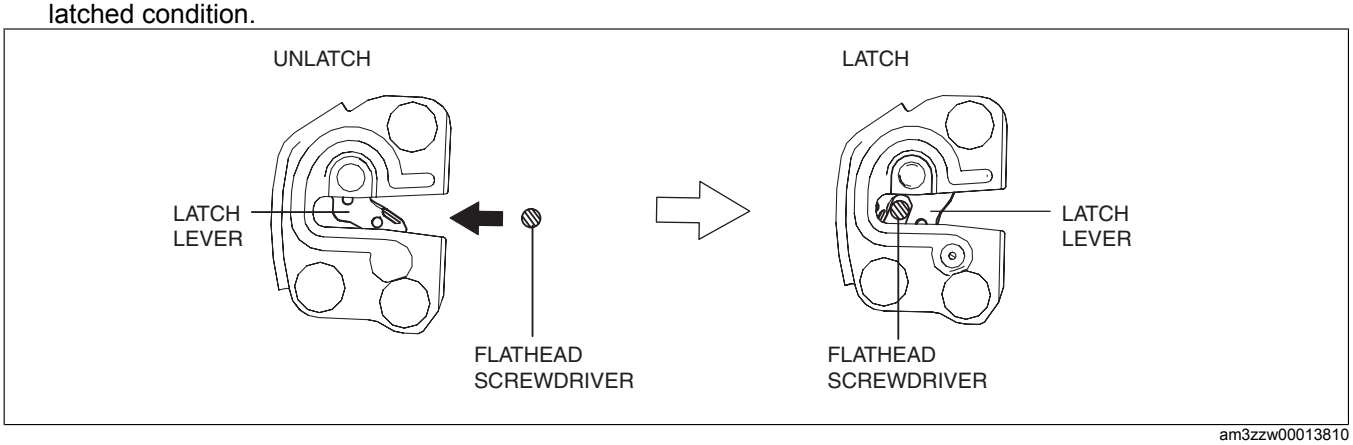


am3zzw00013810

2. Rotate the front door key cylinder in the direction of the arrow until it stops to set the front door key cylinder switch to the unlocked condition.

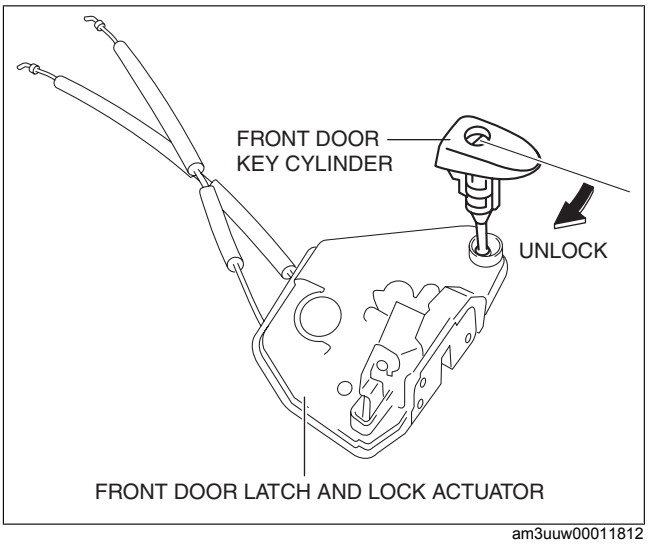

am3uuw00011812

3. To verify that the switch is in the unlocked position, press down the rod holder in the direction of the arrow and verify that the latch lever moves.

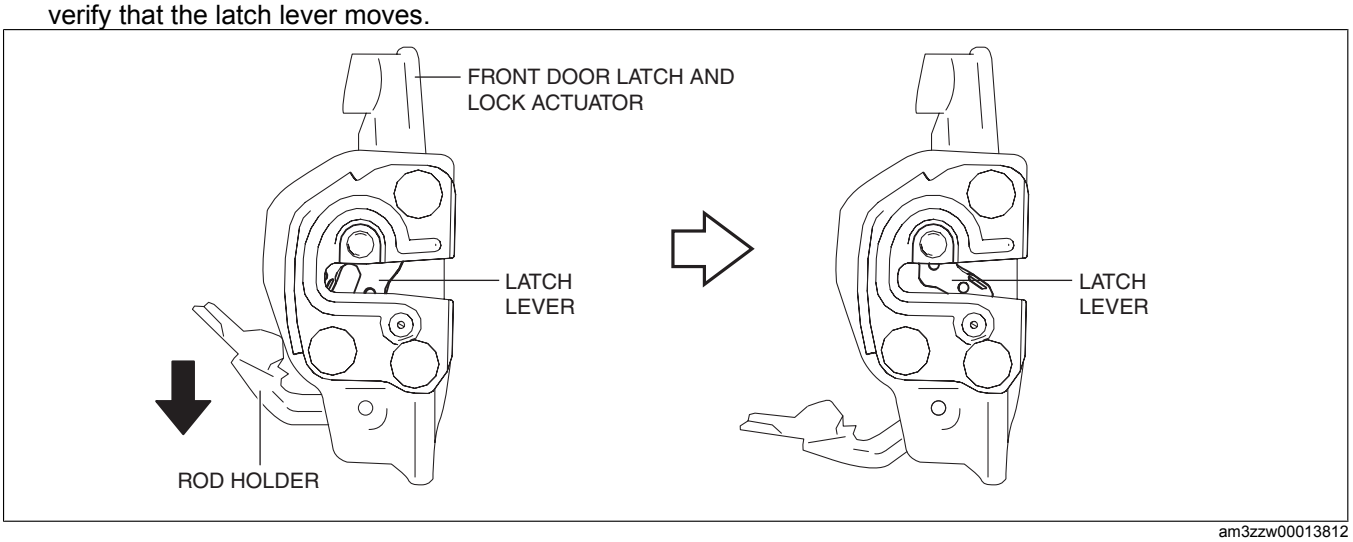

am3zzw00013812

Note

- If the latch lever does not move, the front door key cylinder switch is not in the unlocked position. Repeat the procedure from Step 2.


4. Verify that the continuity of the front door latch and lock actuator is as indicated in the table.

○—○ : Continuity

Front door latch and lock actuator	Terminal	
	J	H
Unlock	○	○

am3zzw00013734

- If not as indicated in the table, replace the front door latch and lock actuator. (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

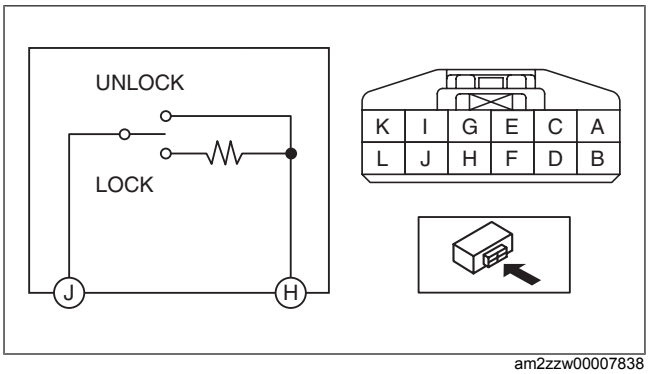


am2zzw00007838

RH

1. Perform the front door glass preparation. (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the following parts:
   (1) Power window main switch (Driver's side) (See POWER WINDOW MAIN SWITCH INSPECTION.)
   (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
   (3) Front inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
   (4) Front door glass (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
   (5) Front door module panel (See FRONT DOOR MODULE PANEL REMOVAL/INSTALLATION.)
   (6) Front door key cylinder (See FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION.)
   (7) Front door latch and lock actuator (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)


Front door key cylinder switch lock-side inspection

1. Press in the latch lever of the front door latch and lock actuator using a flathead screwdriver, and set it to the latched condition.

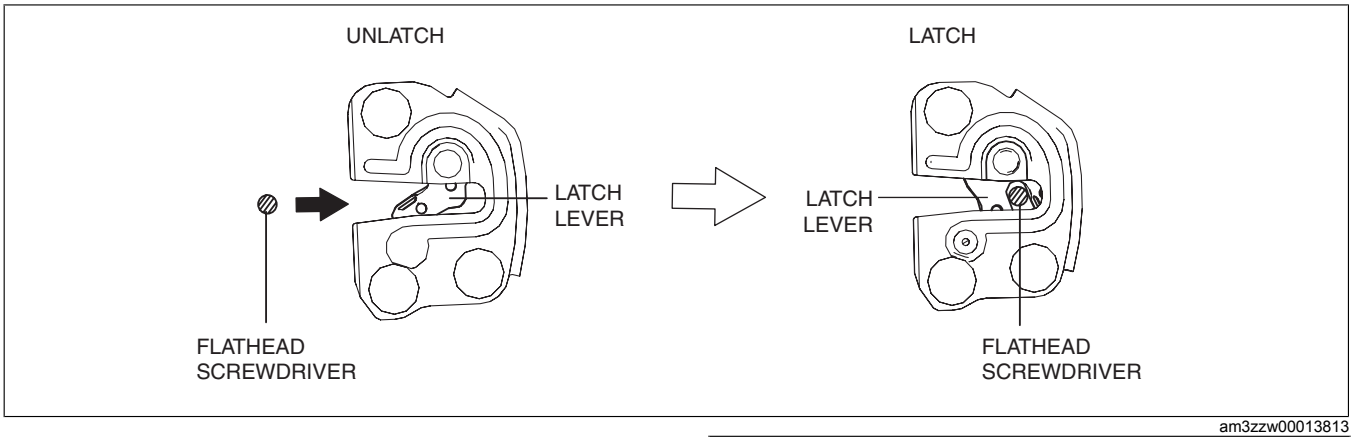


am3zzw00013813

2. Rotate the front door key cylinder in the direction of the arrow until it stops to set the front door key cylinder switch to the locked condition.

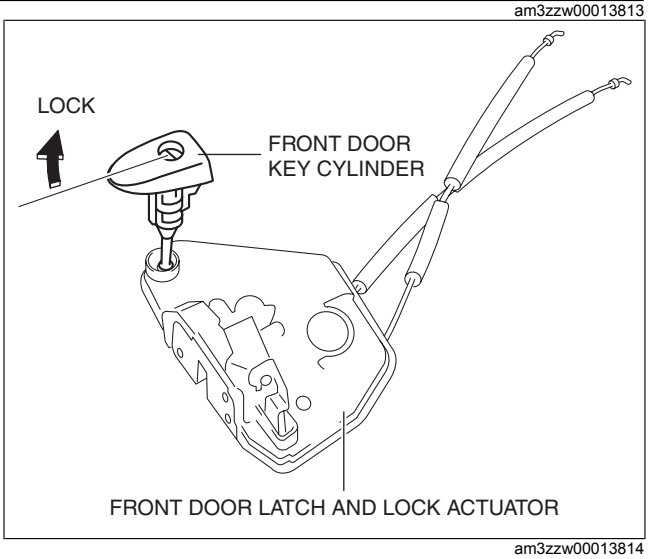

am3zzw00013814

3. To verify that the switch is in the locked position, press down the rod holder in the direction of the arrow and verify that the latch lever does not move.

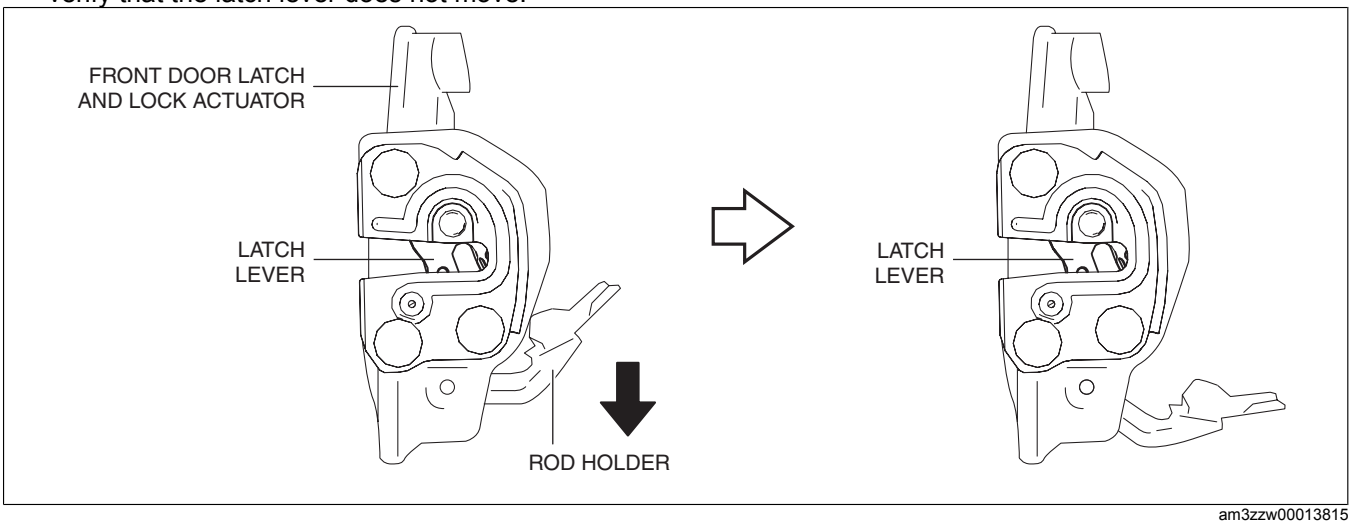


am3zzw00013815

Note
- If the latch lever moves, the front door key cylinder switch is not in the locked position. Repeat the procedure from Step 1.

4. Inspect the resistance between front door latch and lock actuator terminals D and F.


Front door latch and lock actuator resistance
1 kilohm

- If not as indicated in the table, replace the front door latch and lock actuator. (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

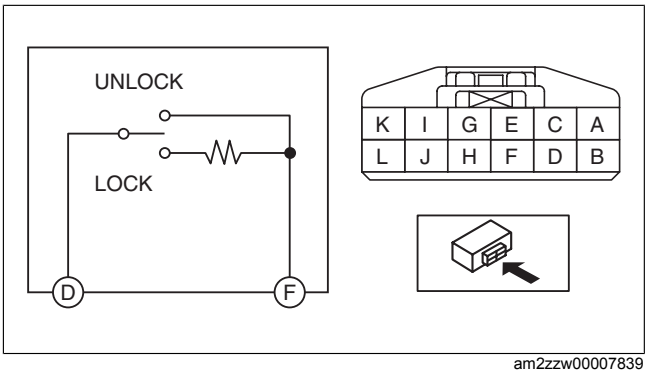


am2zzw00007839

Front door key cylinder switch unlock-side inspection
1. Press in the latch lever of the front door latch and lock actuator using a flathead screwdriver, and set it to the latched condition.

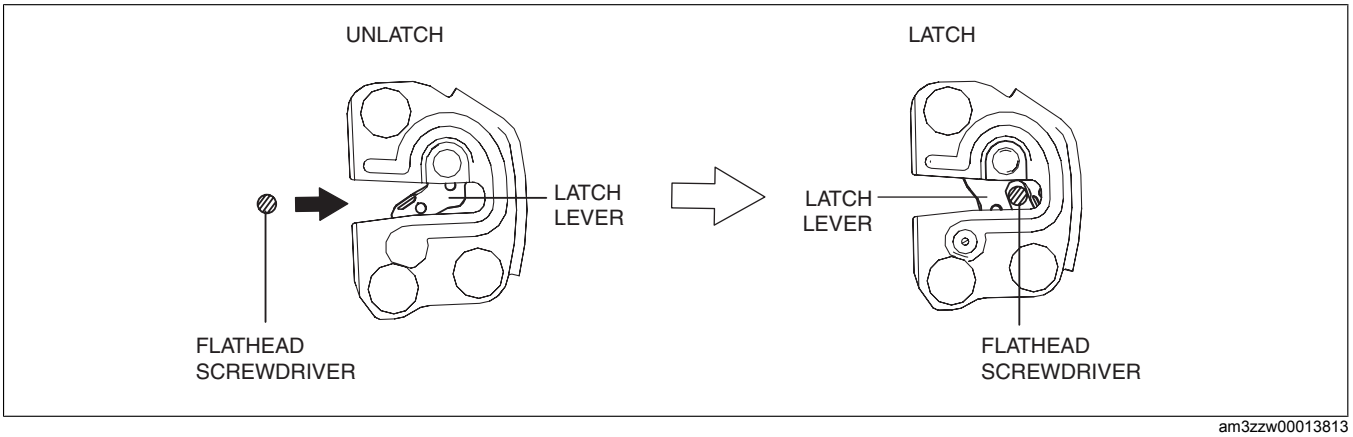


am3zzw00013813

2. Rotate the front door key cylinder in the direction of the arrow until it stops to set the front door key cylinder switch to the unlocked condition.

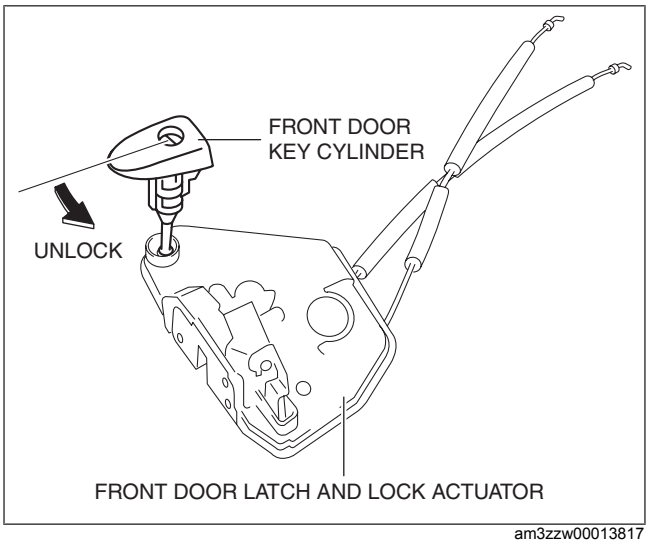

am3zzw00013817

3. To verify that the switch is in the unlocked position, press down the rod holder in the direction of the arrow and verify that the latch lever moves.

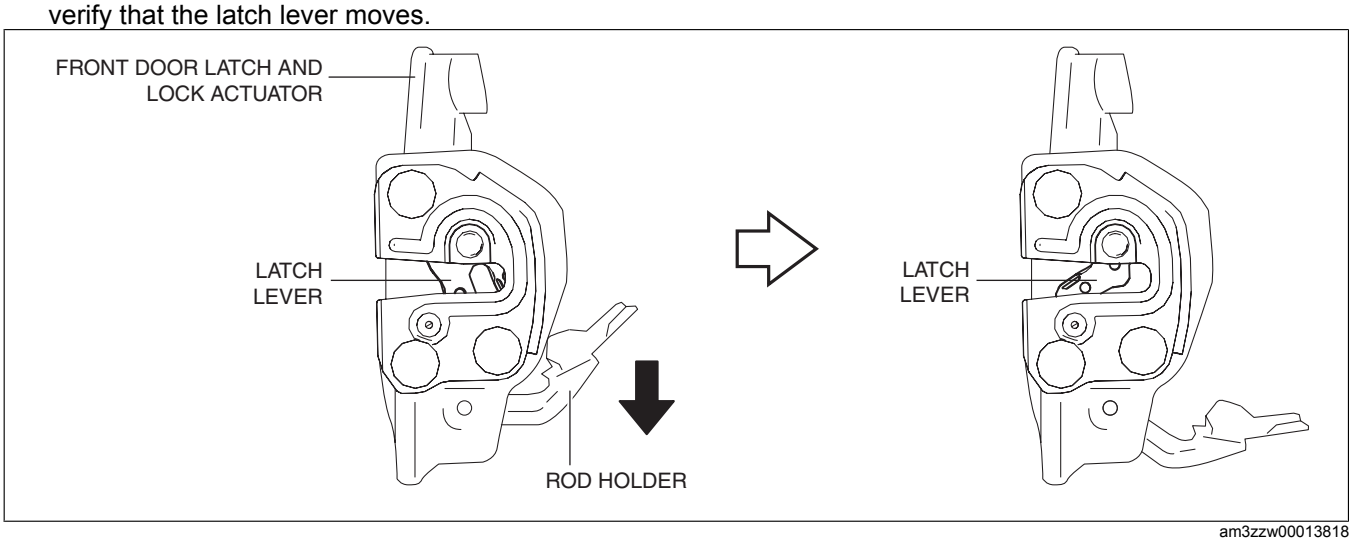


am3zzw00013818

Note

- If the latch lever does not move, the front door key cylinder switch is not in the unlocked position. Repeat the procedure from Step 2.


4. Verify that the continuity of the front door latch and lock actuator is as indicated in the table.

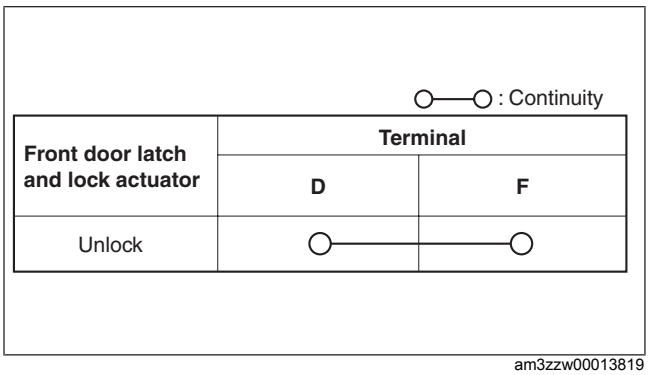

Front door latch and lock actuator	Terminal	
	D	F
Unlock	○	○

am3zzw00013819

- If not as indicated in the table, replace the front door latch and lock actuator. (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

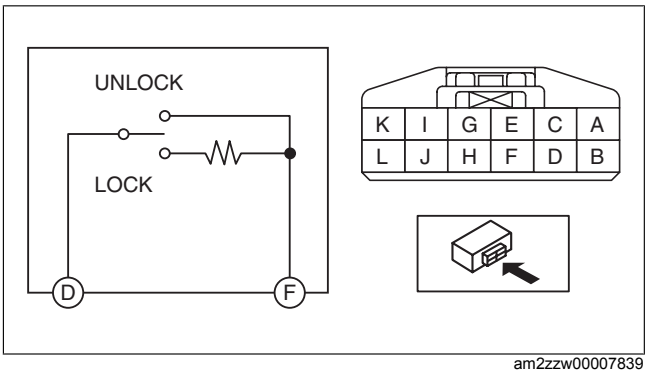

am2zzw00007839