
FRONT DOOR LOCK ACTUATOR INSPECTION

id091400511300

LH

1. Perform the front door glass removal preparation. (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the following parts:
   (1) Power window main switch (Driver's side)/Power window subswitch (Passenger's side) (See POWER WINDOW MAIN SWITCH INSPECTION.) (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
   (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
   (3) Front inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
   (4) Front door glass (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
   (5) Front door module panel (See FRONT DOOR MODULE PANEL REMOVAL/INSTALLATION.)
   (6) Front door key cylinder (See FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION.)
   (7) Front door latch and lock actuator (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
4. Apply battery positive voltage and connect the ground to the front door lock actuator terminals as indicated in the table below and verify the operation condition.

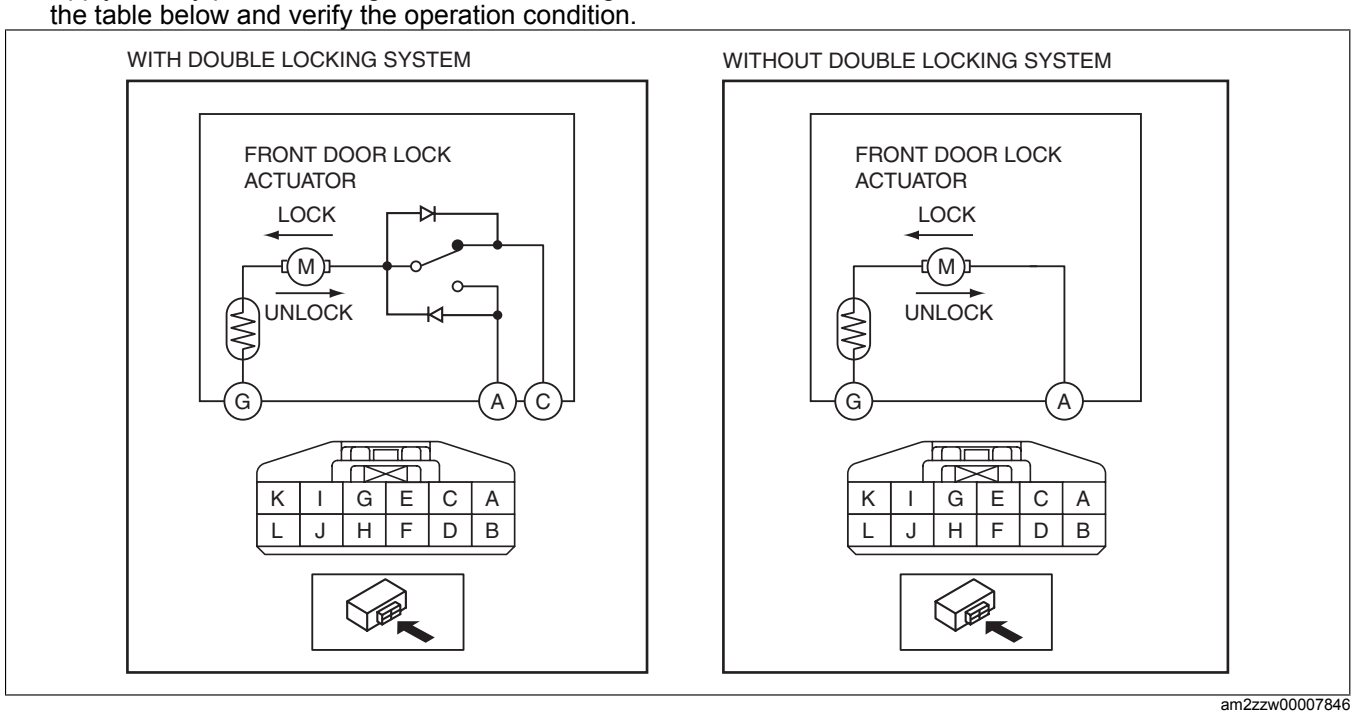

am2zzw00007846

With double locking system

B+ Terminal	Ground Terminal	Operation
C	G	Lock
A	G	Double lock
G	A, C	Unlock

Without double locking system

B+ Terminal	Ground Terminal	Operation
A	G	Lock
G	A	Unlock


- If not as indicated in the table, replace the front door latch and lock actuator. (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

RH

1. Perform the front door glass removal preparation. (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the following parts:
   (1) Power window main switch (Driver's side)/Power window subswitch (Passenger's side) (See POWER WINDOW MAIN SWITCH INSPECTION.) (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)

(2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
(3) Front inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
(4) Front door glass (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
(5) Front door module panel (See FRONT DOOR MODULE PANEL REMOVAL/INSTALLATION.)
(6) Front door key cylinder (See FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION.)
(7) Front door latch and lock actuator (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

4. Apply battery positive voltage and connect the ground to the front door lock actuator terminals as indicated in the table below and verify the operation condition.

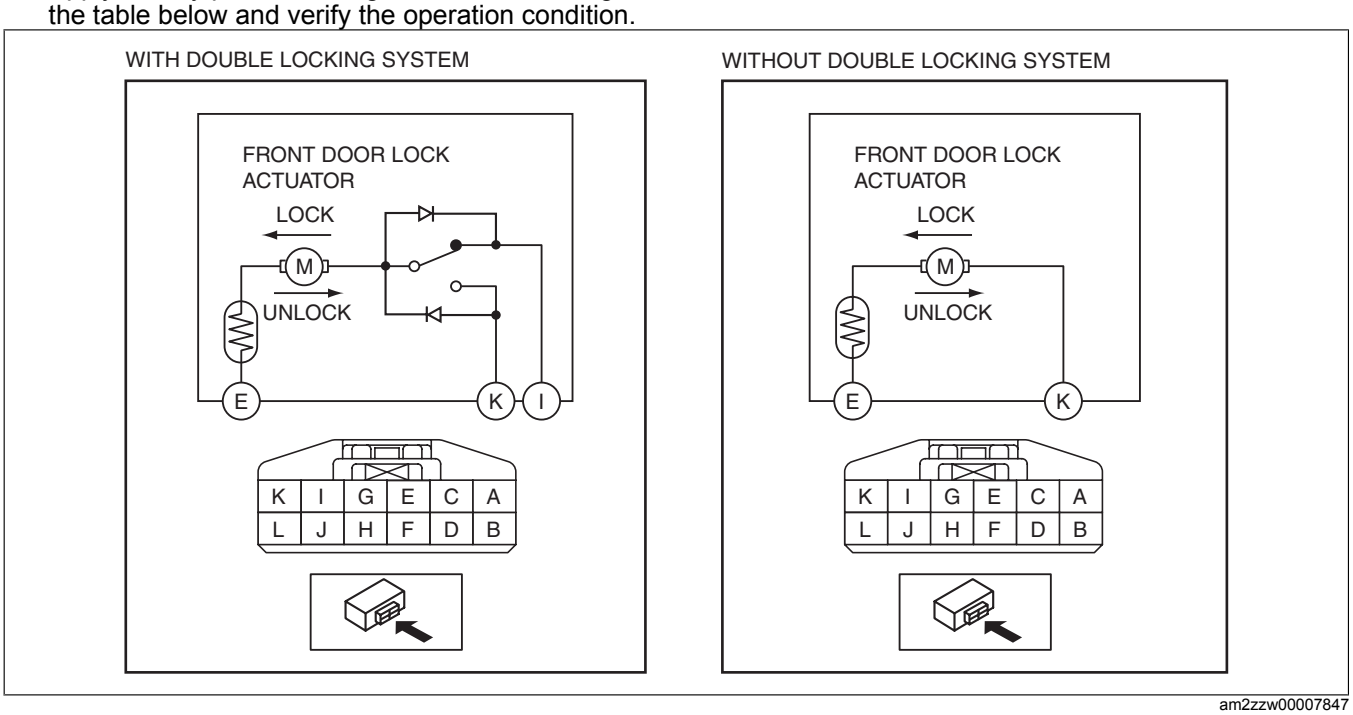

am2zzw00007847

With double locking system

B+ Terminal	Ground Terminal	Operation
I	E	Lock
K	E	Double lock
E	K, I	Unlock

Without double locking system

B+ Terminal	Ground Terminal	Operation
K	E	Lock
E	K	Unlock

- If not as indicated in the table, replace the front door latch and lock actuator. (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)