## FRONT DOOR LATCH SWITCH INSPECTION

id091400511400

**LH**

1. Perform the front door glass preparation. (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the following parts:
   (1) Power window main switch (Driver's side)/Power window subswitch (Passenger's side) (See POWER WINDOW MAIN SWITCH INSPECTION.) (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
   (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
   (3) Front inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
   (4) Front door glass (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
   (5) Front door module panel (See FRONT DOOR MODULE PANEL REMOVAL/INSTALLATION.)
   (6) Front door key cylinder (See FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION.)
   (7) Front door latch and lock actuator (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
4. Verify that the continuity is as indicated in the table.

○—○ : Continuity


| Door latch switch | Terminal | |
|---|---|---|
| | L | J |
| Latch | | |
| Unlatch | ○ | ○ |

am3uuw00009815


- If not as indicated in the table, replace the front door latch and lock actuator. (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

**Note**

- When inspecting the latch side of the front door latch switch, press in the latch lever using a flathead screwdriver and set it to the latched position.

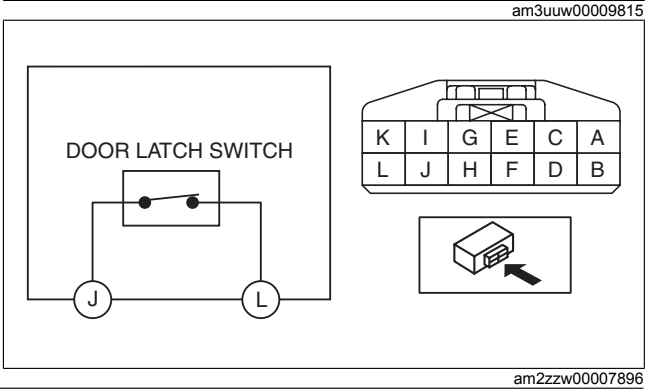


am2zzw00007896

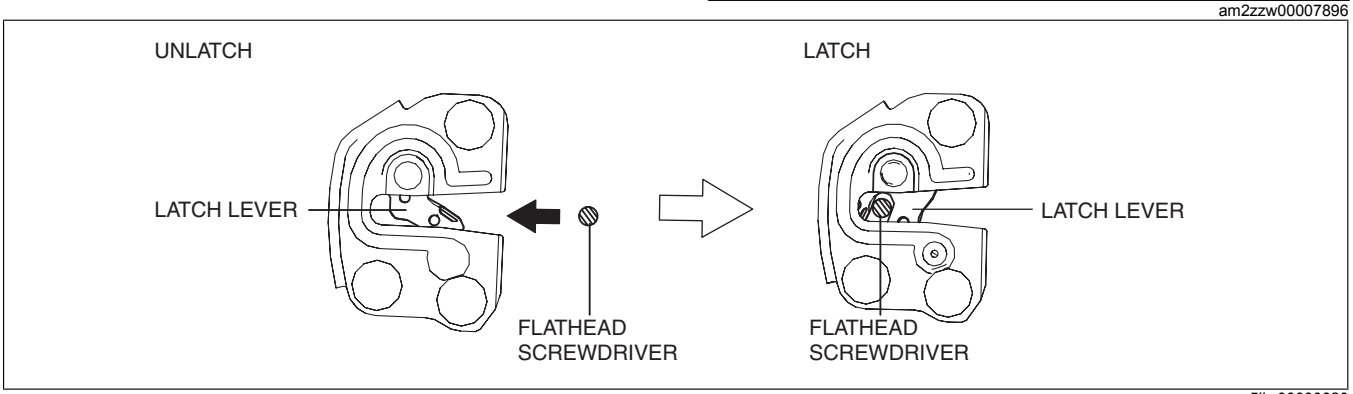



ac5jjw00000020

**RH**

1. Perform the front door glass preparation. (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the following parts:
   (1) Power window main switch (Driver's side)/Power window subswitch (Passenger's side) (See POWER WINDOW MAIN SWITCH INSPECTION.) (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)

(2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
(3) Front inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
(4) Front door glass (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
(5) Front door module panel (See FRONT DOOR MODULE PANEL REMOVAL/INSTALLATION.)
(6) Front door key cylinder (See FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION.)
(7) Front door latch and lock actuator (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)


4. Verify that the continuity is as indicated in the table.

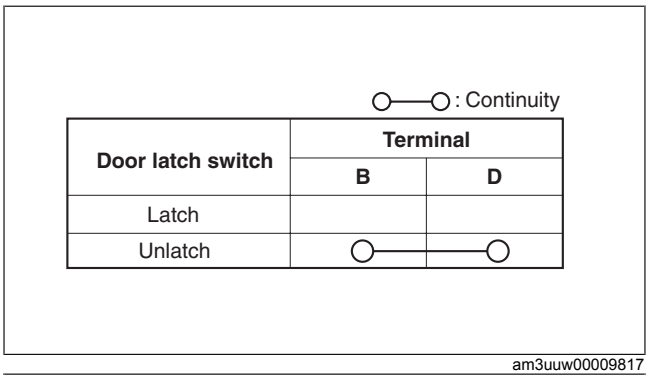


am3uuw00009817

- If not as indicated in the table, replace the front door latch and lock actuator. (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

**Note**
- When inspecting the latch side of the front door latch switch, press in the latch lever using a flathead screwdriver and set it to the latched position.

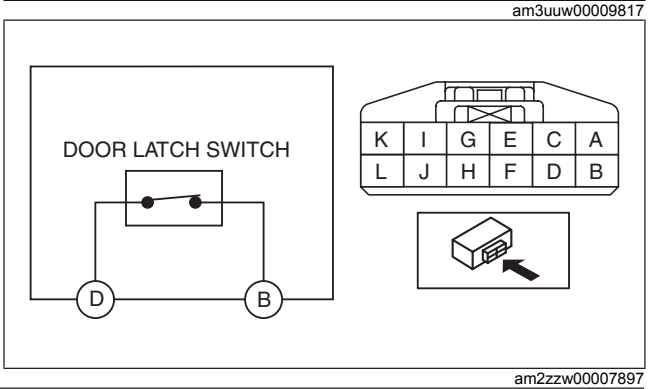

am2zzw00007897

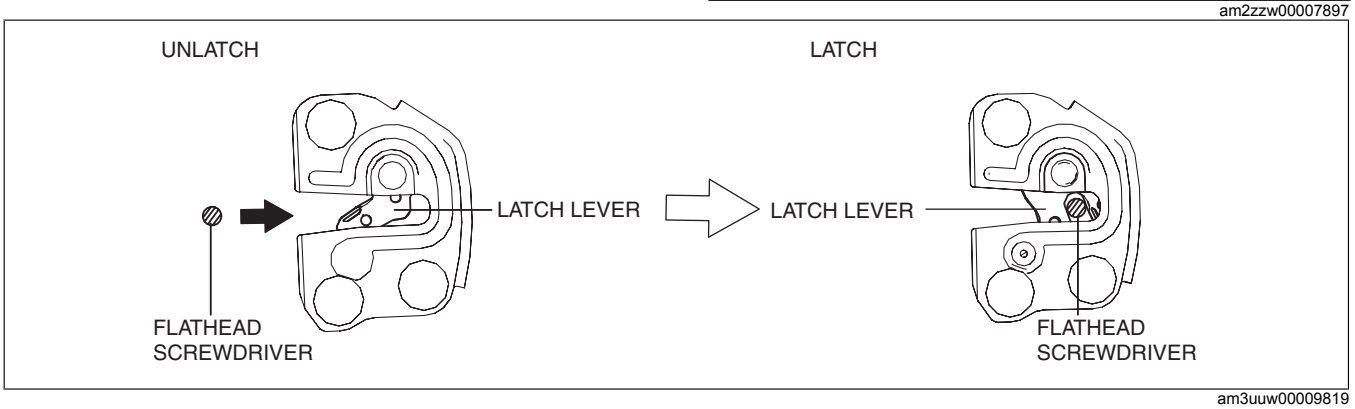

am3uuw00009819