
REAR DOOR LATCH SWITCH INSPECTION

id091400511900

LH

1. Fully close the rear door glass.
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the following parts:
   (1) Power window subswitch (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
   (2) Rear door trim (See REAR DOOR TRIM REMOVAL/INSTALLATION.)
   (3) Rear inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
   (4) Rear door latch and lock actuator (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
4. Verify that the continuity is as indicated in the table.

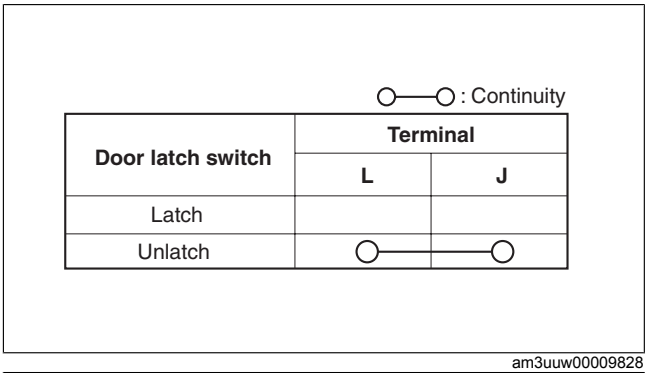


am3uuw00009828


- If not as indicated in the table, replace the rear door latch and lock actuator. (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

Note

- When inspecting the latch side of the rear door latch switch, press in the latch lever using a flathead screwdriver and set it to the latched position.

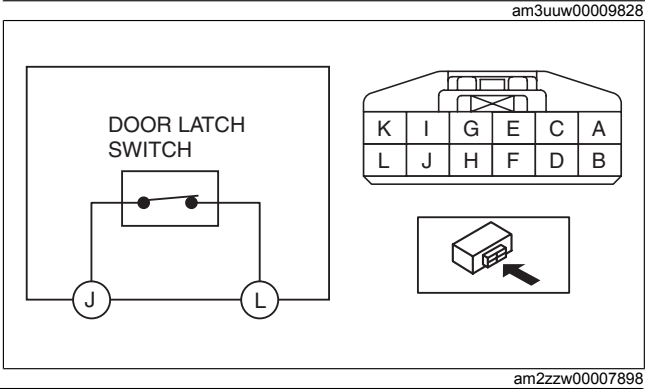

am2zzw00007898

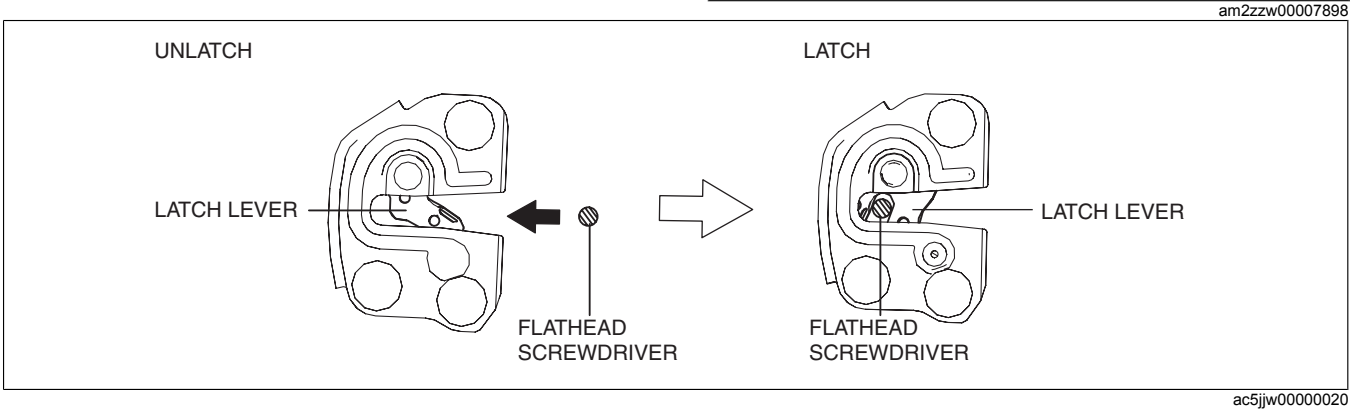


ac5jjw00000020

RH

1. Fully close the rear door glass.
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the following parts:
   (1) Power window subswitch (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
   (2) Rear door trim (See REAR DOOR TRIM REMOVAL/INSTALLATION.)
   (3) Rear inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
   (4) Rear door latch and lock actuator (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

4. Verify that the continuity is as indicated in the table.

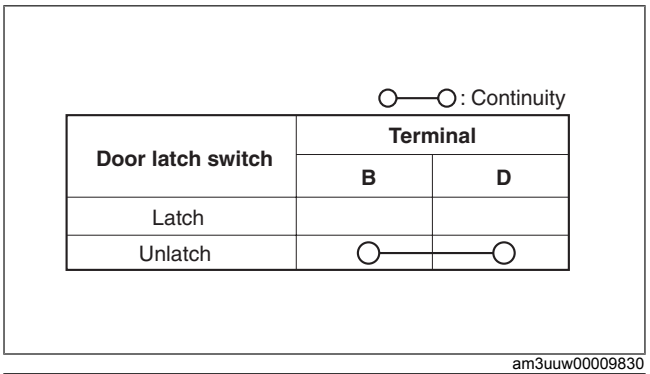


am3uuw00009830


- If not as indicated in the table, replace the rear door latch and lock actuator. (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/ INSTALLATION.)

Note

- When inspecting the latch side of the rear door latch switch, press in the latch lever using a flathead screwdriver and set it to the latched position.

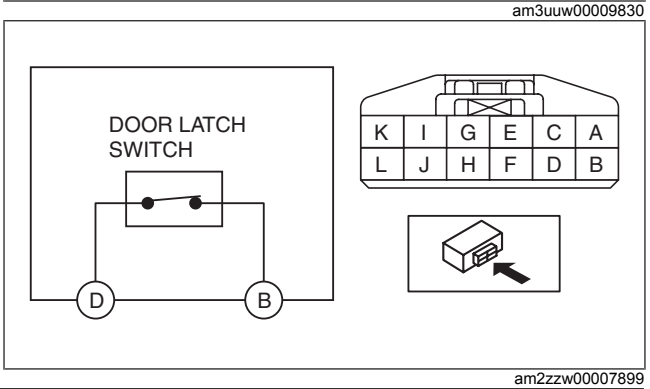

am2zzw00007899

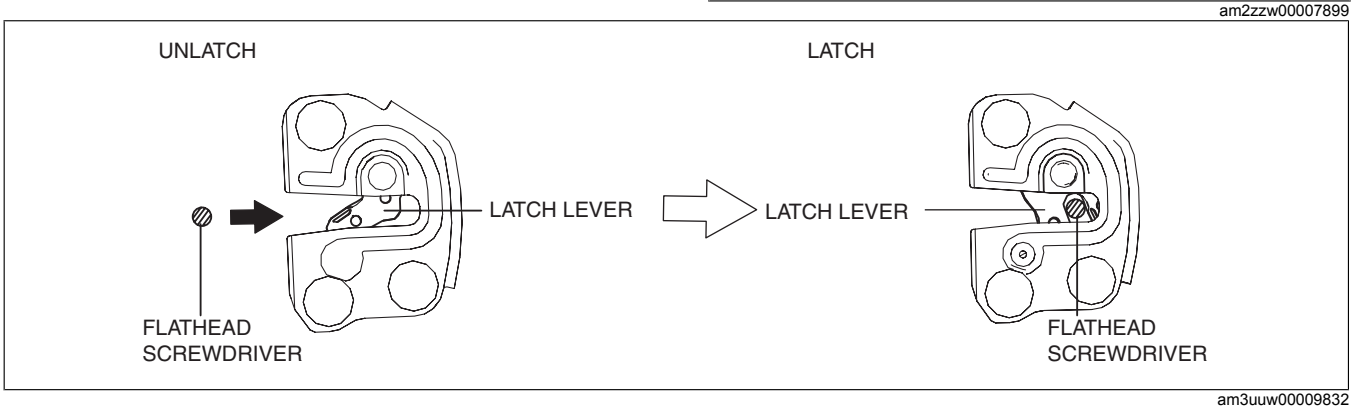

am3uuw00009832