
REAR DOOR LOCK ACTUATOR INSPECTION

id091400512000

LH

1. Fully close the rear door glass.
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the following parts:
   (1) Power window subswitch (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
   (2) Rear door trim (See REAR DOOR TRIM REMOVAL/INSTALLATION.)
   (3) Rear inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
   (4) Rear door latch and lock actuator (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
4. Apply battery positive voltage and connect the ground to the rear door lock actuator terminals as indicated in the table below and verify the operation condition.

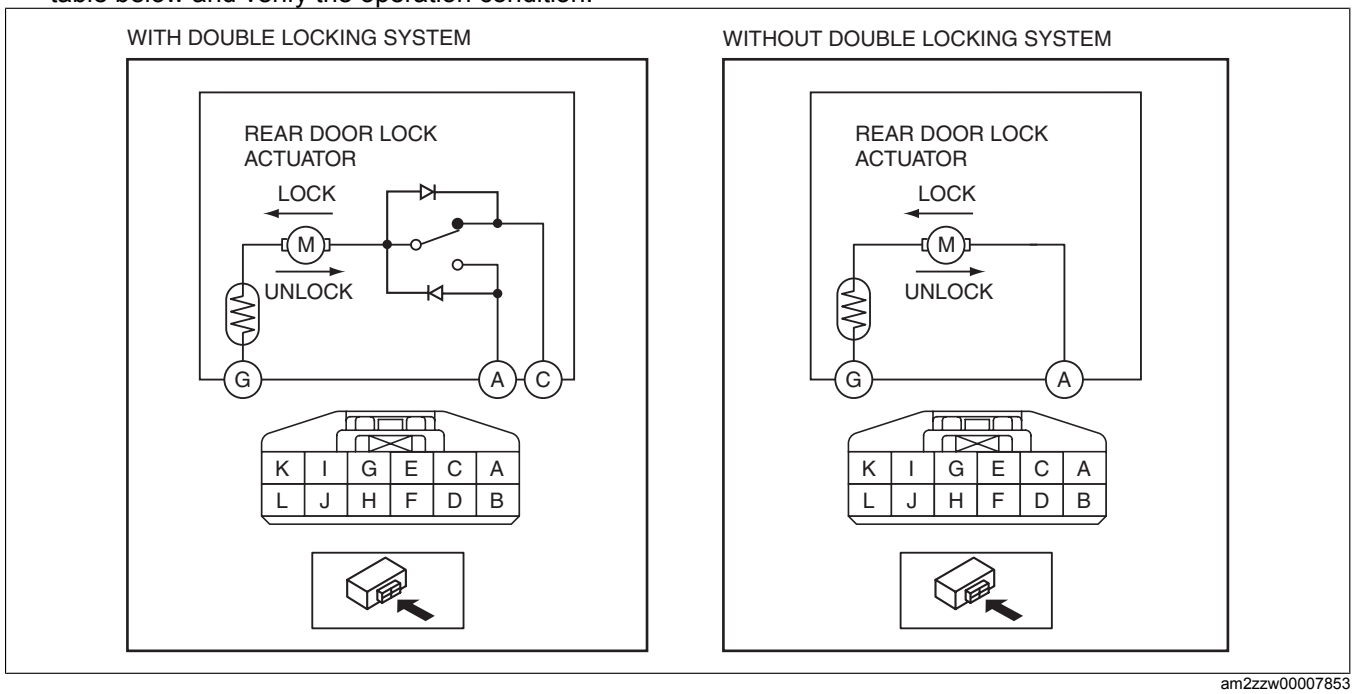

am2zzw00007853

With double locking system

B+ Terminal	Ground Terminal	Operation
C	G	Lock
A	G	Double lock
G	A, C	Unlock


Without double locking system

B+ Terminal	Ground Terminal	Operation
A	G	Lock
G	A	Unlock

- If not as indicated in the table, replace the rear door latch and lock actuator. (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

RH

1. Fully close the rear door glass.
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the following parts:
   (1) Power window subswitch (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
   (2) Rear door trim (See REAR DOOR TRIM REMOVAL/INSTALLATION.)
   (3) Rear inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
   (4) Rear door latch and lock actuator (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
4. Apply battery positive voltage and connect the ground to the rear door lock actuator terminals as indicated in the table below and verify the operation condition.

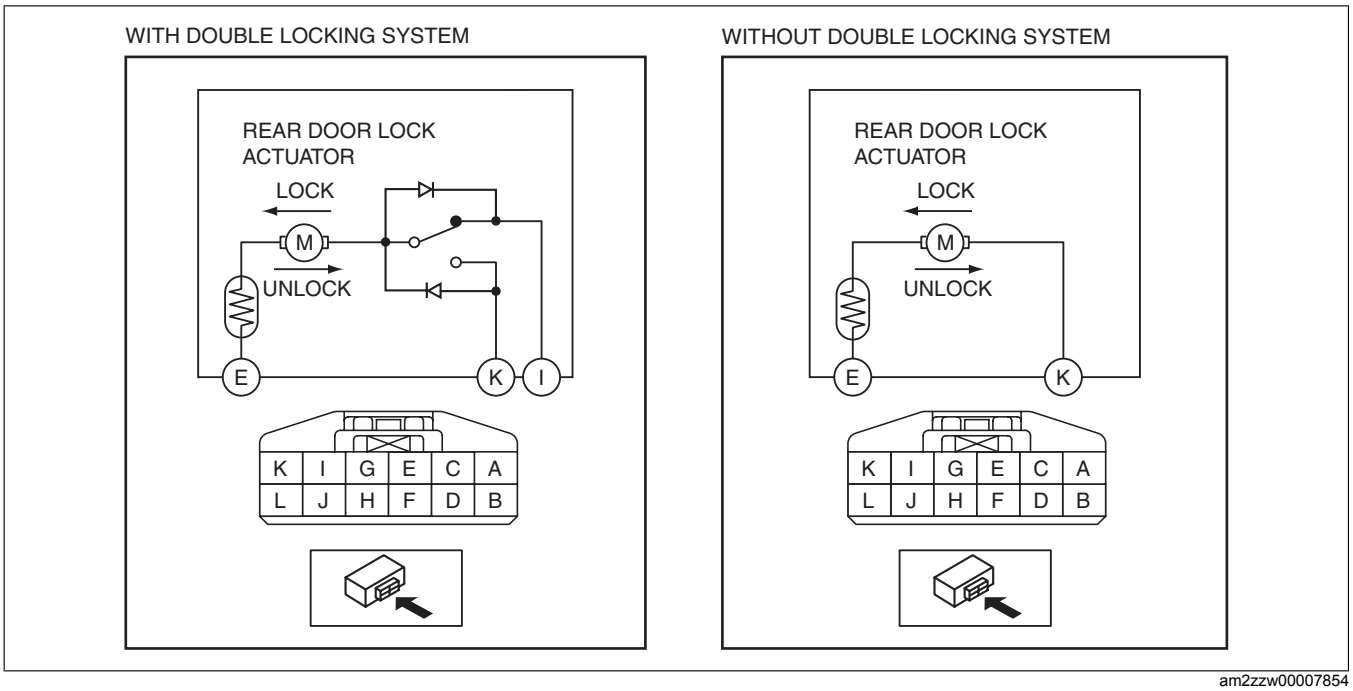

am2zzw00007854

With double locking system

B+ Terminal	Ground Terminal	Operation
I	E	Lock
K	E	Double lock
E	K, I	Unlock

Without double locking system

B+ Terminal	Ground Terminal	Operation
K	E	Lock
E	K	Unlock

- If not as indicated in the table, replace the rear door latch and lock actuator. (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)