
LIFTGATE LOCK ACTUATOR INSPECTION


id091400512100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Liftgate lower trim. (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
3. Liftgate latch and lock actuator. (See LIFTGATE LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
4. Press in the latch lever of the liftgate latch and lock actuator using a flathead screwdriver, and set it to the latched condition.

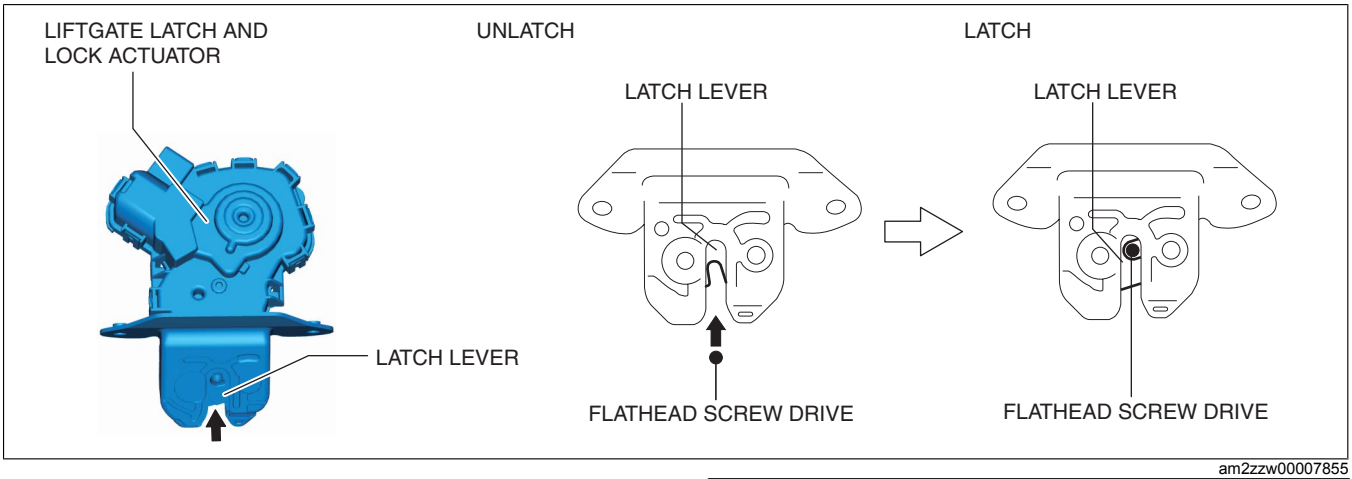

am2zzw00007855

5. Connect terminal A to the positive battery voltage, connect terminal B to the ground, and verify that the latch lever is released and the condition changes to the unlatch condition.
   - If the operation cannot be verified, replace the liftgate latch and lock actuator. (See LIFTGATE LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

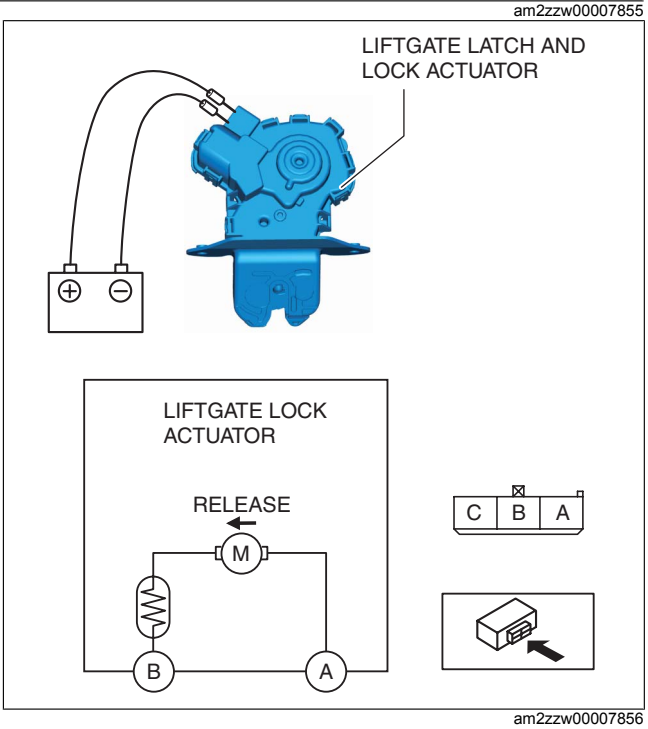

am2zzw00007856