LIFTGATE LATCH SWITCH INSPECTION


id091400512200

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Liftgate lower trim. (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
3. Liftgate latch and lock actuator. (See LIFTGATE LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
4. Verify that the continuity is as indicated in the table.

: Continuity

Liftgate latch switch	Terminal	
	B	C
Latch (liftgate close)		
Unlatch (liftgate open)	○——○	

am2zzw00007900

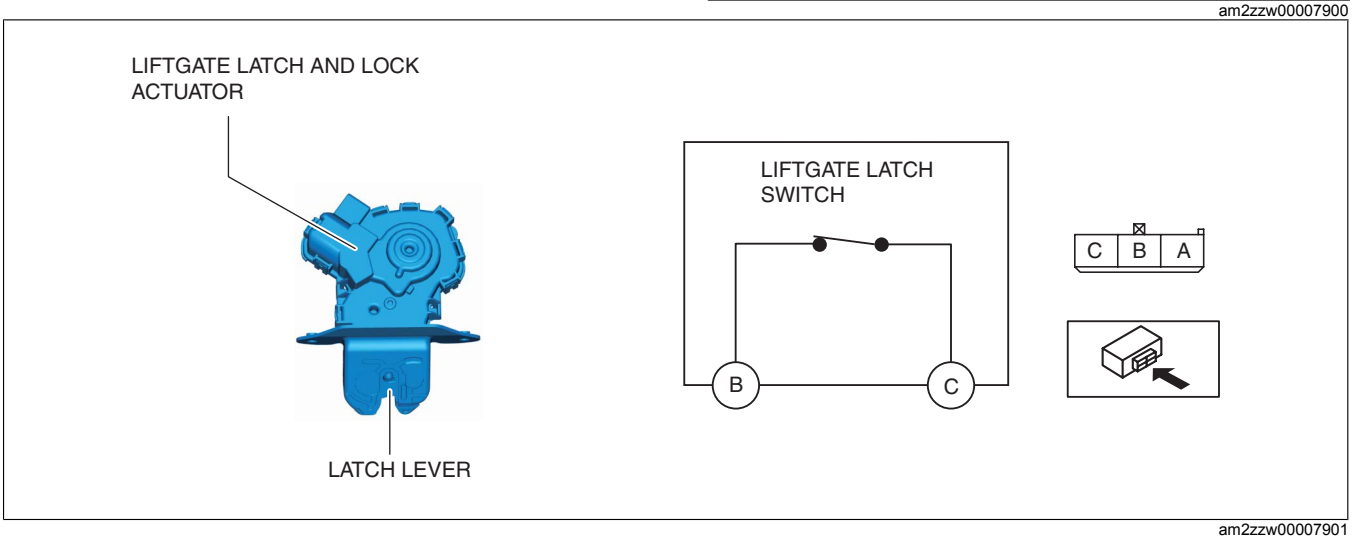


am2zzw00007901

- If not as indicated in the table, replace the liftgate latch and lock actuator. (See LIFTGATE LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)

Note

- When inspecting the latch condition of the liftgate latch switch, press in the latch lever using a flathead screwdriver and set it to the latched position.

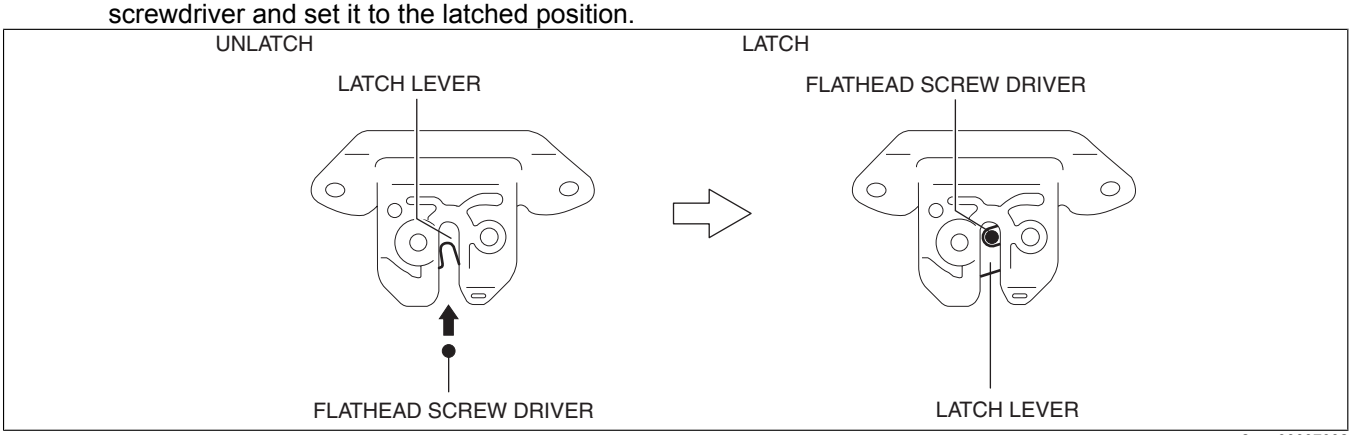

am2zzw00007902