
LIFTGATE LOCK STRIKER REMOVAL/INSTALLATION


id091400513000

1. Pull the lock bezel in the direction of the arrow shown in the figure and detach the lock bezel tabs from the trunk end trim.

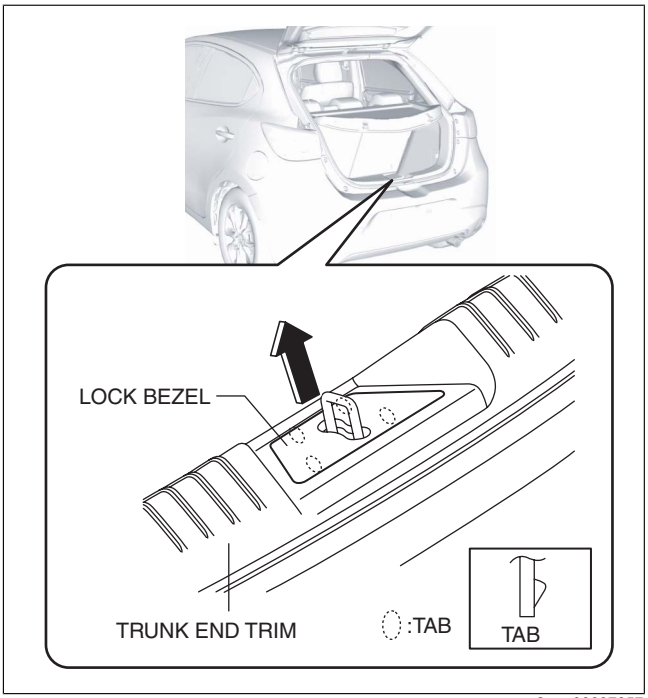

am2zzw00007857


2. Remove the bolts.
3. Remove the liftgate lock striker.
4. Install in the reverse order of removal.

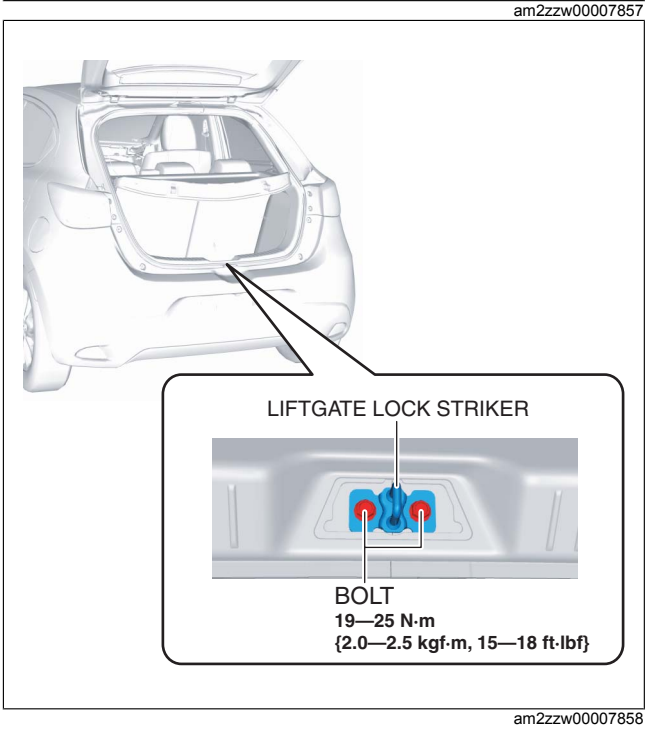

am2zzw00007858

Liftgate Lock Striker Installation Note

- Refer to [LIFTGATE ADJUSTMENT] and adjust the liftgate lock striker so that the height difference and gap of the liftgate is within the specification. (See LIFTGATE ADJUSTMENT.)

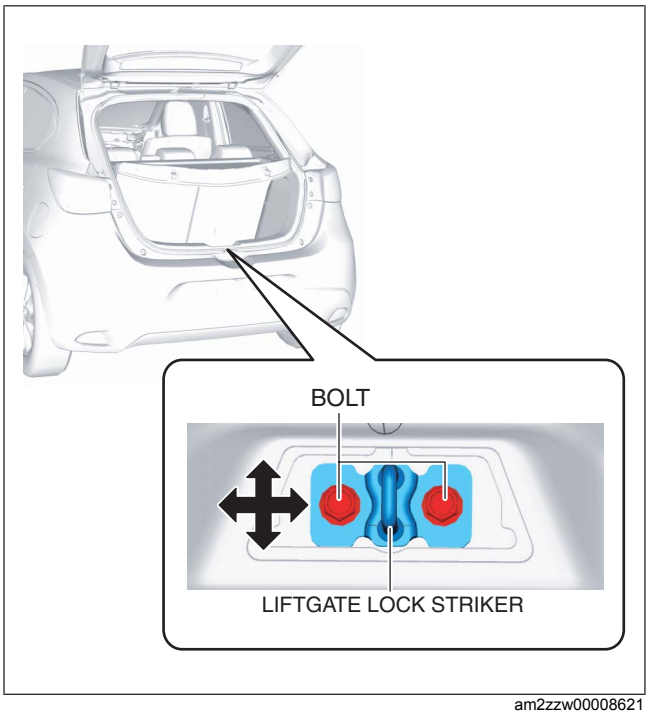

am2zzw00008621