
TRUNK LID LATCH AND RELEASE ACTUATOR REMOVAL/INSTALLATION

id091400513300

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the trunk lid trim. (See TRUNK LID TRIM REMOVAL/INSTALLATION.)
3. Disconnect the connector.
4. Remove the bolts.
5. Remove the trunk lid latch and release actuator from the trunk lid.
6. Install in the reverse order of removal.

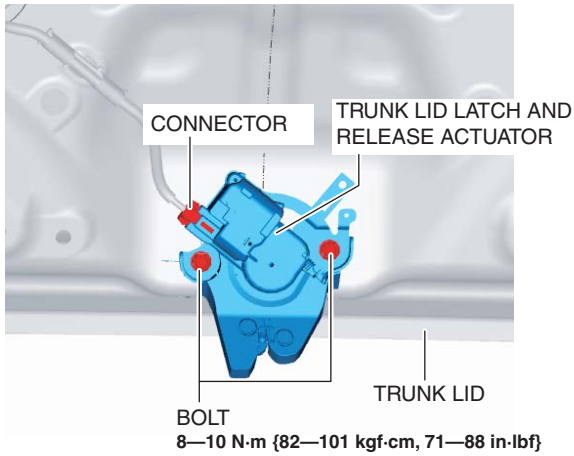

am2zzw00007860