
KEYLESS ANTENNA REMOVAL/INSTALLATION

id091400514900


With Advanced Keyless Entry System
Vehicle interior, front

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the glove compartment.(See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
3. Disconnect the connector from the keyless antenna.

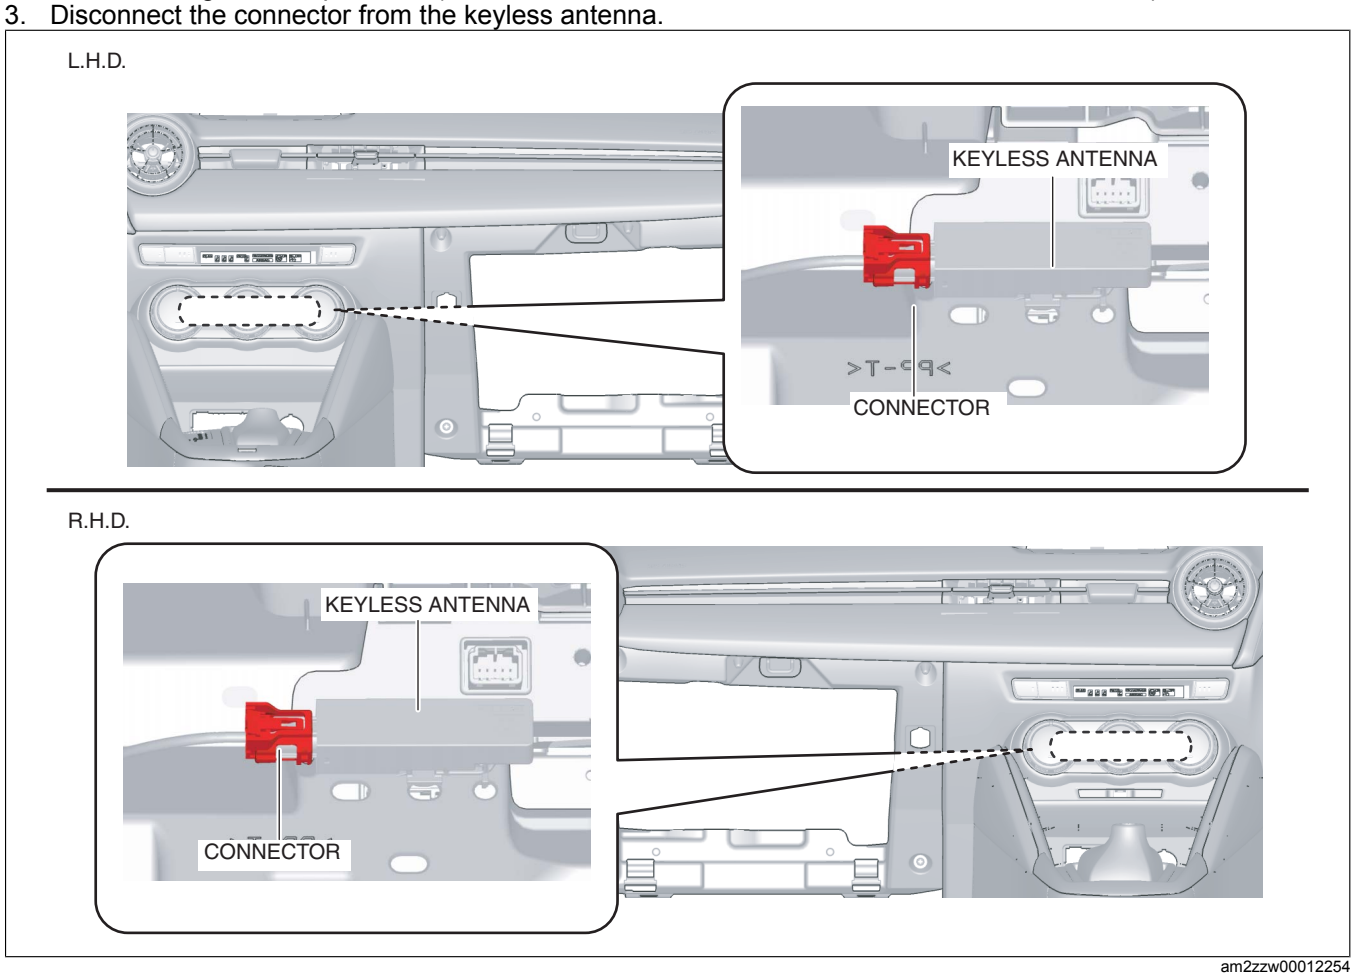


am2zzw00012254

4. While pressing the keyless antenna bracket tab in the direction of arrow (1) shown in the figure, press it in the direction of arrow (2) to detach the keyless antenna bracket tab from the instrument panel.

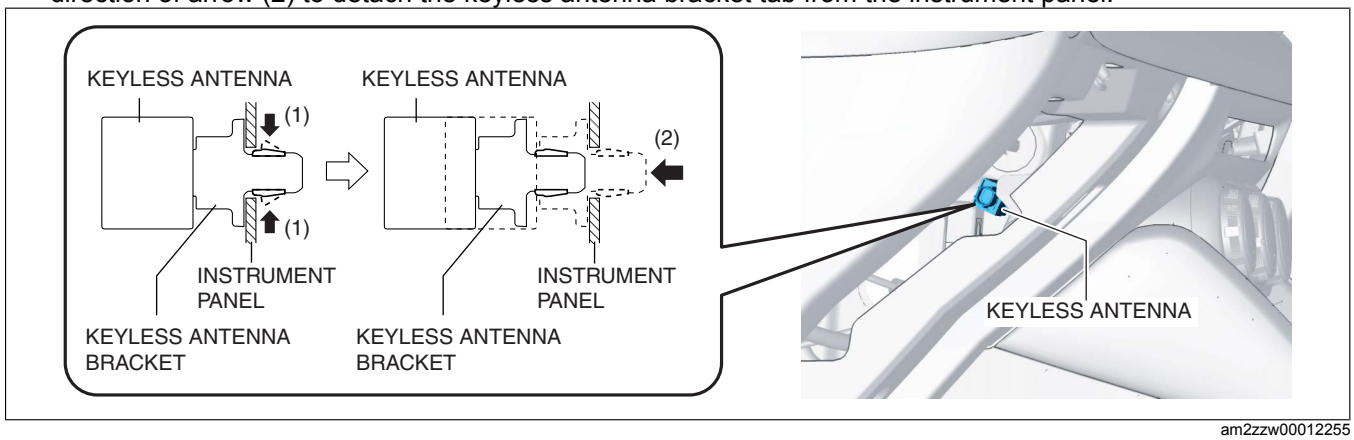

am2zzw00012255

5. Insert a tape-wrapped flathead screwdriver into the position shown in the figure.

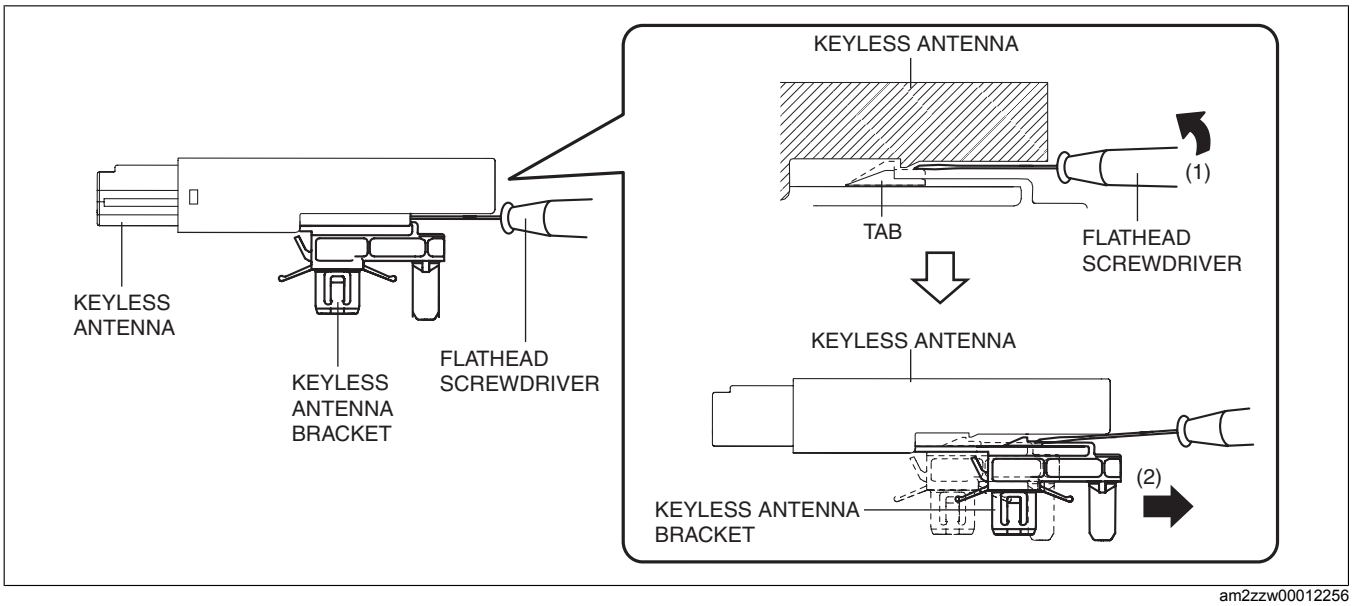


am2zzw00012256

6. Move the tape-wrapped flathead screwdriver in the direction of arrow (1) shown in the figure to press the keyless antenna bracket tab, and pull it in the direction of arrow (2) to detach the keyless antenna bracket from the keyless antenna.
7. Remove the keyless antenna bracket from the keyless antenna.
8. Install in the reverse order of removal.


Vehicle interior, rear

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
3. Disconnect the connector from the keyless antenna.
4. Remove the nuts from the keyless antenna bracket.

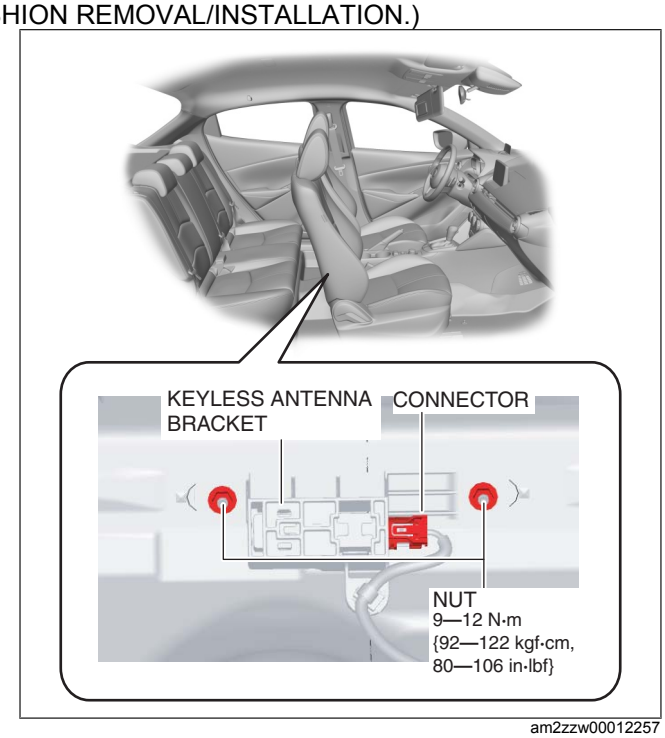


am2zzw00012257

5. While pressing the clip tab in the directions of arrows (1) shown in the figure, press it in the direction of arrow (2) to detach the clip tab from the keyless antenna bracket.
6. Remove the clip from the keyless antenna bracket.

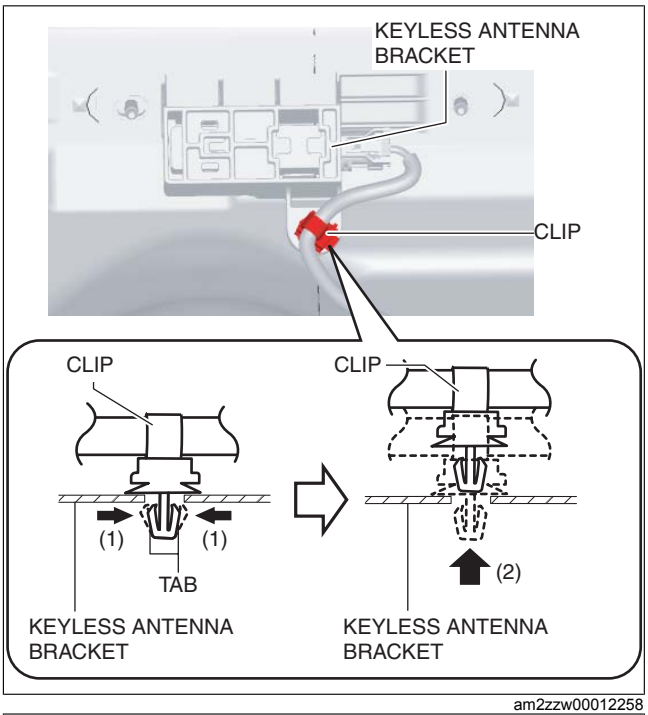

am2zzw00012258


7. While pressing the keyless antenna bracket tab in the directions of arrows (1) shown in the figure, pull the keyless antenna in the direction of arrow (2) to detach the keyless antenna bracket tab from the keyless antenna.
8. Remove the keyless antenna from the keyless antenna bracket.
9. Install in the reverse order of removal.

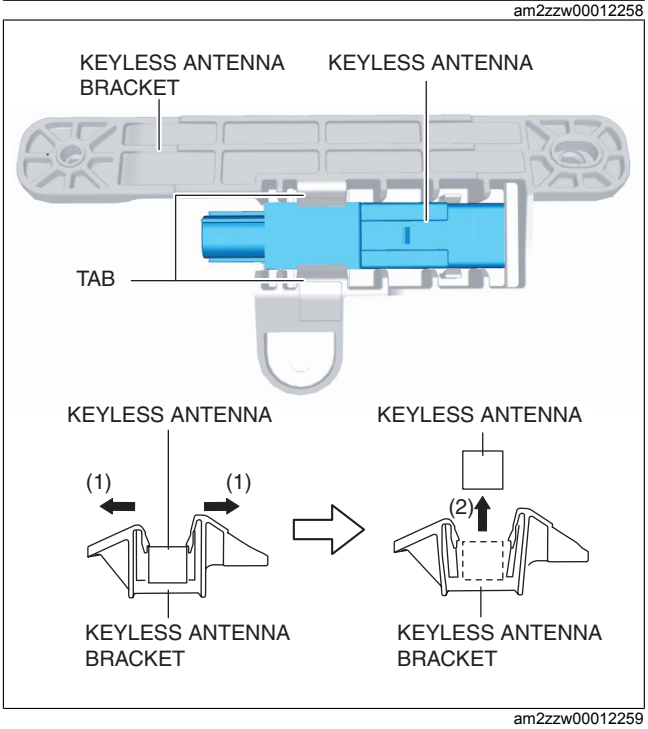

am2zzw00012259

Vehicle exterior, rear

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the trunk floor cover. (See TRUNK FLOOR COVER REMOVAL/INSTALLATION.)
3. Disconnect the connector from the keyless antenna.

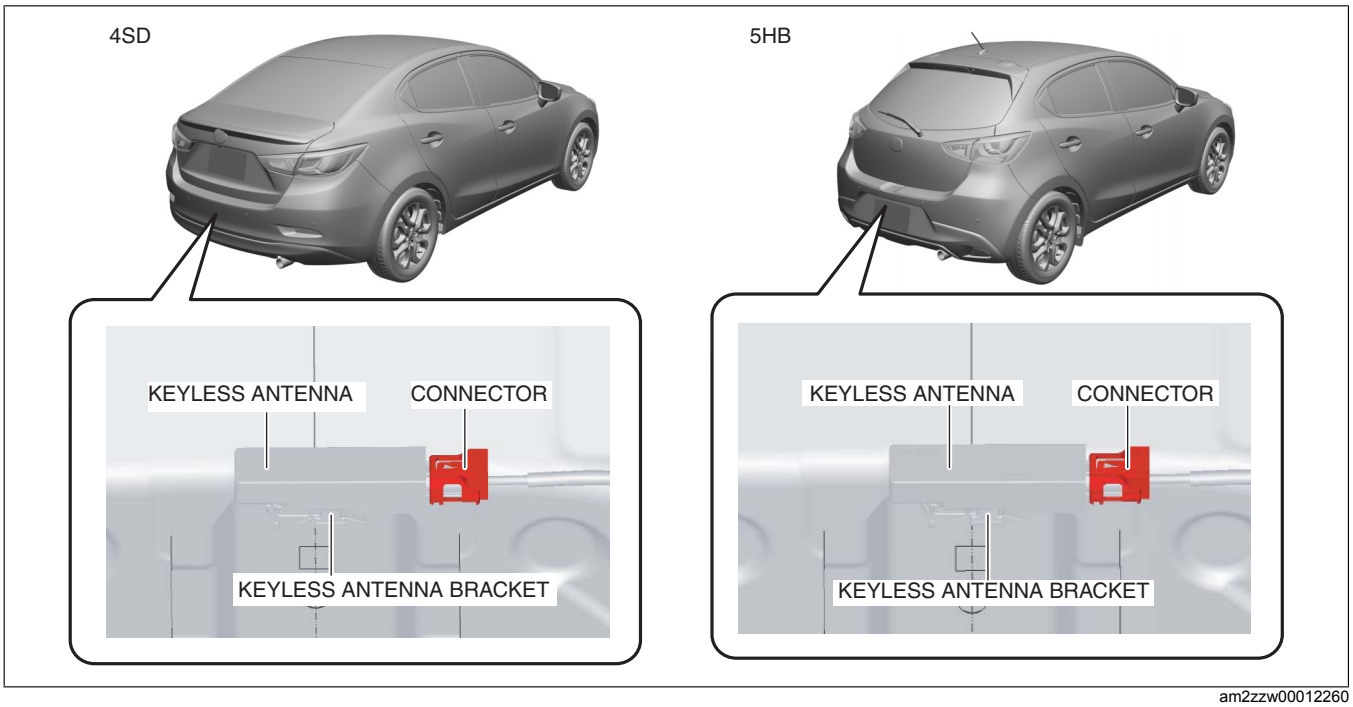


am2zzw00012260

Caution


- **Disconnect the connector while holding the keyless antenna, otherwise the keyless antenna bracket could be damaged.**

4. While pressing the keyless antenna bracket tab in the direction of arrow (1) shown in the figure, press it in the direction of arrow (2) to detach the keyless antenna bracket tab from the body.
5. Remove the keyless antenna from the body.

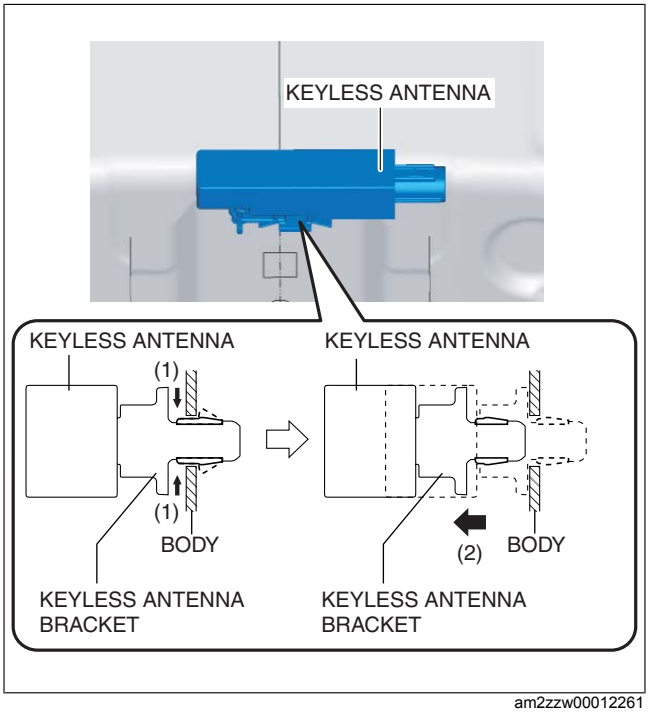

am2zzw00012261

6. Insert a tape-wrapped flathead screwdriver into the position shown in the figure.

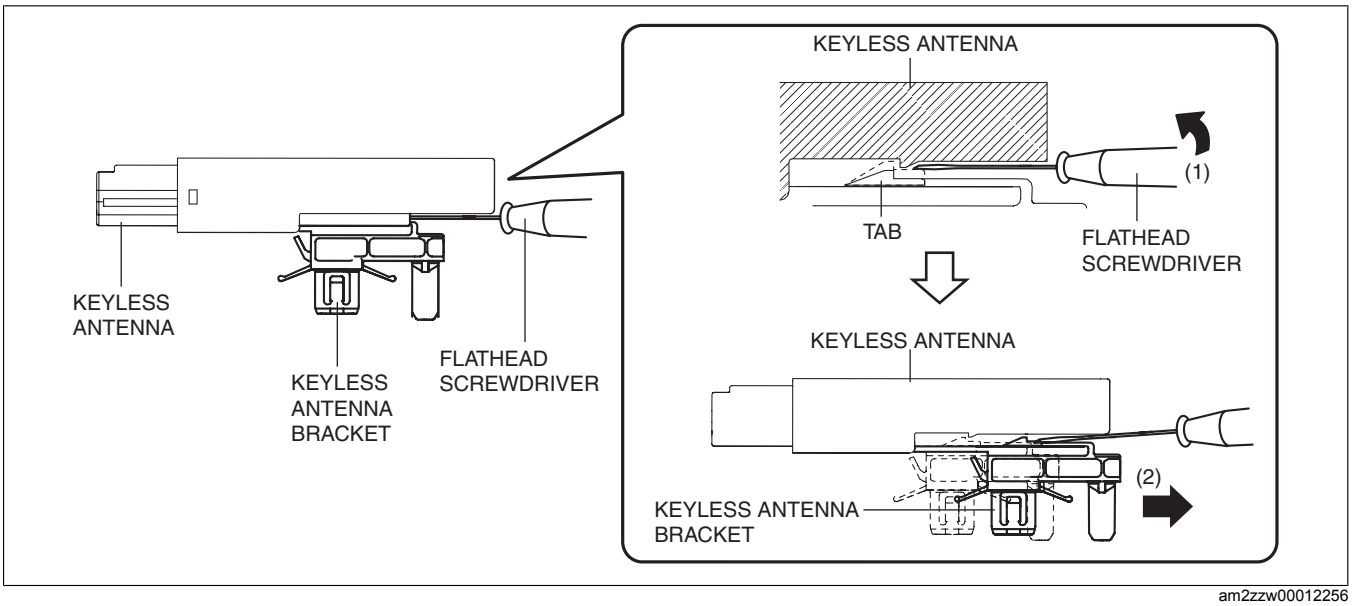


am2zzw00012256

7. Move the tape-wrapped flathead screwdriver in the direction of arrow (1) shown in the figure to press the keyless antenna bracket tab, and pull it in the direction of arrow (2) to detach the keyless antenna bracket from the keyless antenna.
8. Remove the keyless antenna bracket from the keyless antenna.
9. Install in the reverse order of removal.

Vehicle exterior, driver's side/passenger's side

Note
- The keyless antenna (vehicle exterior, driver's side/passenger's side) cannot be removed as a single unit because it is built into the front outer handle. To replace the keyless antenna (vehicle exterior, driver's side/passenger's side), replace the front outer handle. (See FRONT OUTER HANDLE REMOVAL/INSTALLATION.)

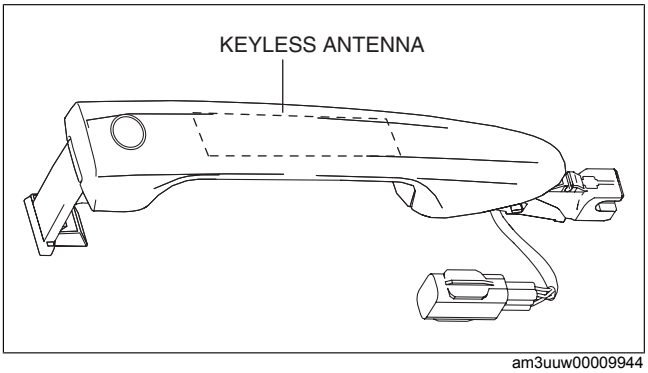

am3uuw00009944


With Keyless Entry System
Vehicle interior, center
1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Center console tray (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)
   (2) Shift bezel (See SHIFT BEZEL REMOVAL/INSTALLATION.)
   (3) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
   (4) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F65M-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [F66M-R].)
   (5) Selector lever knob (ATX) (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)
   (6) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
   (7) Console side panel (See CONSOLE SIDE PANEL REMOVAL/INSTALLATION.)
   (8) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
   (9) CD player (with CD player) (See CD PLAYER REMOVAL.) (See CD PLAYER INSTALLATION.)
   (10) DVD/CD player (with DVD/CD player) (See DVD/CD PLAYER REMOVAL.) (See DVD/CD PLAYER INSTALLATION.)

(11)Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
(12)Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
(13)Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)

3. Disconnect the connector from the keyless antenna.


Caution

- **Disconnect the connector while holding the keyless antenna, otherwise the keyless antenna bracket could be damaged.**

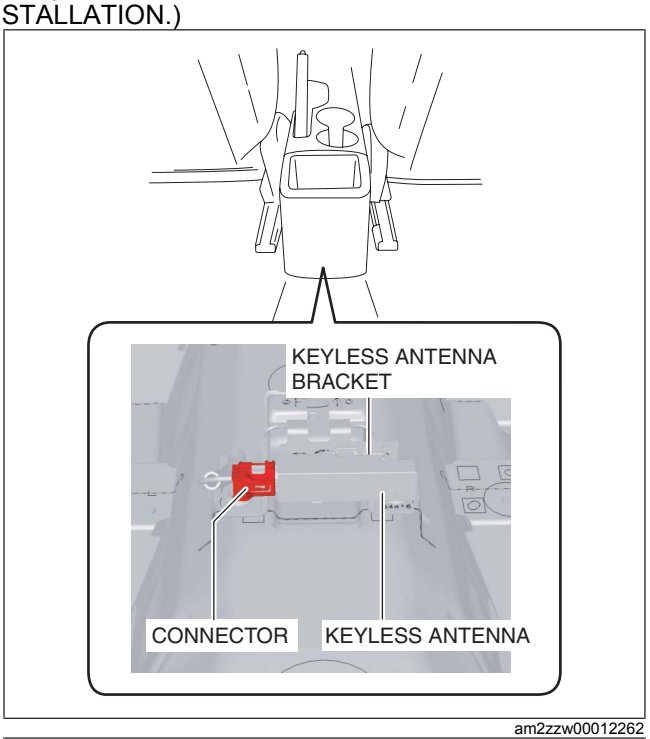


am2zzw00012262

4. While pressing the keyless antenna bracket tab in the direction of arrow (1) shown in the figure, press it in the direction of arrow (2) to detach the keyless antenna bracket tab from the bracket.
5. Remove the keyless antenna from the bracket.

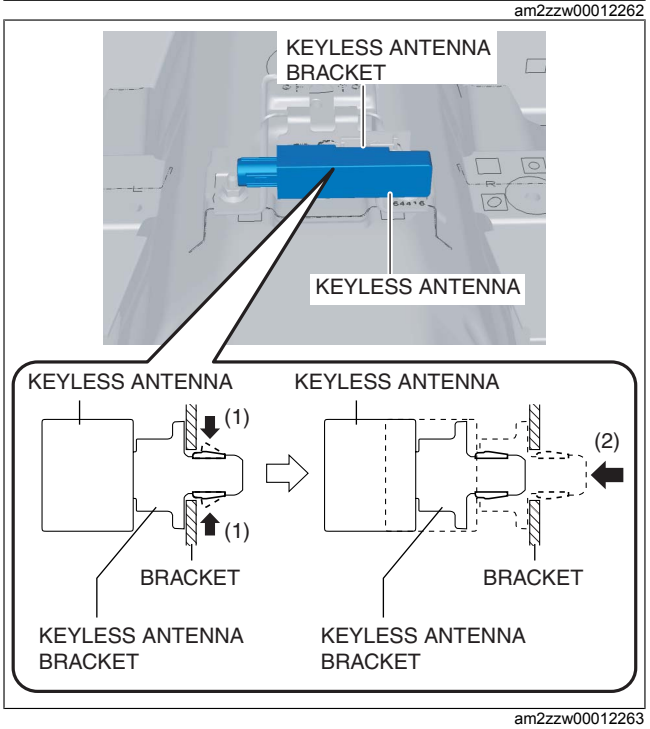

am2zzw00012263

6. Insert a tape-wrapped flathead screwdriver into the position shown in the figure.

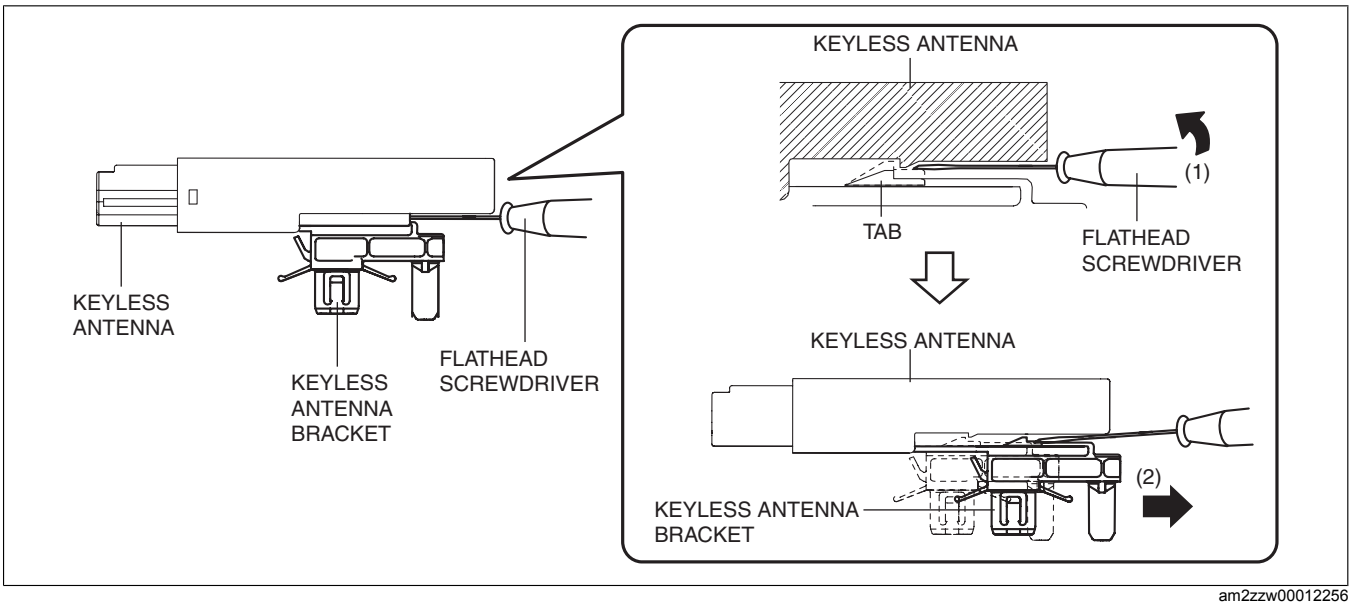

am2zzw00012256

7. Move the tape-wrapped flathead screwdriver in the direction of arrow (1) shown in the figure to press the keyless antenna bracket tab, and pull it in the direction of arrow (2) to detach the keyless antenna bracket from the keyless antenna.
8. Remove the keyless antenna bracket from the keyless antenna.
9. Install in the reverse order of removal.