REQUEST SWITCH INSPECTION

id091400515400


Driver's Door/Passenger's Door

1. Perform the front door glass preparation. (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
3. Remove the following parts:
   (1) Power window main switch (Driver's side)/ Power window subswitch (passenger's side) (See POWER WINDOW MAIN SWITCH REMOVAL/INSTALLATION.) (See POWER WINDOW SUBSWITCH REMOVAL/INSTALLATION.)
   (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
   (3) Front inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
   (4) Front door glass (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
   (5) Front door module panel (See FRONT DOOR MODULE PANEL REMOVAL/INSTALLATION.)
   (6) Front door key cylinder (driver's side) (See FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION.)
   (7) Front outer handle (See FRONT OUTER HANDLE REMOVAL/INSTALLATION.)
4. Verify that the continuity is as indicated in the table.

○—○ : Continuity

Request switch (request switch condition)	Terminal	
	A	D
On (pressed)	○	○
Off (not pressed)		

am3uuw00011802

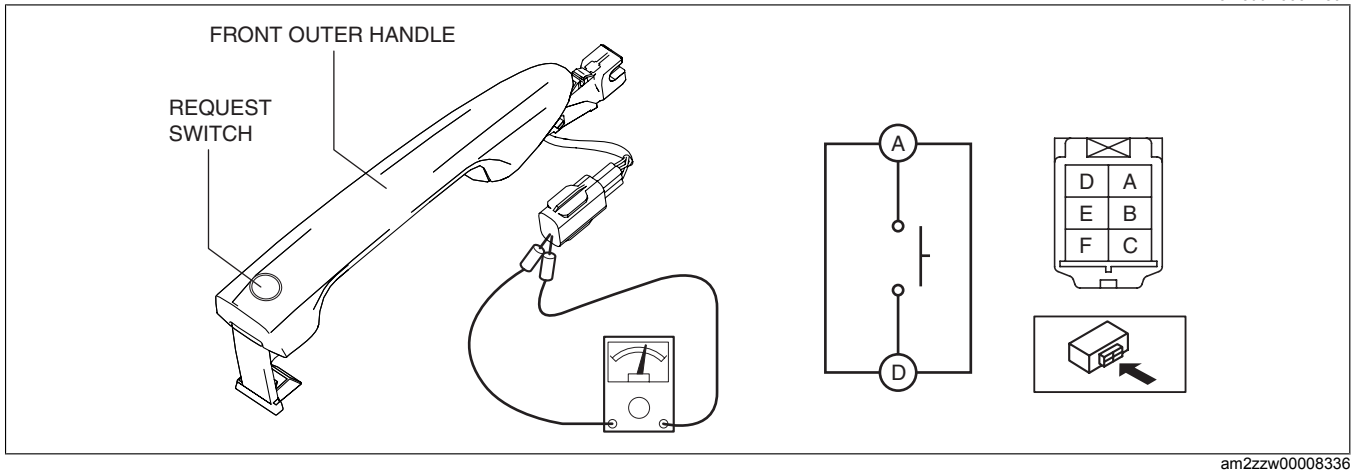

am2zzw00008336

- If not as indicated in the table, replace the front outer handle. (See FRONT OUTER HANDLE REMOVAL/INSTALLATION.)