## LIFTGATE OPENER SWITCH INSPECTION

id091400516200


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Liftgate lower trim. (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
3. Liftgate opener switch. (See LIFTGATE OPENER SWITCH REMOVAL/INSTALLATION.)
4. Verify the continuity of liftgate opener switch terminals A and B.

: Continuity

| Switch position | Terminal | |
|---|---|---|
| | A | B |
| On (push) | ○ | ○ |
| Off (release) | | |

am2zzw00007865

- If not as indicated in the table, replace the liftgate opener switch. (See LIFTGATE OPENER SWITCH REMOVAL/INSTALLATION.)

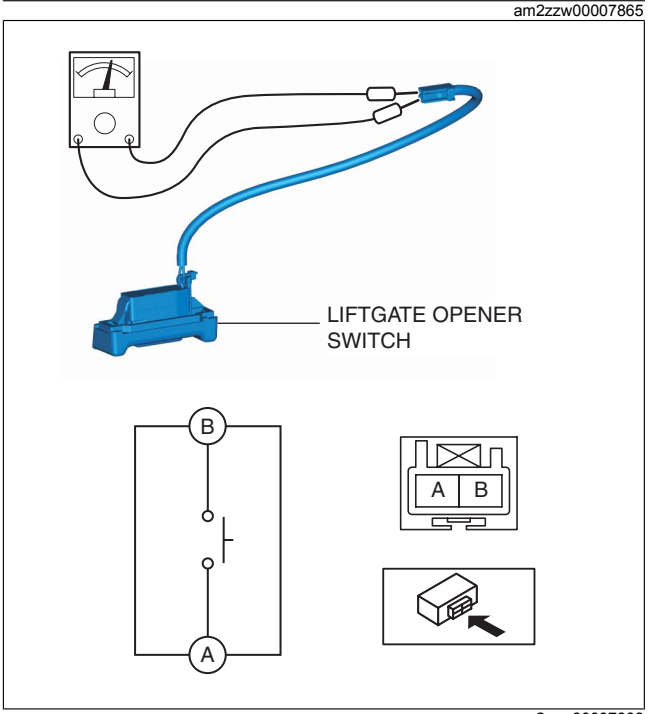


am2zzw00007866