TRUNK LID OPENER SWITCH INSPECTION

id091400516400

Vehicle Interior


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the trunk lid opener switch (See TRUNK LID OPENER SWITCH REMOVAL/INSTALLATION.)
3. Verify the continuity of trunk lid opener switch terminals A and D.

: Continuity

Switch position	Terminal	
	A	D
On (push)	○—○	
Off (release)		

am3uuw00011805


- If not as indicated in the table, replace the trunk lid opener switch. (See TRUNK LID OPENER SWITCH REMOVAL/INSTALLATION.)

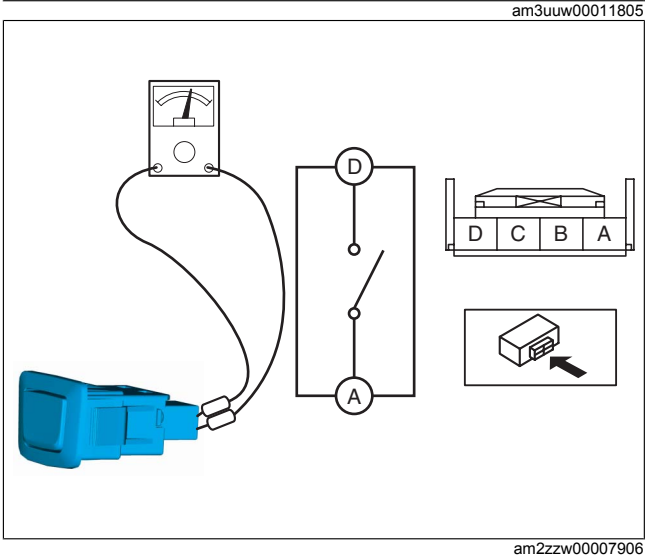

am2zzw00007906


Vehicle Exterior

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the following parts:
   (1) Trunk lid trim (See TRUNK LID TRIM REMOVAL/INSTALLATION.)
   (2) Trunk lid opener switch (See TRUNK LID OPENER SWITCH REMOVAL/INSTALLATION.)
3. Verify the continuity of trunk lid opener switch terminals A and C.

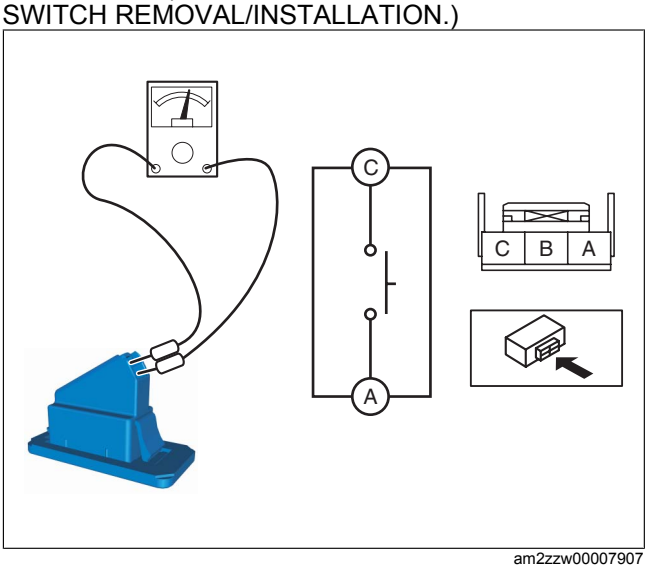

am2zzw00007907

- If not as indicated in the table, replace the trunk lid opener switch. (See TRUNK LID OPENER SWITCH REMOVAL/INSTALLATION.)

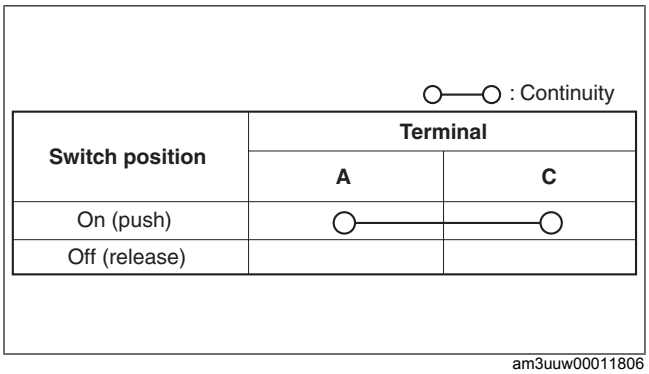

Switch position	Terminal	
	A	C
On (push)	○——○	
Off (release)		

am3uuw00011806