
LIFTGATE LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION


id091400516900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the Liftgate lower trim. (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
3. Disconnect the connector.

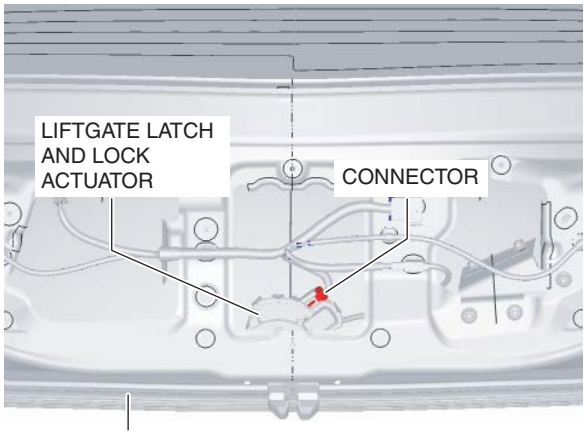


am2zzw00007871

4. Remove the bolts.

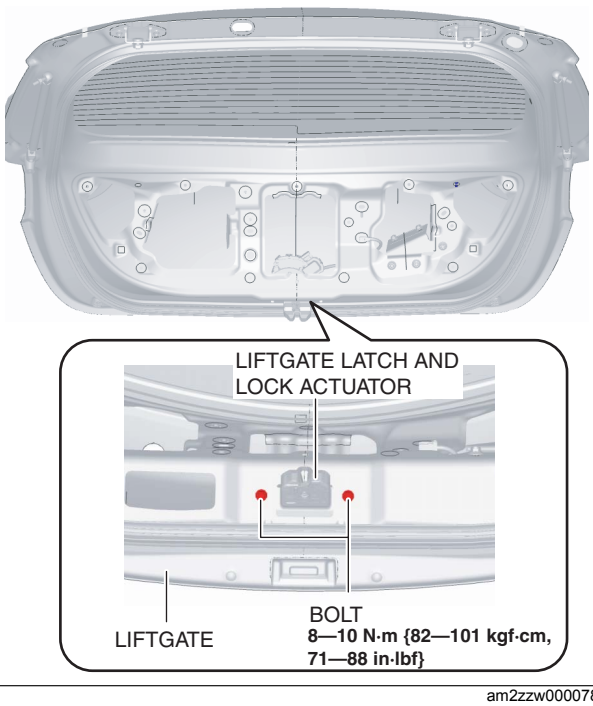

am2zzw00007872

5. Remove the liftgate latch and lock actuator from the liftgate.
6. Install in the reverse order of removal.

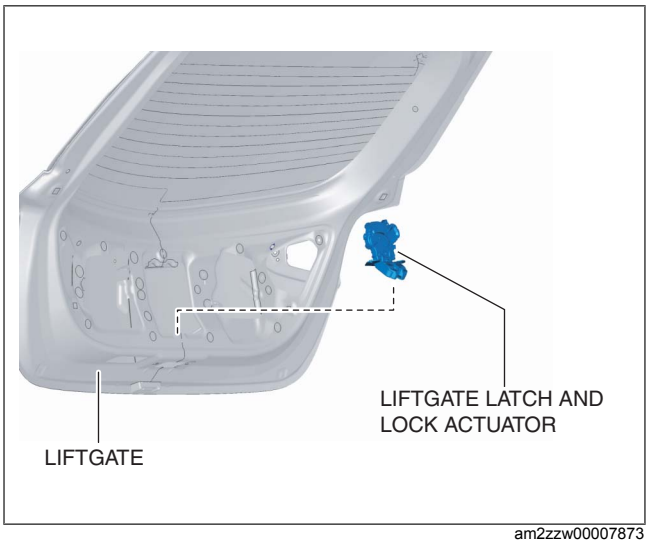

am2zzw00007873