
INTRUDER SENSOR INSPECTION

id091400517300

1. Remove the front map light. (See FRONT MAP LIGHT REMOVAL/INSTALLATION.)
2. Remove the intruder sensor with the connector connected. (See INTRUDER SENSOR REMOVAL/INSTALLATION.)
3. Verify that the voltages of each of the terminals are as indicated in the terminal voltage table (reference).
   - If the voltage is not as specified in the terminal voltage table (reference), inspect the parts under Inspection item(s) and related wiring harnesses.
     — If the system does not operate normally even though the parts under Inspection Item(s) and related wiring harnesses do not have any malfunction, replace the intruder sensor. (See INTRUDER SENSOR REMOVAL/INSTALLATION.)

Terminal Voltage Table (Reference)

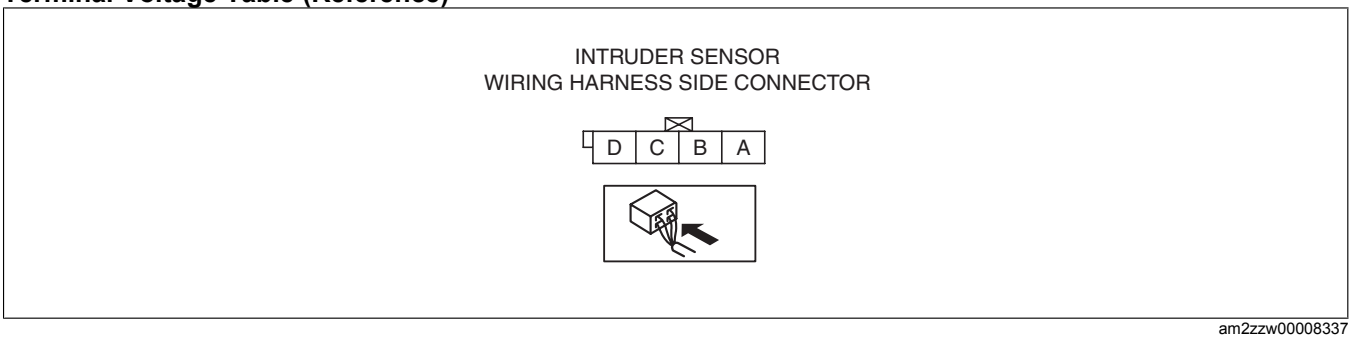


am2zzw00008337

Terminal	Signal name	Connected to	Measurement condition	Voltage (V)	Inspection item (s)
B	Ground	BCM	Under any condition	1.0 or less	BCM
C	DATA	BCM	Because this terminal is for communication, determination using terminal voltage inspection is not possible.		
D	Power supply	BCM	Under any condition	B+	BCM

Continuity Inspection Of Short Wiring Harness Connector

1. Verify that the continuity is as indicated in the table.

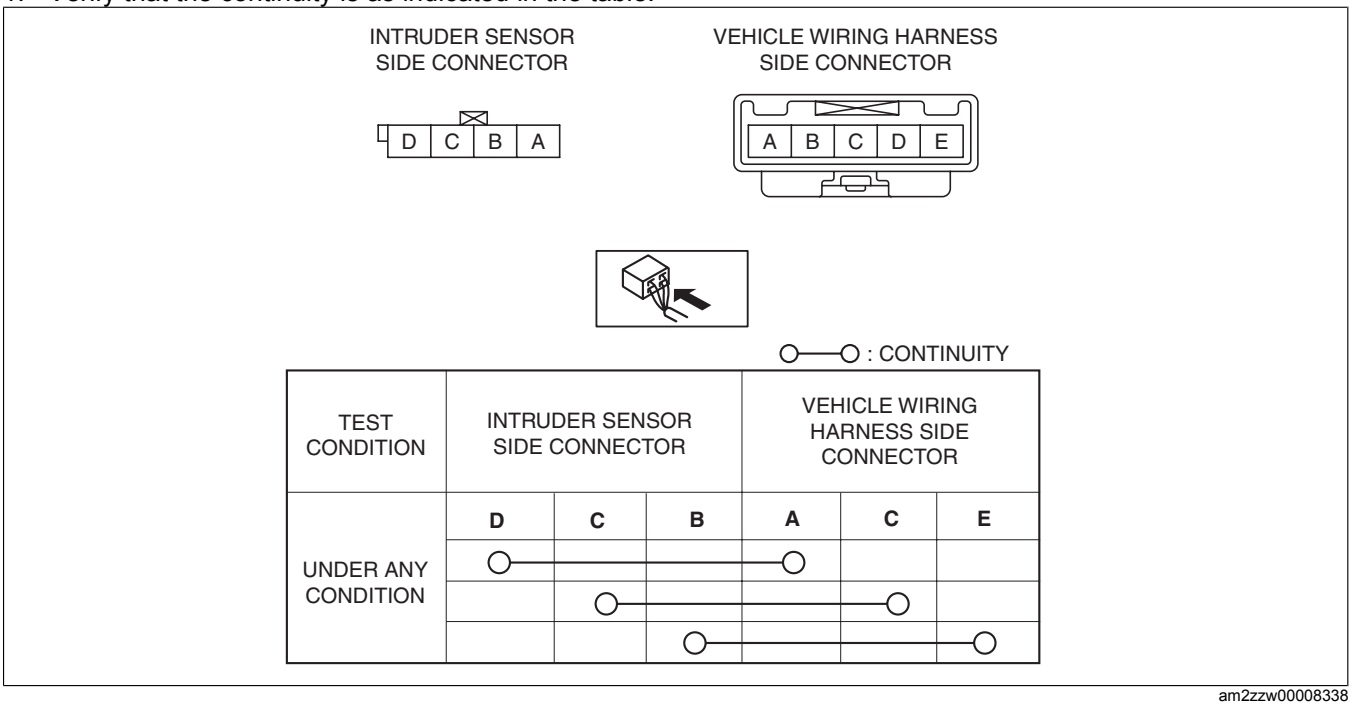

TEST CONDITION	INTRUDER SENSOR SIDE CONNECTOR			VEHICLE WIRING HARNESS SIDE CONNECTOR		
	D	C	B	A	C	E
UNDER ANY CONDITION	○——			——○		
		○——			——○	
			○——			——○

am2zzw00008338

- If not as indicated in the table, replace the short wiring harness.