DOOR LOCK SWITCH INSPECTION

id091400518700


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the door lock switch. (See POWER WINDOW MAIN SWITCH REMOVAL/INSTALLATION.)
3. Verify that the continuity is as indicated in the table.

: Continuity : Resistance

Position	Terminal	
	2A	1E
Lock	R	
Unlock		

R: **950—1,050 ohms**

am3zzw00015980

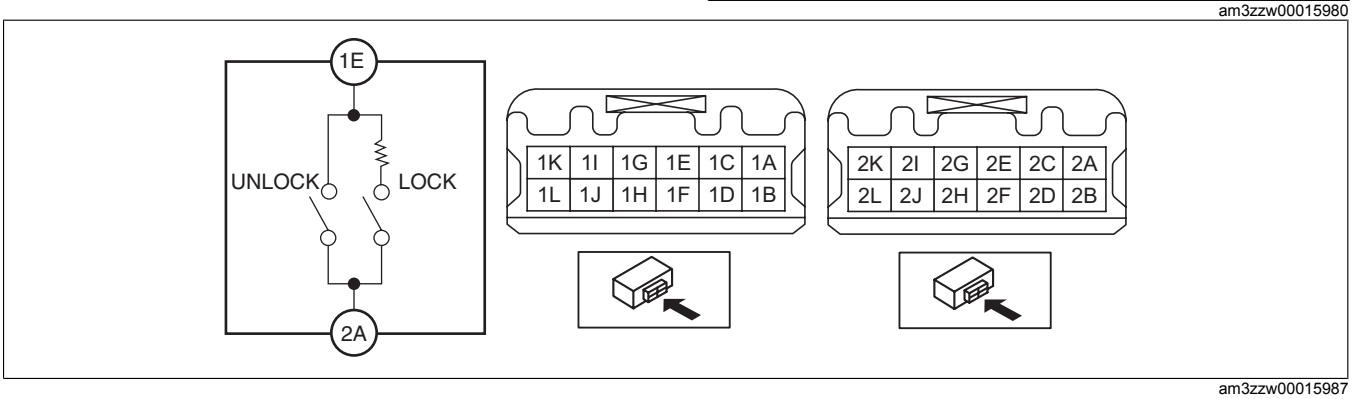

am3zzw00015987

- If the continuity is not as indicated in the table, replace the door lock switch.