
ROOF MOLDING REMOVAL


id091600447800

1. Insert the remover tool in the position shown in the figure.

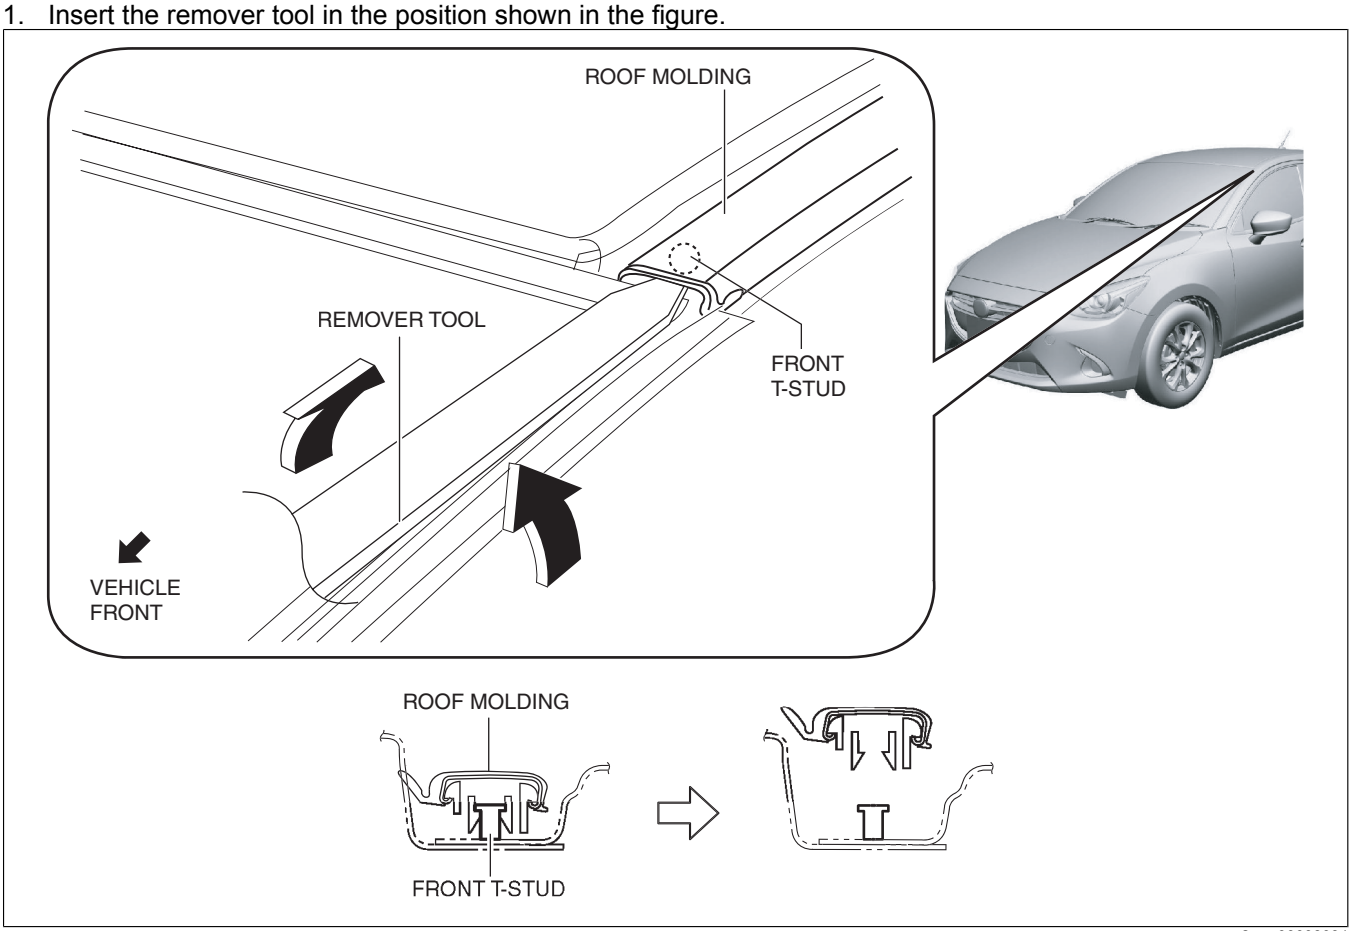


am2zzw00008931

2. Move the remover tool in the direction of the arrows shown in the figure and detach the roof molding from the front T-stud.
3. Rotate the roof molding in the direction of arrows shown in the figure while pulling it up and remove it starting from the clips at the front of the vehicle.

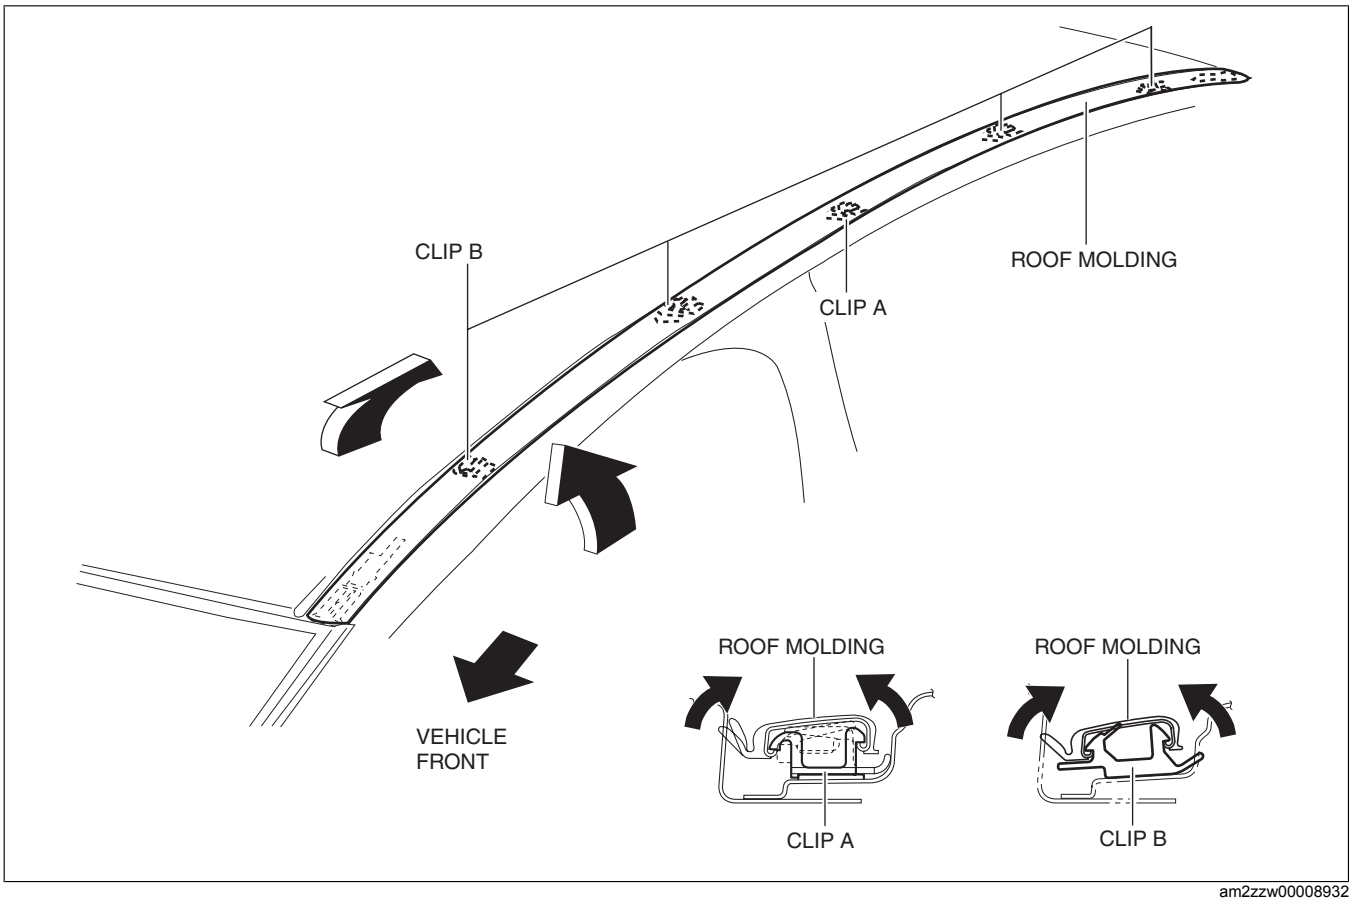

am2zzw00008932

4. Insert the remover tool in the position shown in the figure.

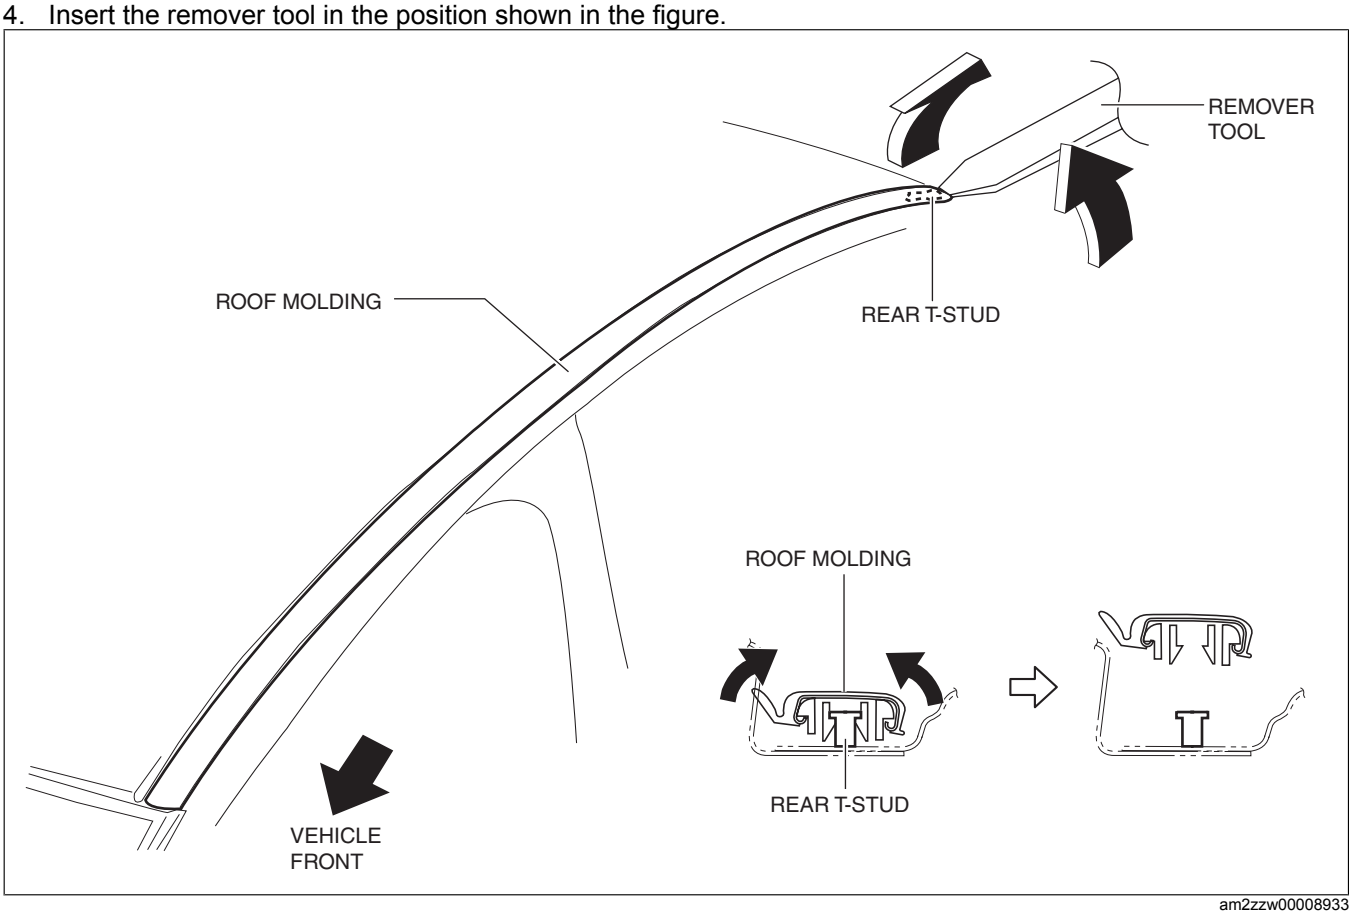

am2zzw00008933

5. Move the remover tool in the direction of the arrows shown in the figure and detach the roof molding from the rear T-stud.
6. Remove the roof molding.