
MUDGUARD REMOVAL/INSTALLATION

id091600467600


Front Mudguard

1. Remove the screws and fasteners.

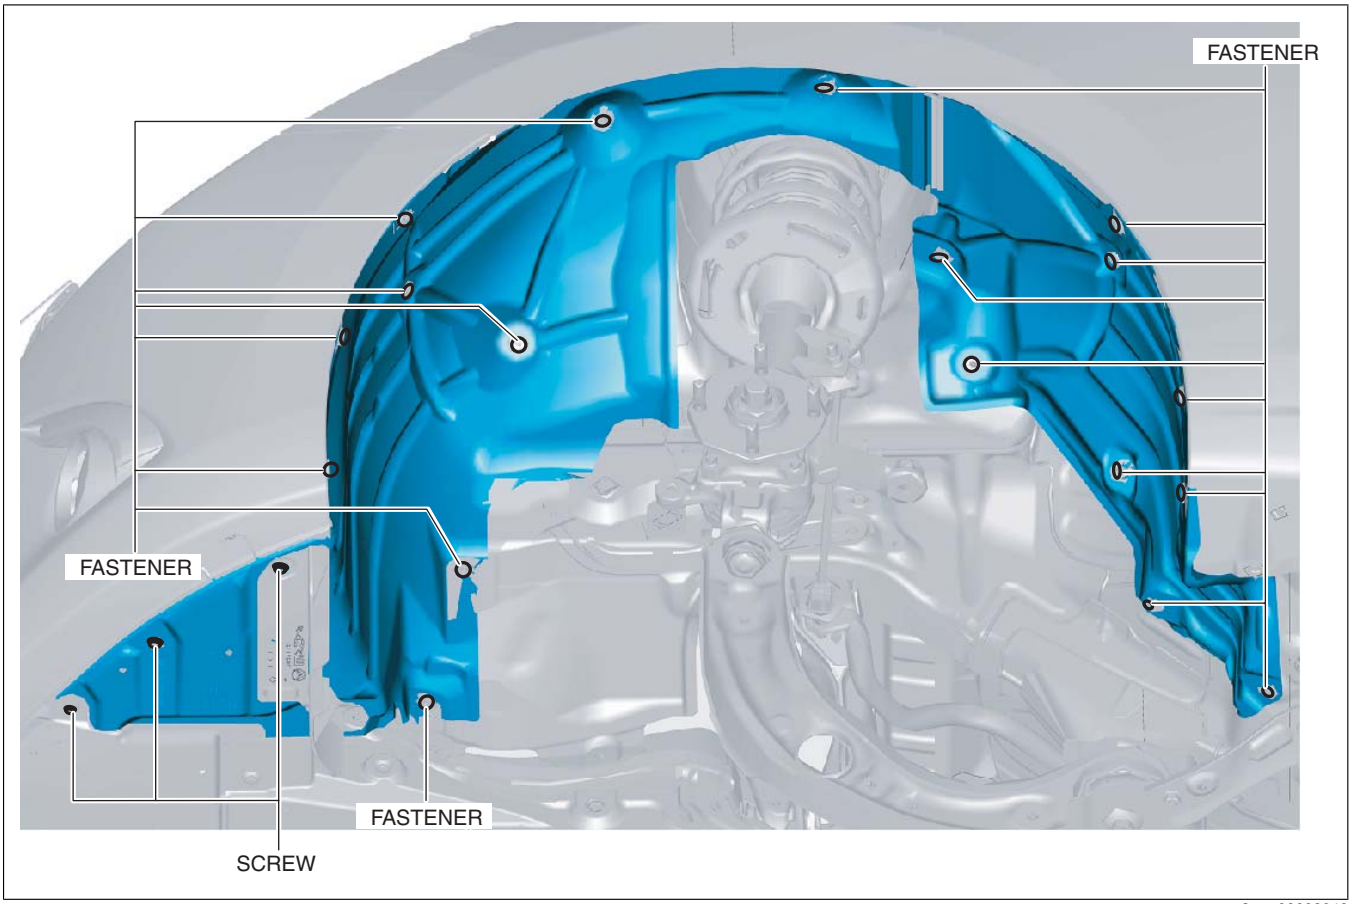

am2zzw00008943

2. Pull the front mudguard in the direction of the arrow shown in the figure and remove it.

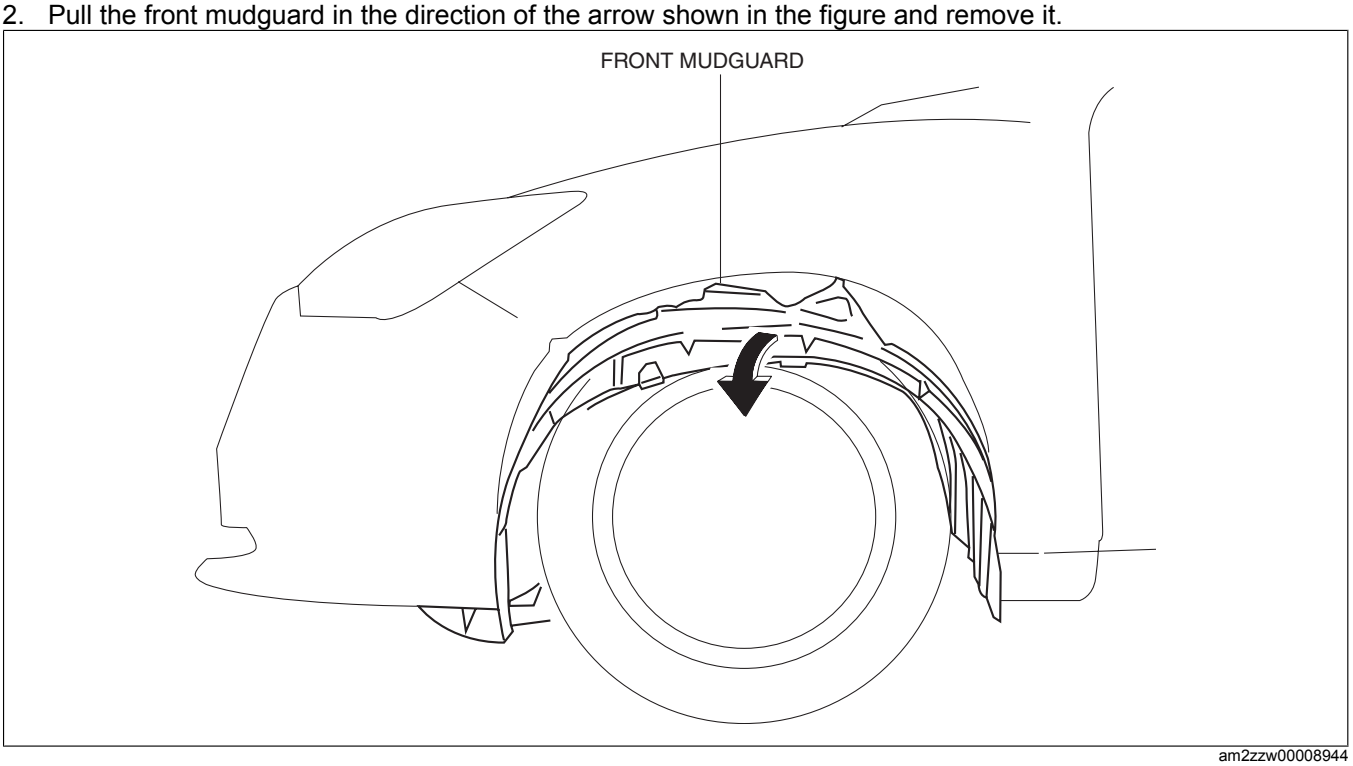


am2zzw00008944

3. Install in the reverse order of removal.

Rear Mudguard


LH

1. Remove the rear splash shield (LH). (See SPLASH SHIELD REMOVAL/INSTALLATION.)
2. Remove the cap nuts and fasteners.

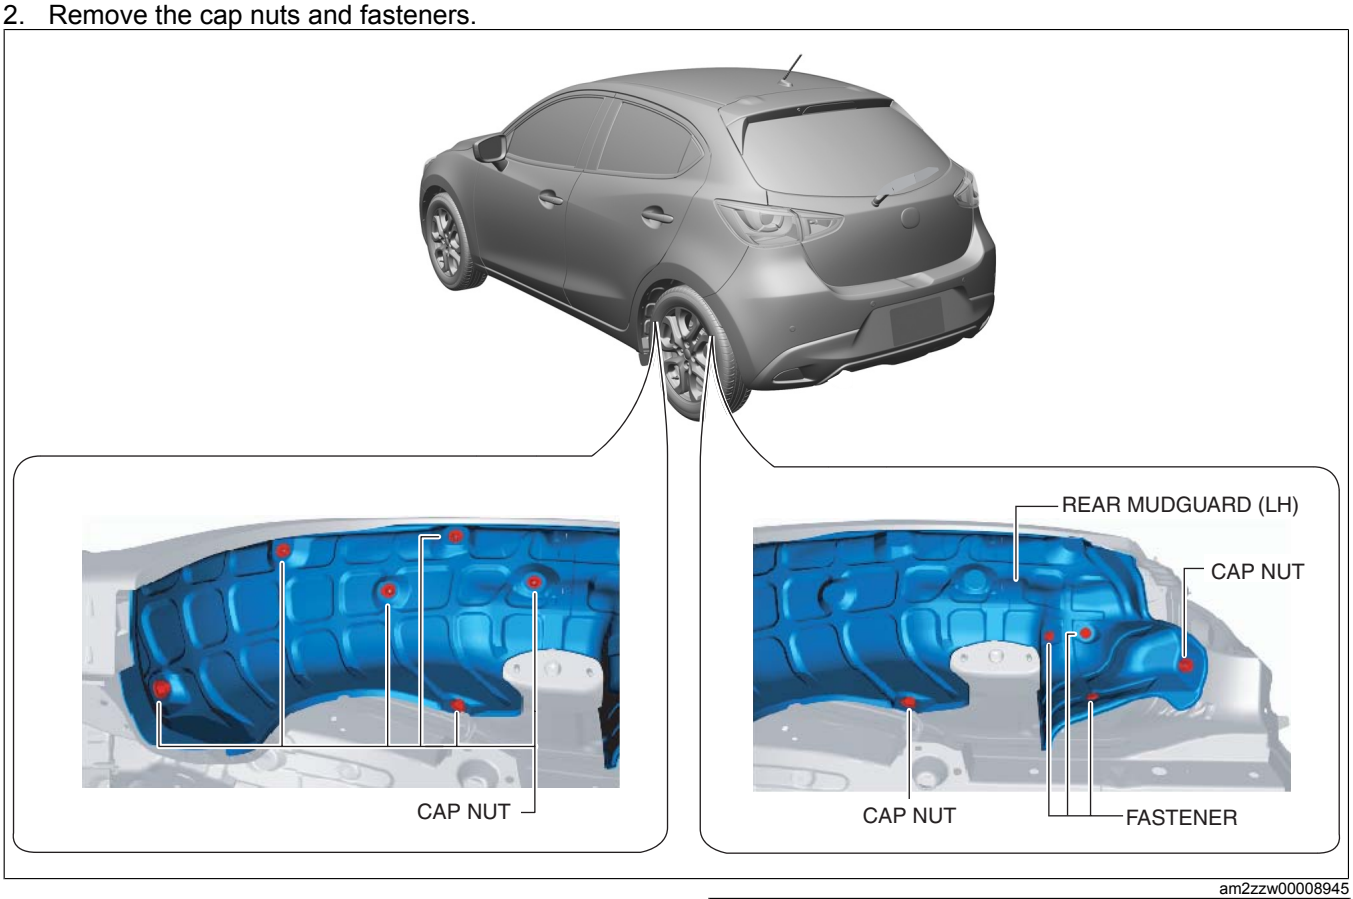

am2zzw00008945


3. Pull the rear mudguard in the direction of the arrow shown in the figure.
4. Install in the reverse order of removal.

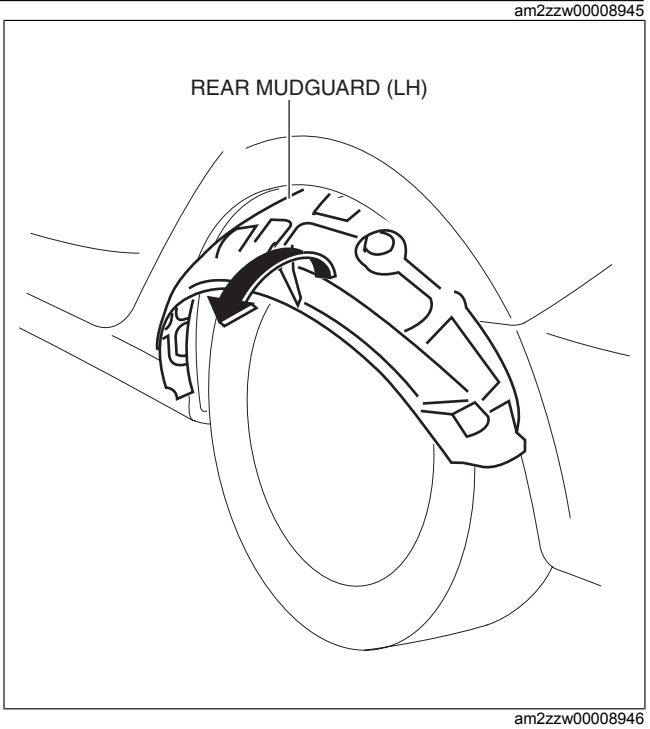

am2zzw00008946


RH

1. Remove the cap nuts.

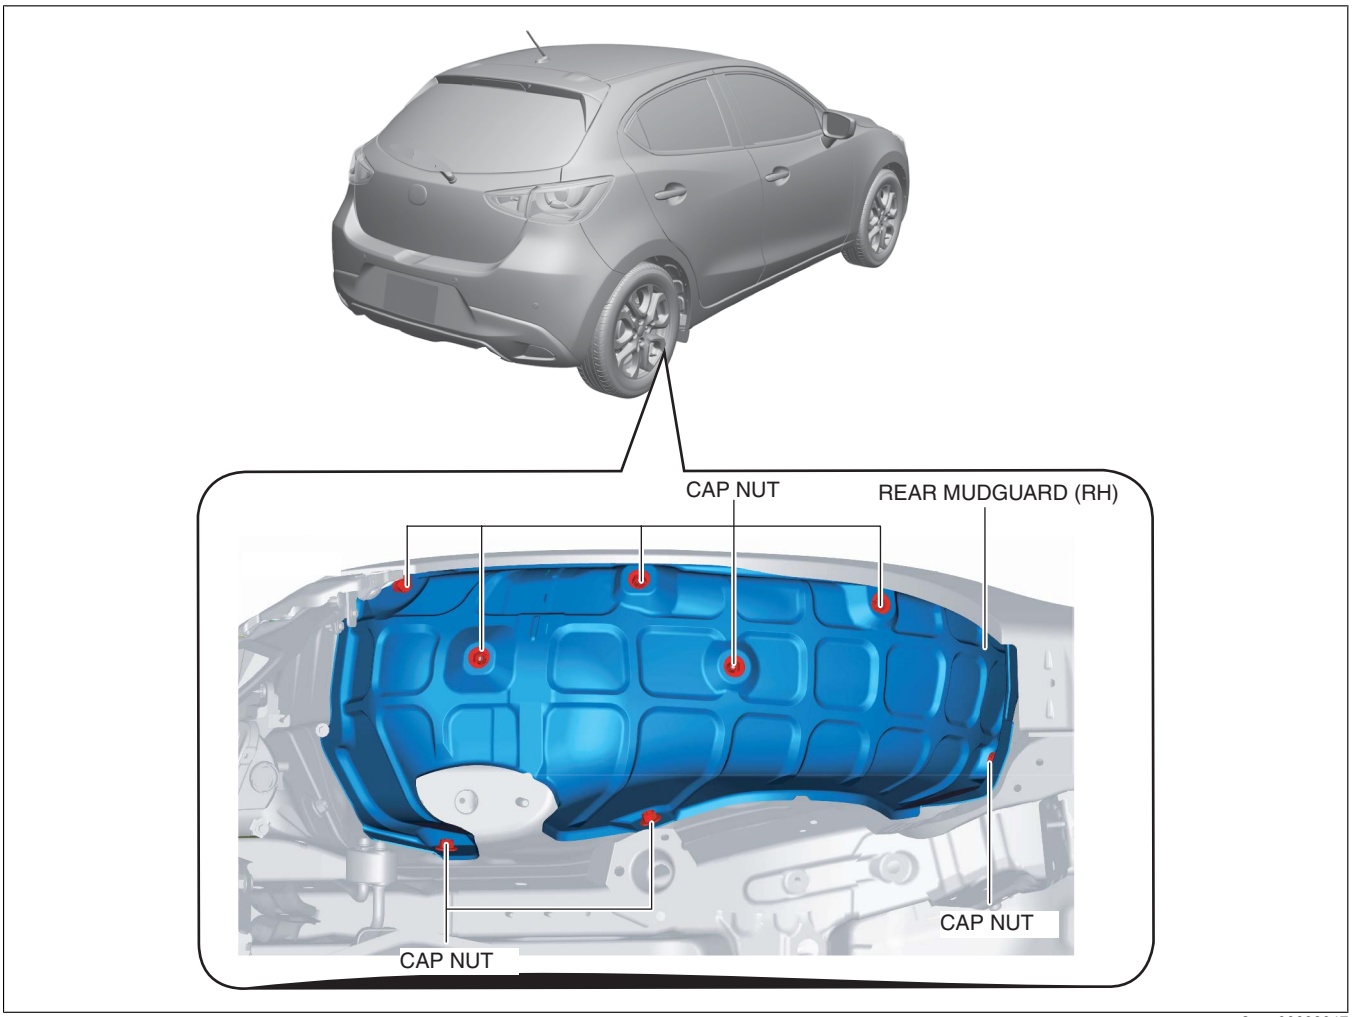

am2zzw00008947

2. Pull the rear mudguard in the direction of the arrow shown in the figure.
3. Install in the reverse order of removal.

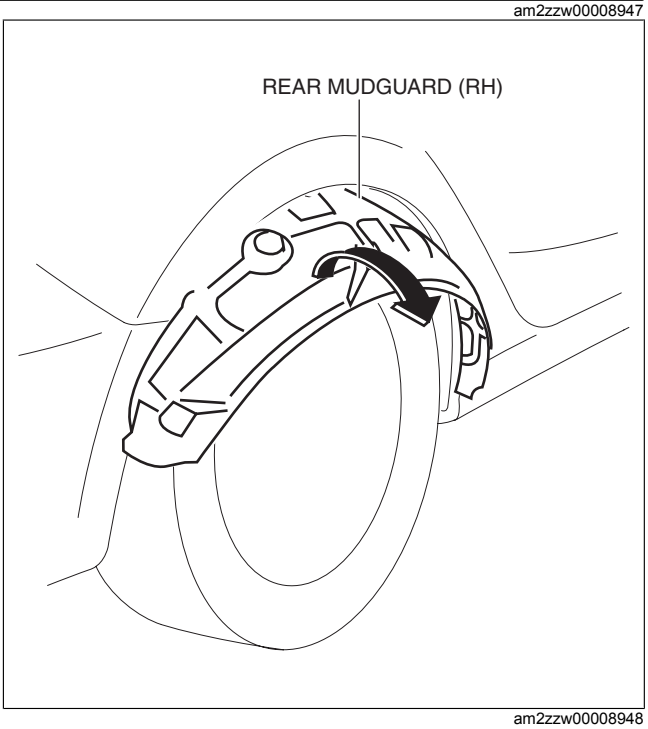

am2zzw00008948