ROOF CARRIER BRACKET REMOVAL/INSTALLATION

id091600801700

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) A-pillar trim (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
   (2) Sunvisor (See SUNVISOR REMOVAL/INSTALLATION.)
   (3) Front map light (See FRONT MAP LIGHT REMOVAL/INSTALLATION.)
   (4) Assist handle (See ASSIST HANDLE REMOVAL/INSTALLATION.)
   (5) Coat hook (See HEADLINER REMOVAL/INSTALLATION.)
   (6) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (7) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
   (8) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
   (9) Adjust anchor cover (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   (10) Upper anchor installation bolt on the seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
   (11) B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
   (12) Rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
   (13) Lower anchor installation bolt on the rear center seat belt (See REAR CENTER SEAT BELT REMOVAL/INSTALLATION.)
   (14) Rear seat back (See REAR SEAT BACK REMOVAL/INSTALLATION.)
   (15) Rear package tray (See REAR PACKAGE TRAY REMOVAL/INSTALLATION.)
   (16) Trunk covering (See TRUNK COVERING REMOVAL/INSTALLATION.)
   (17) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
   (18) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
   (19) C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
   (20) Headliner (See HEADLINER REMOVAL/INSTALLATION.)
3. Disconnect the roof wiring harness connector and remove the roof wiring harness connector clip from the body.
4. Disconnect the rear washer hose C. (See REAR WASHER HOSE REMOVAL/INSTALLATION.)
5. Remove the nuts.




am2zzw00008966

6. Remove the roof carrier brackets.
7. Install in the reverse order of removal.

Roof Carrier Bracket Installation Note

1. Install the roof carrier brackets so that the arrow on it faces inward.

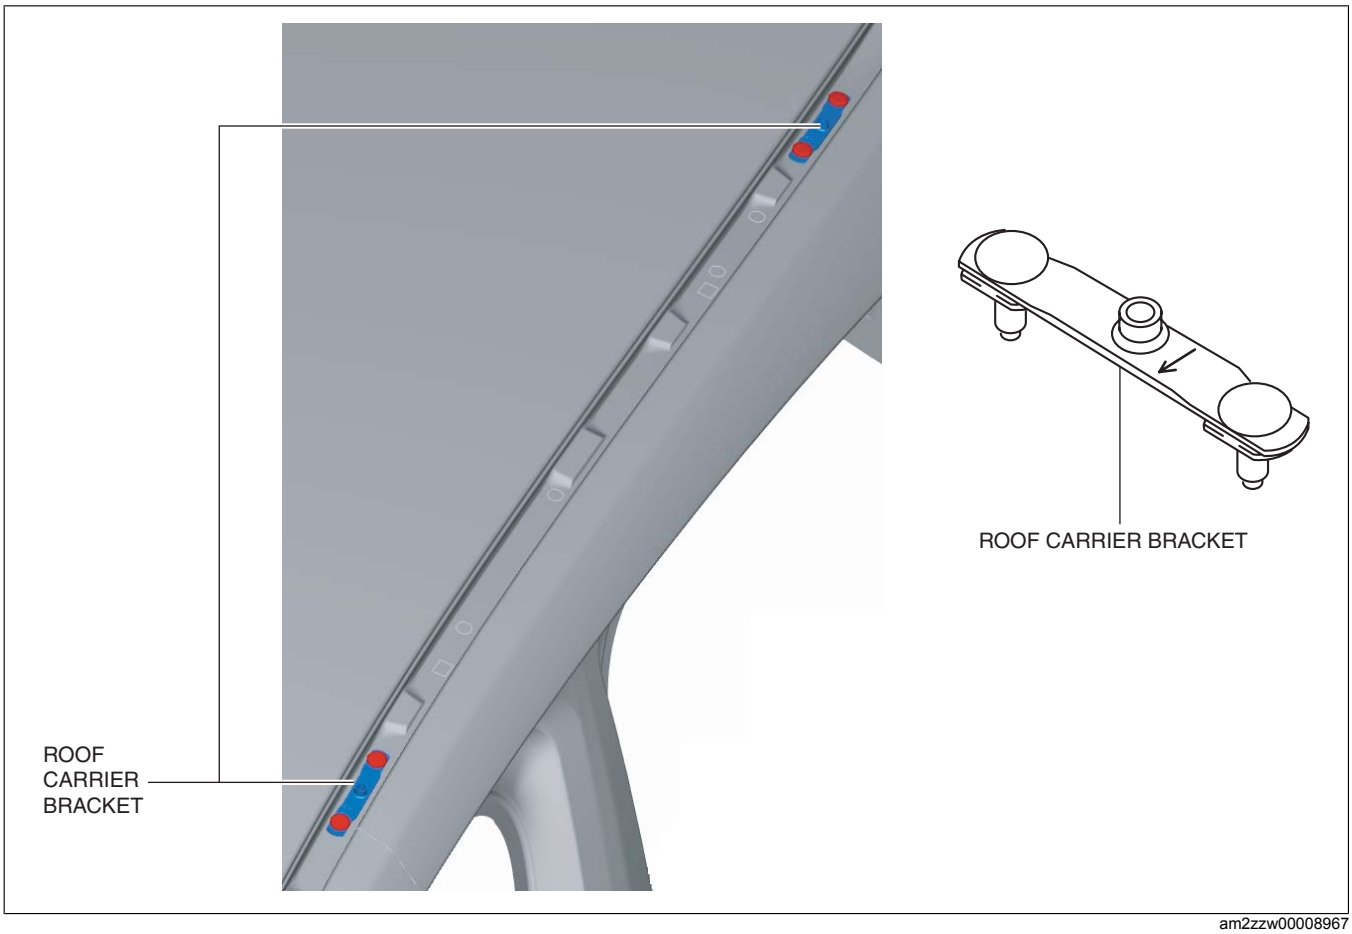

am2zzw00008967